




CANOPY INSTALLATION INSTRUCTIONS

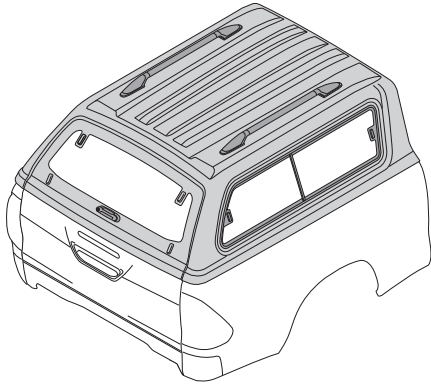


Caution for installation

Read this mounting manual carefully, before your start the installation.

1. Area where to install product should be clean.
2. During installation, person who installed should take off any ornaments.


Product name : CANOPY III
 Model name : TOYOTA CAB 2015 (640A)
 Inst. number : L04-0322

Component parts

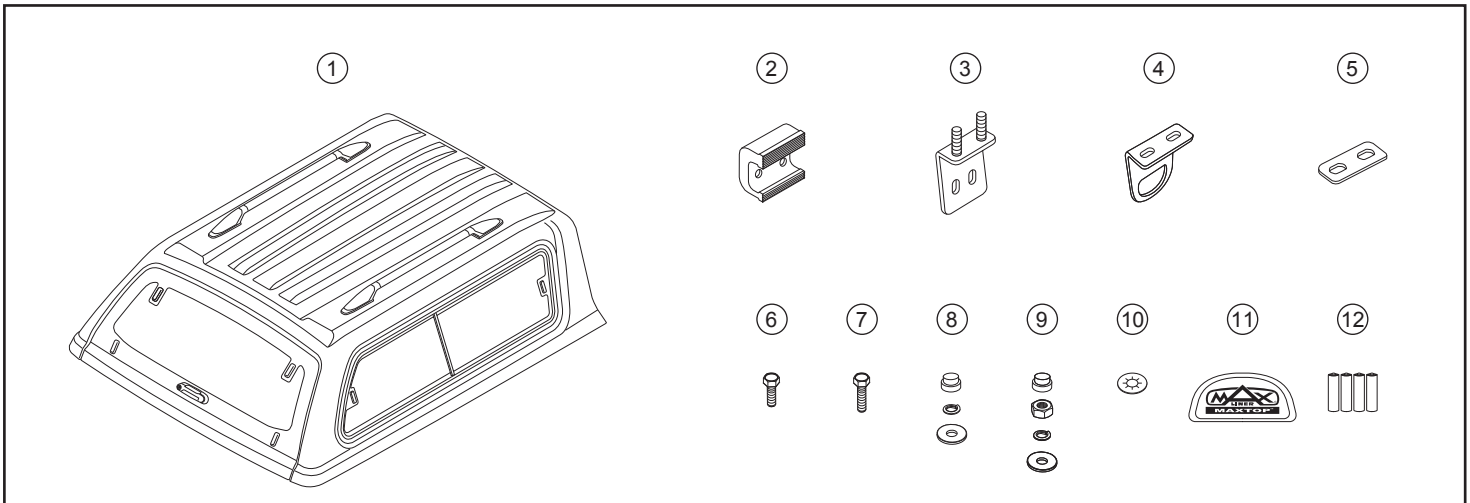

No.	Part name	Q'ty
1	Canopy shell set	1 Set
2.	Clamp lock FB	6 Pcs.
3.	Plate rail lock FB	6 Pcs.
4.	Plate rail lock FL	6 Pcs.
5.	Plate support	6 Pcs.
6.	Bolt M8x30	12 Pcs.
7.	Bolt M8x40	12 Pcs.
8.	Plastic cap nut, Spring washer M8, Plain washer M8	12 Sets
9.	Plastic cap nut, Hex nut M8, Spring washer M8, Plain washer M8	12 Sets
10.	Plastic washer	12 Pcs.
11.	Emblem	2 Pcs.
12.	Battery AAA	4 Pcs.









Tools used

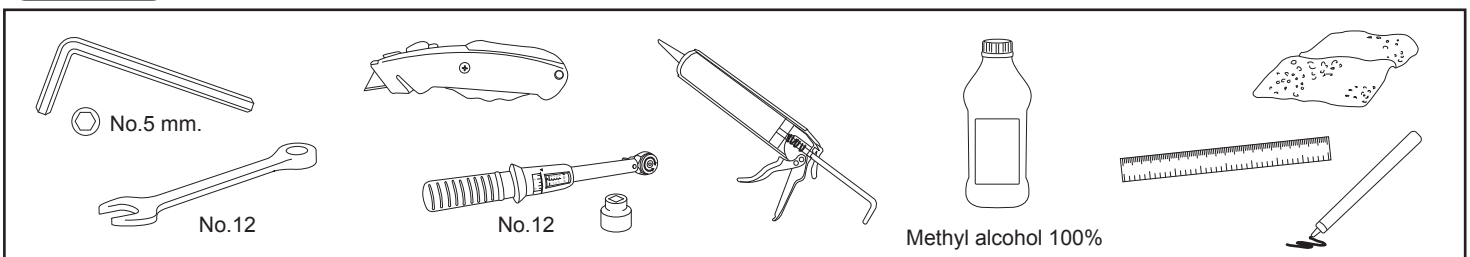



Vandapac Co., Ltd.

700/135 Moo 5, Klongtumru, Muang Chonburi, Chonburi, 20000 Thailand Tel : (038)468-008 Fax : (038)468-006 Email : mail@vandapac.com








Instruction procedure (without bedliner)

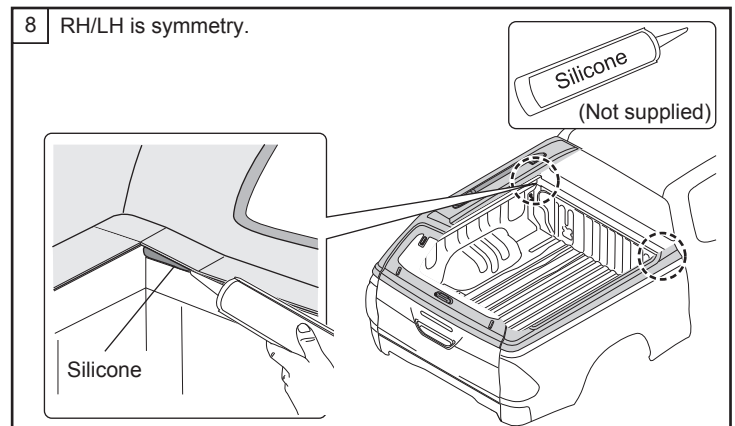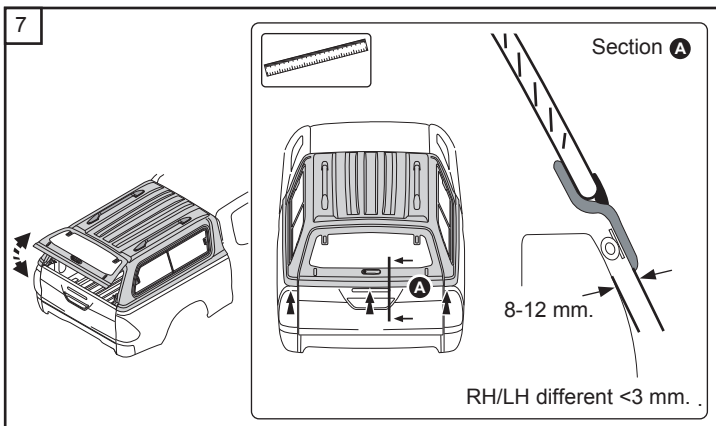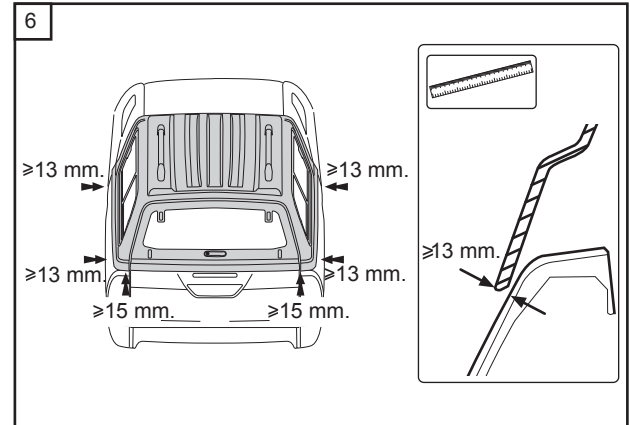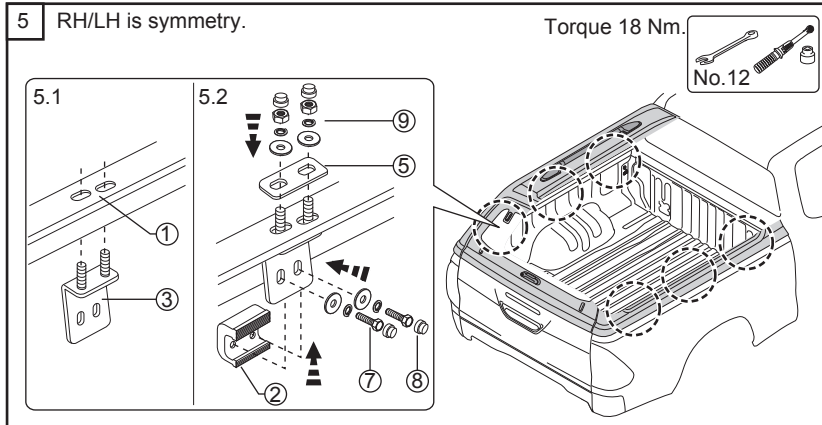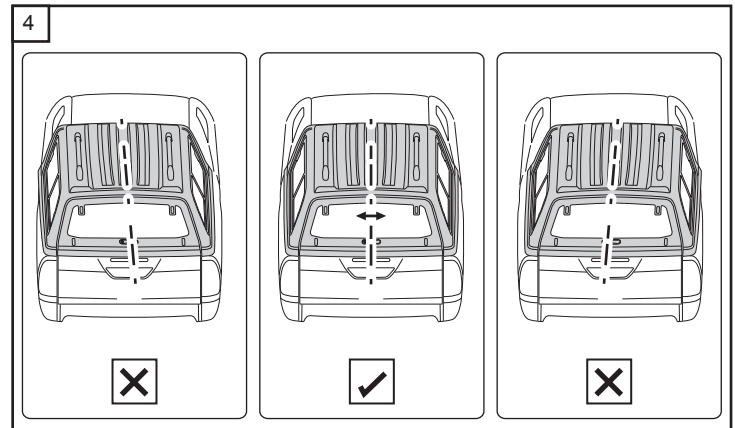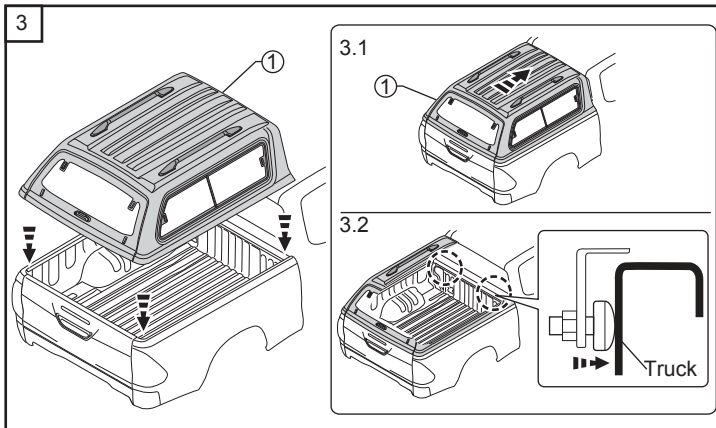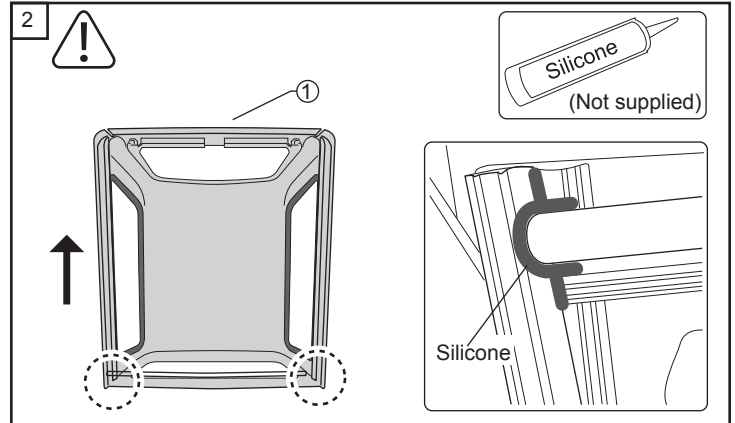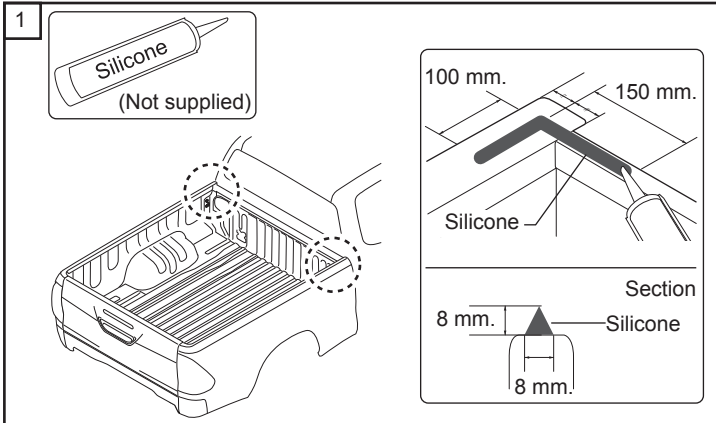

Instruction procedure (without bedliner)

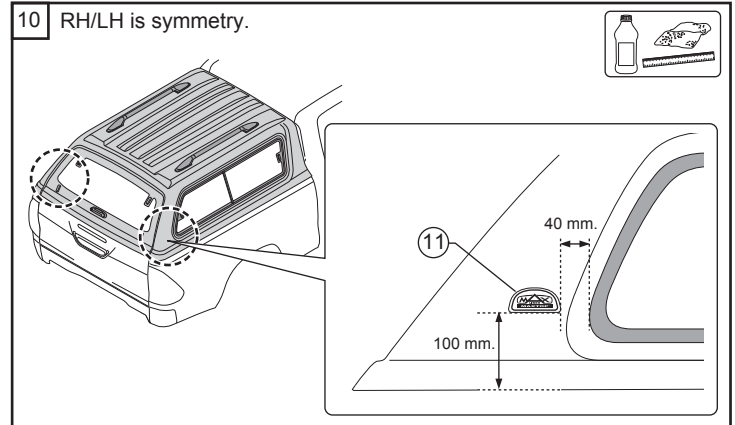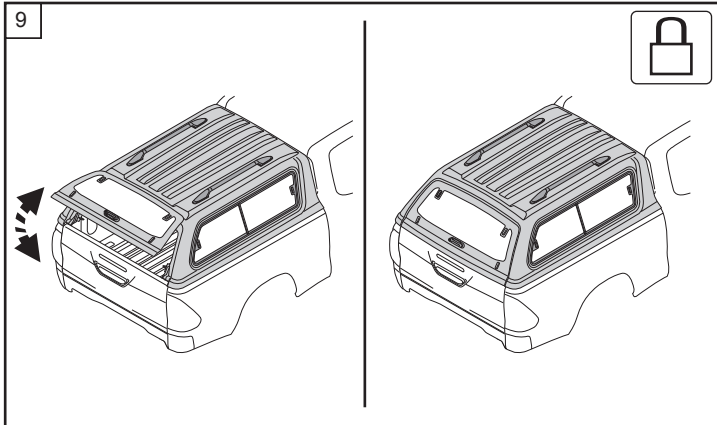


Instruction procedure (with bedliner)

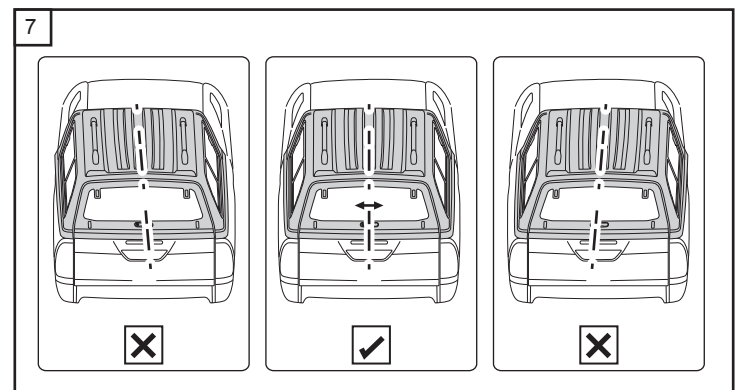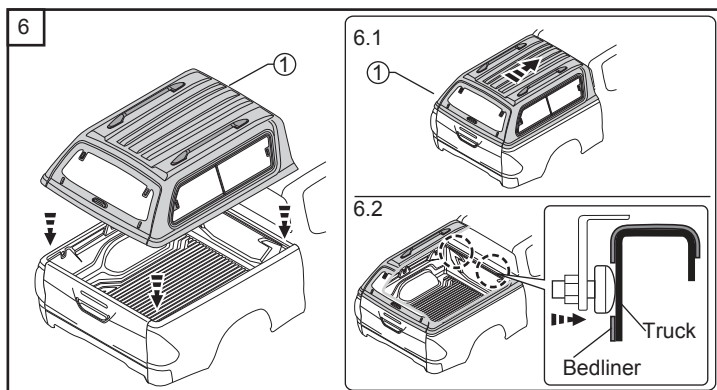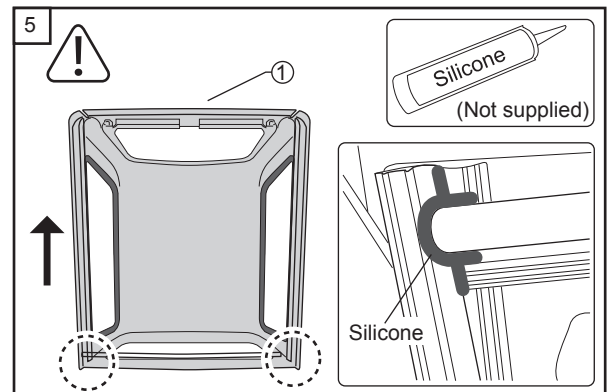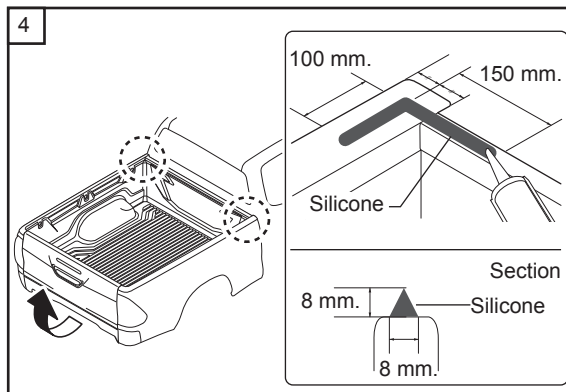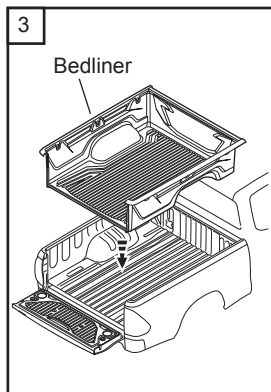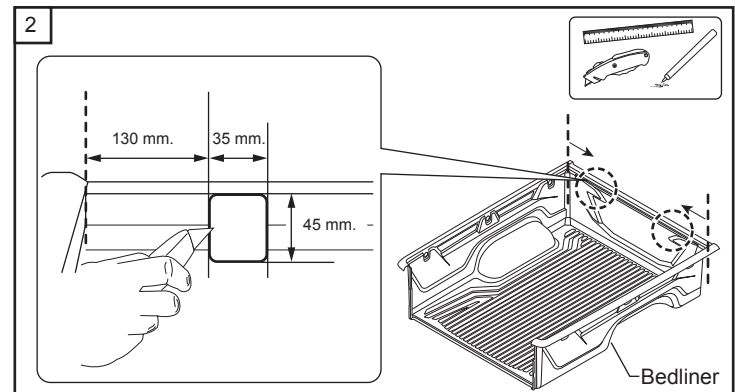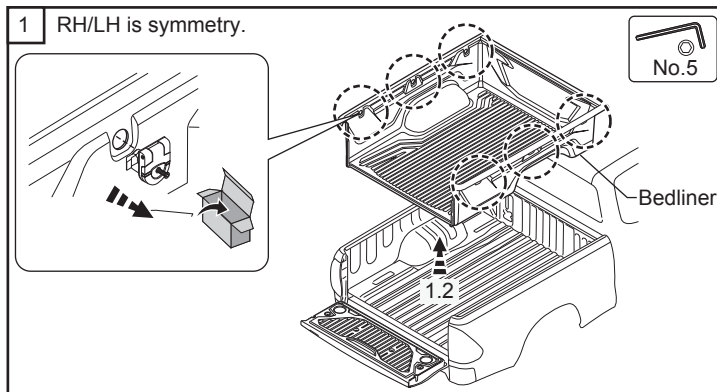


Instruction procedure (with bedliner)


8 RH/LH is symmetry.

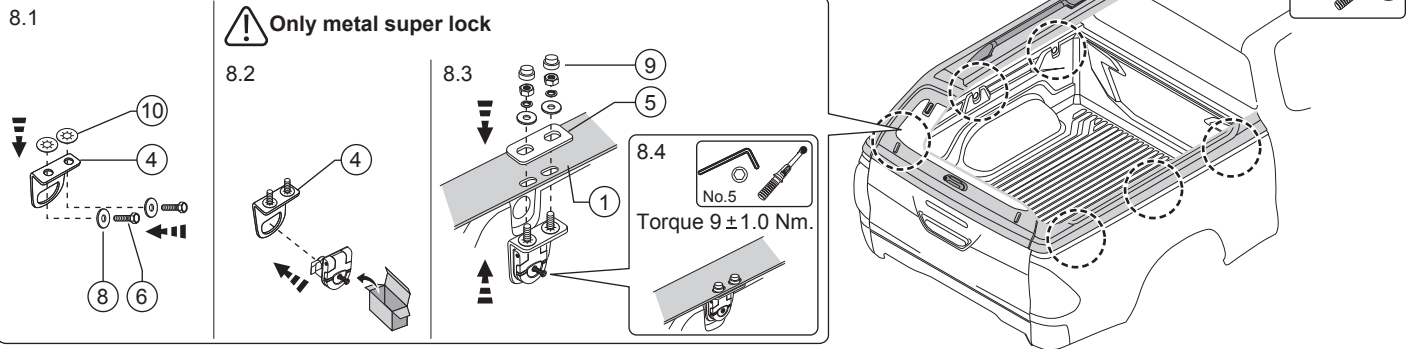


9

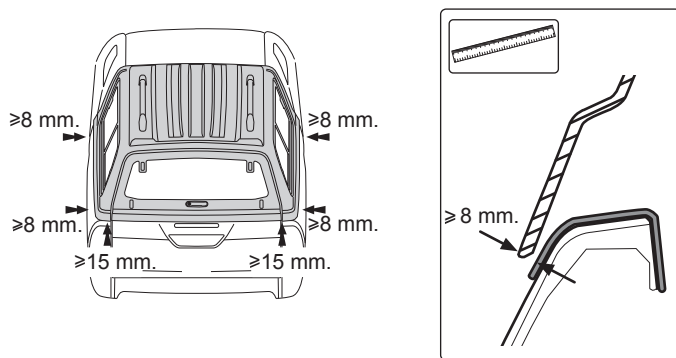


10

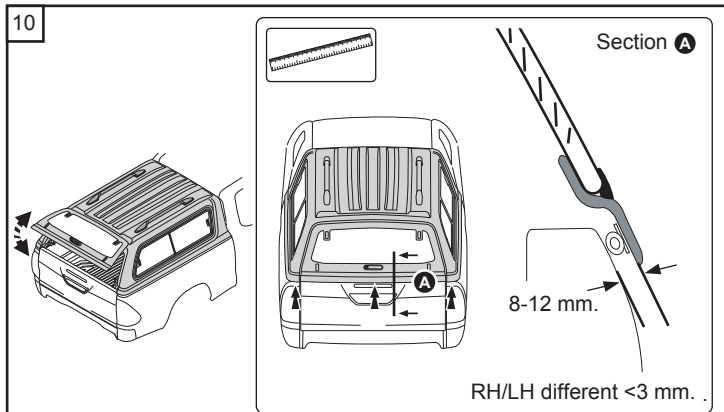


11 RH/LH is symmetry.

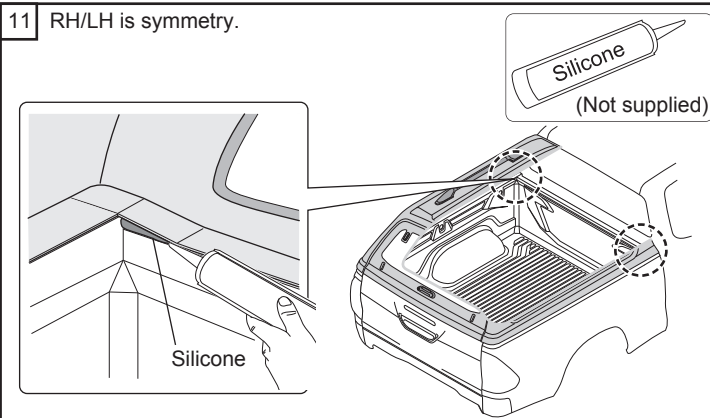

12

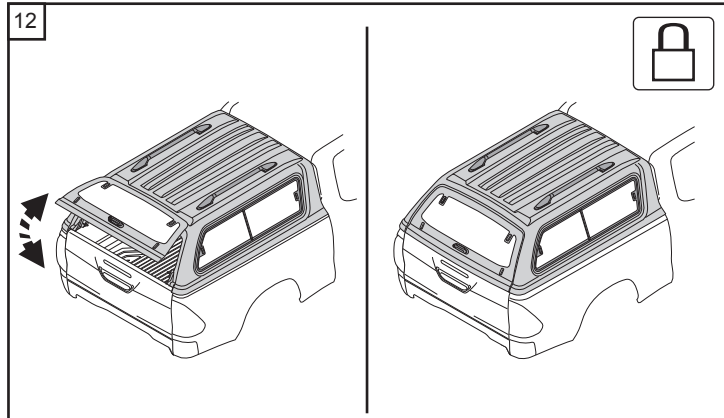

13

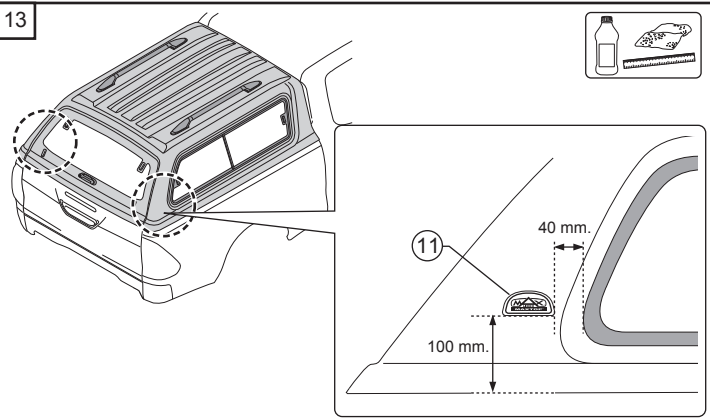

NOTE : ROOM LAMP

