




MAXLINER

INSTALLATION INSTRUCTIONS MANUAL

MAXTOP VENTURE

FORD RANGER DOUBLE CAB 2022

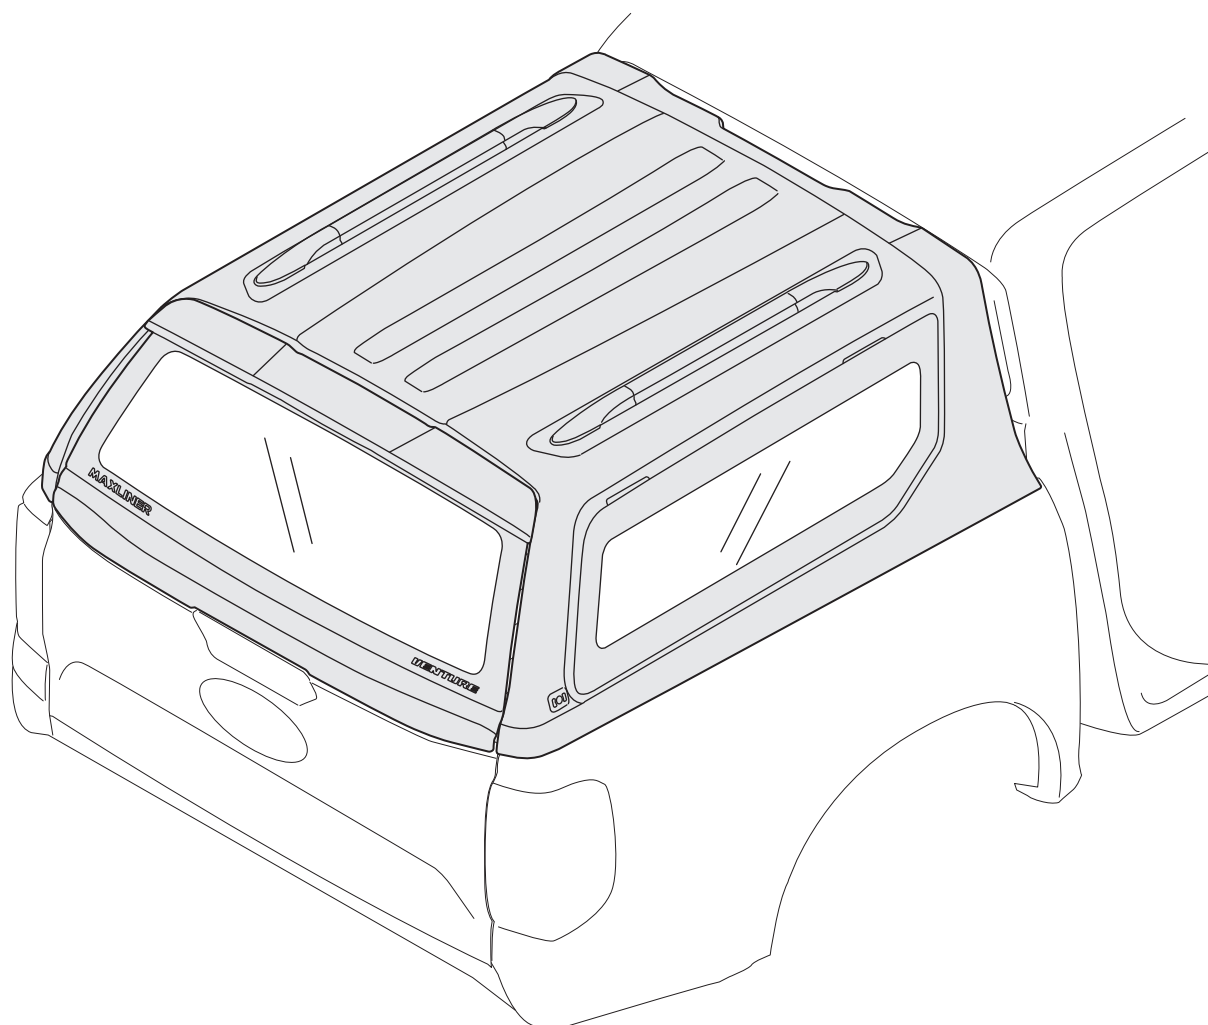

Contact us



THAILAND OFFICE

☎ + (66 38) 468 008 ext 2001
✉ info@maxliner.com
🏠 700/135 Moo 5, Amata Nakorn,
Klongtumru, Muang Chonburi, 20000 Thailand









EUROPE OFFICE

☎ + 31 (0) 850 201 887
✉ infoEurope@vandapac.com
🏠 Aphroditestraat 1, 5074TW Tilburg, Netherlands
Chamber of Commerce : 71512799
VAT identification number : NL858744272801

















AUSTRALIA/OCEANIA OFFICE

☎ + 61 1800 592 192
✉ sales@maxliner.com.au
🏠 2 Dexter Drive Epping 3076 Australia

Component parts

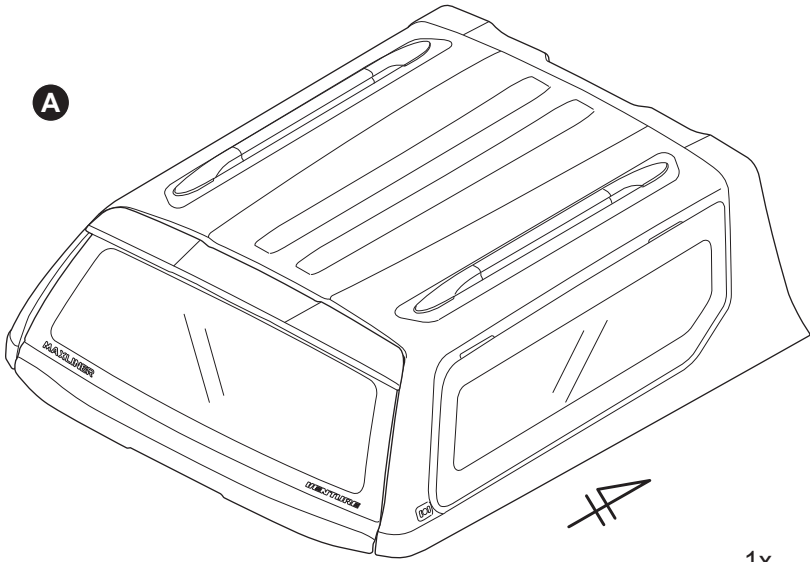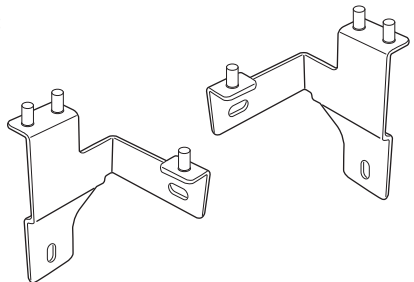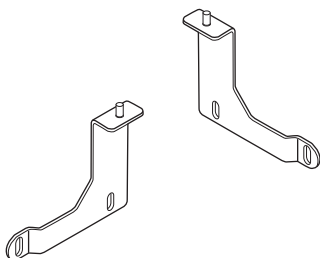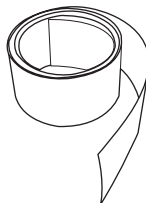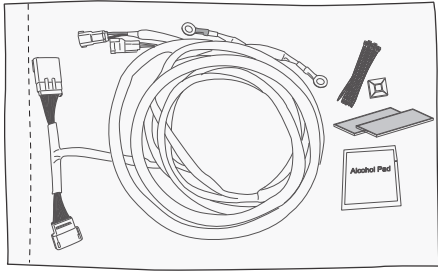A  1x			B  LH / 1x RH / 1x		
			C  LH / 1x RH / 1x		
D  8x	E  7 mm 4x	F  12 mm 2x	G  2x	H  M8x35 4x	
I  M8x25 10x	J  M6x35 2x	K  M8 14x	L  M6 2x	M  M8/16 2x	
N  M8/18 10x	O  M8/25 16x	P  M6 4x	Q  M8 28x	R  M6 4x	
S  M6 1x	T  AAA 4x	U  1x	V  1x		

Tools used

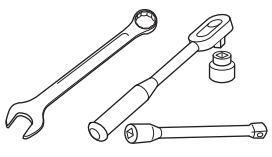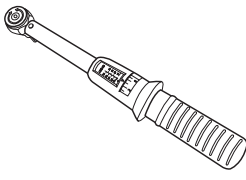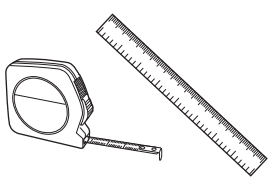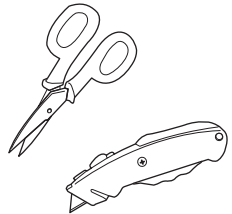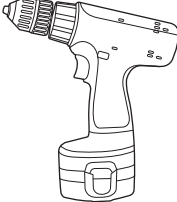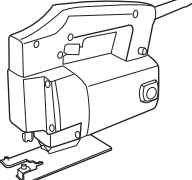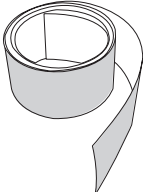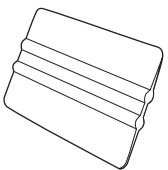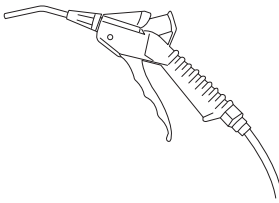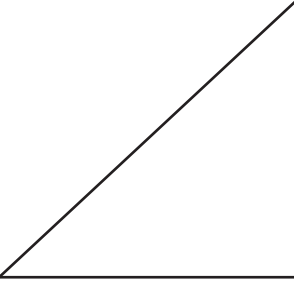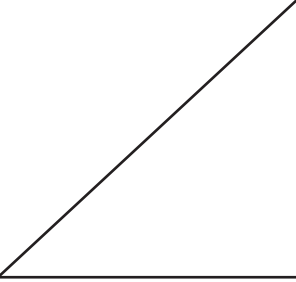 No.8,10,12,13,25				
 No.5,14,15,18,20  No.T20		 No.T30,40,45  No.4,5		
   	  Silicone (Non supply)			
				



Caution for installation

Read this mounting manual carefully, before your start the installation.

1. Area where to install product should be clean.
2. During installation, person who installed should take off any ornaments.
3. Wear the protective eyewear before installation.

Instruction procedure





1

With bedliner DC
under rail type

With KD liner DC
under rail type


With bedliner TD type

Without bedliner

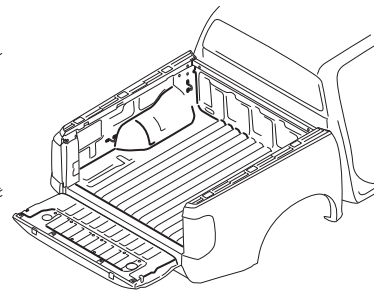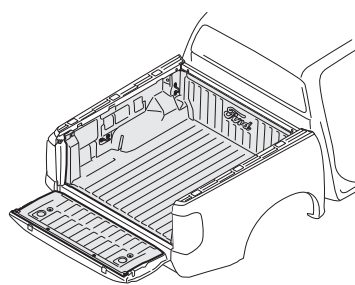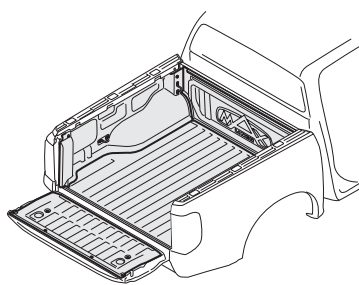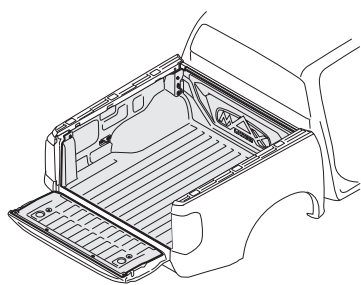


※ With bedliner DC under rail type (1.1 - 1.14)



1.1

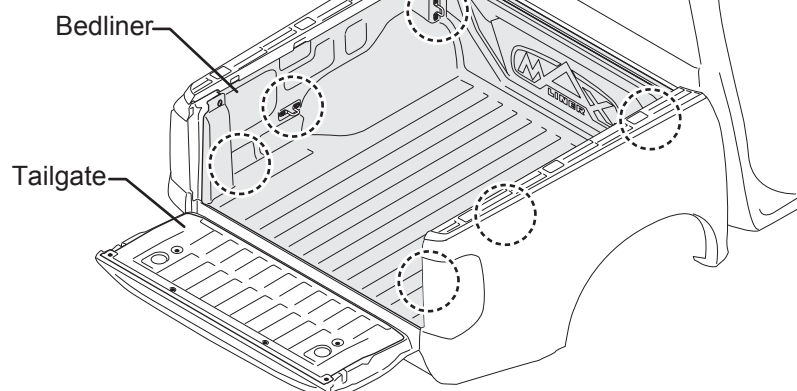


LH/RH (6x)

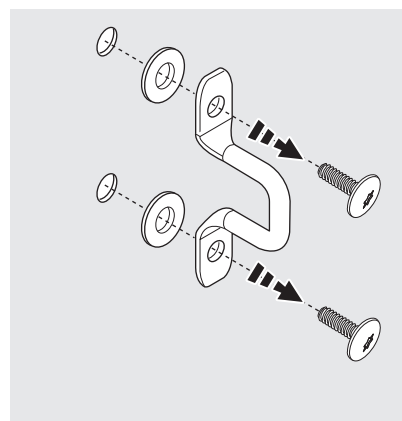


1.2

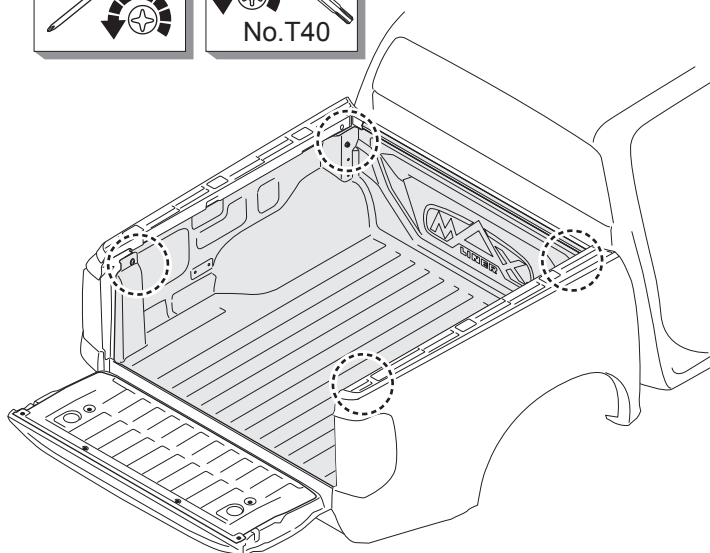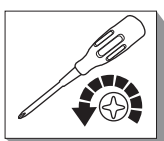

LH/RH (2x)

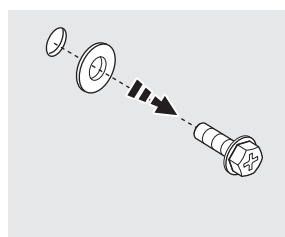


LH/RH (2x)

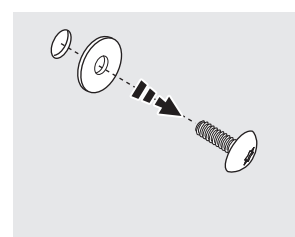


Instruction procedure

※ With bedliner DC under rail type (1.1 - 1.14)

1.3

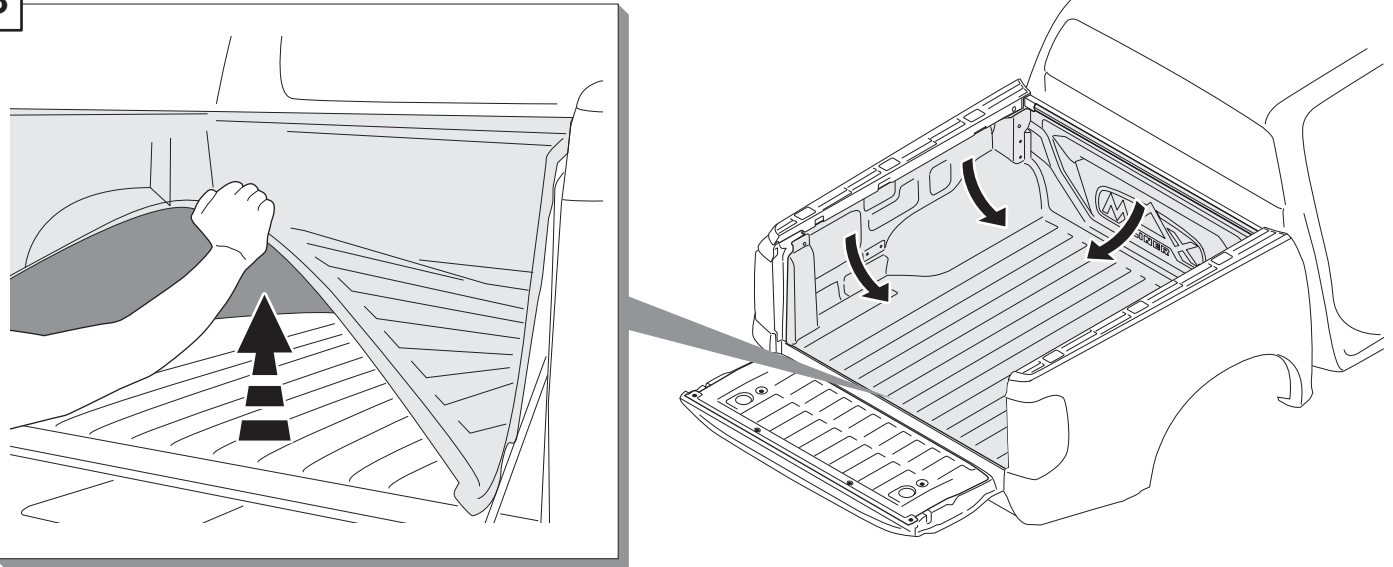


1.4

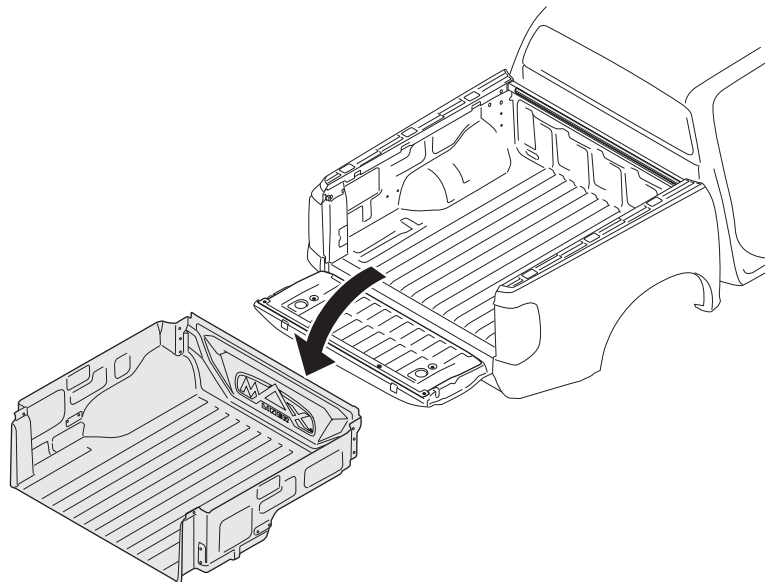

1.5

LH/RH (2x)

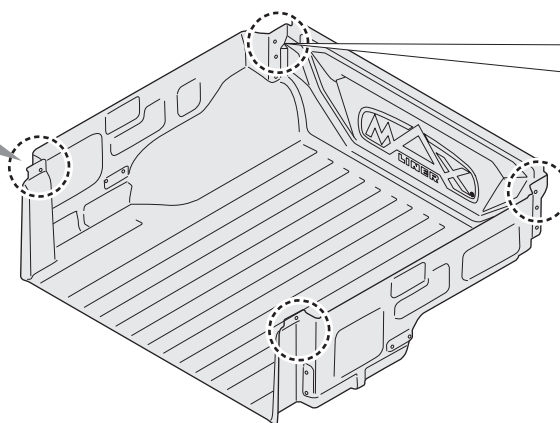




LH/RH (2x)






Instruction procedure

※ With bedliner DC under rail type (1.1 - 1.14)




1.6 LH/RH

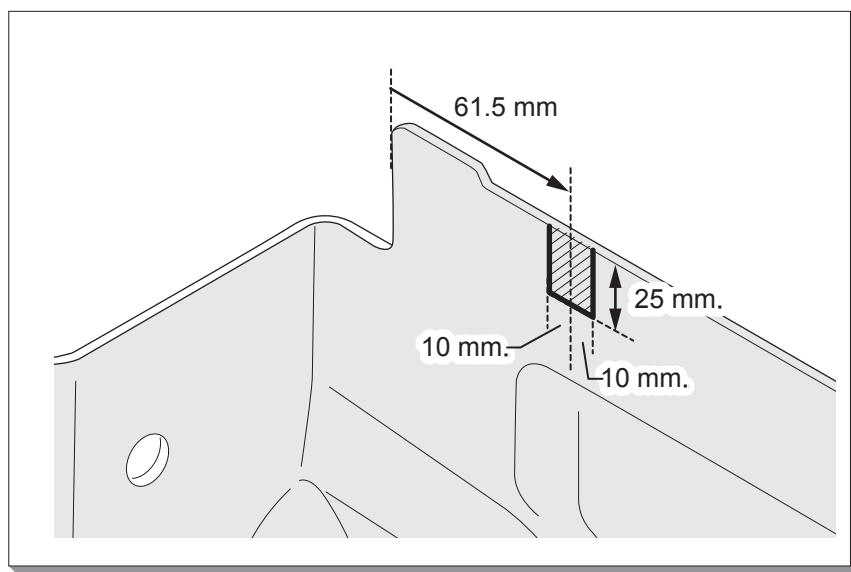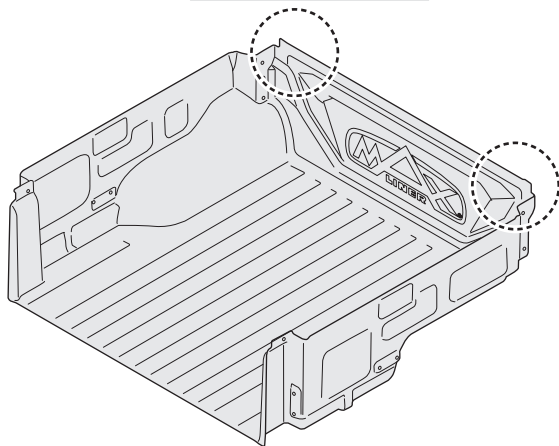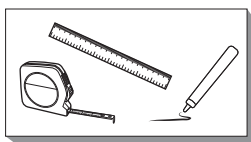

1.7 LH/RH

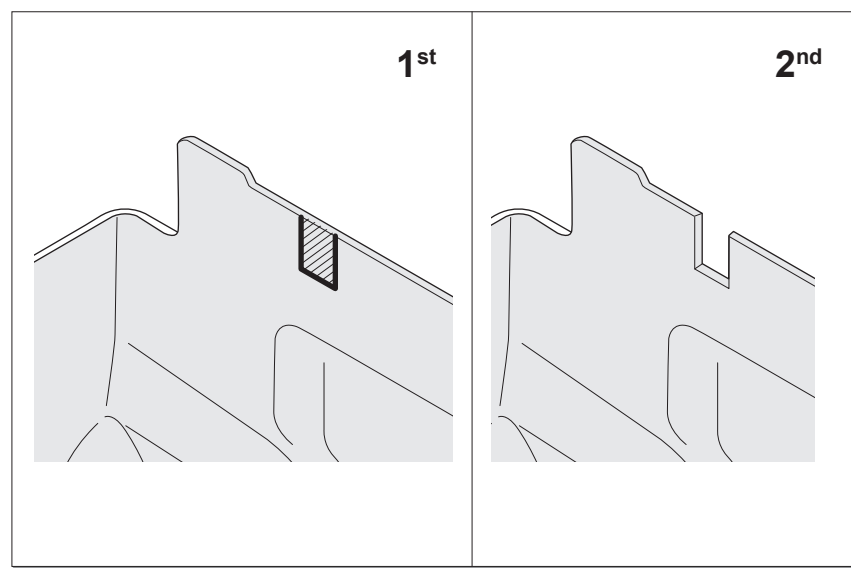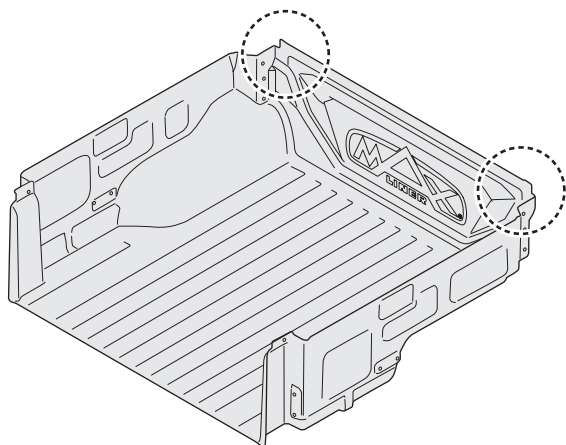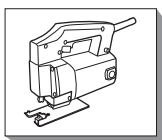



1.8 LH/RH

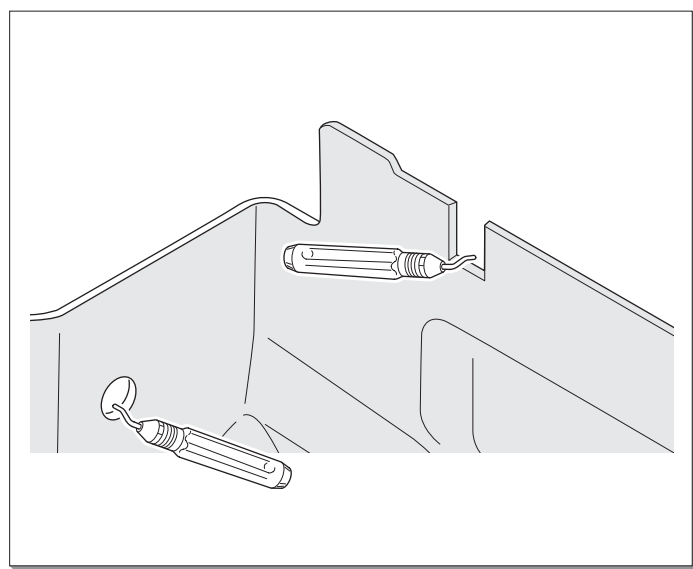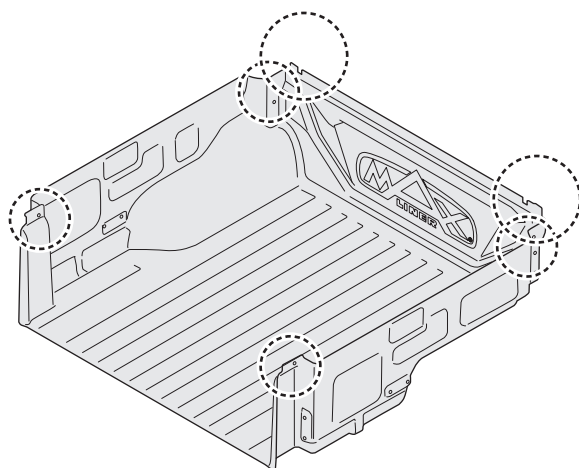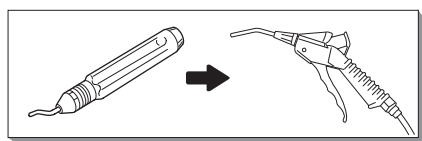


Instruction procedure

※ With bedliner DC under rail type (1.1 - 1.14)



1.9 LH/RH

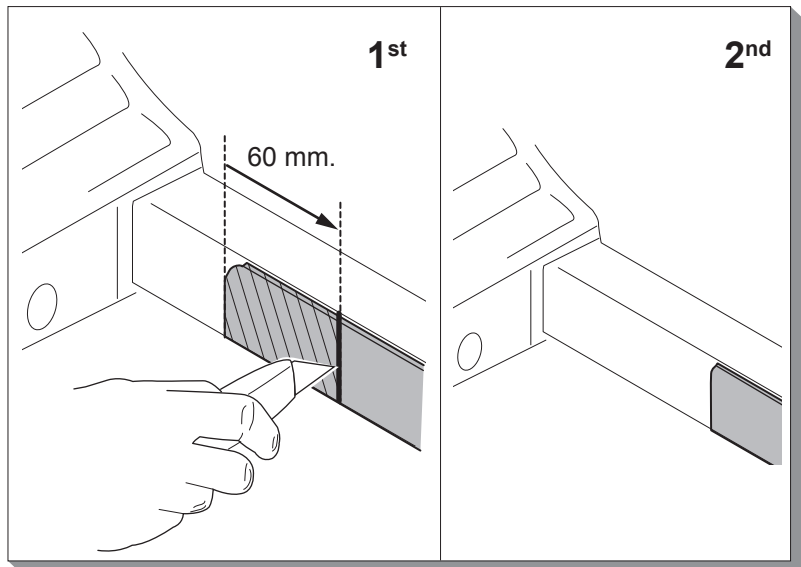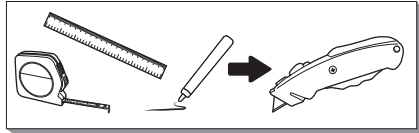

1.10

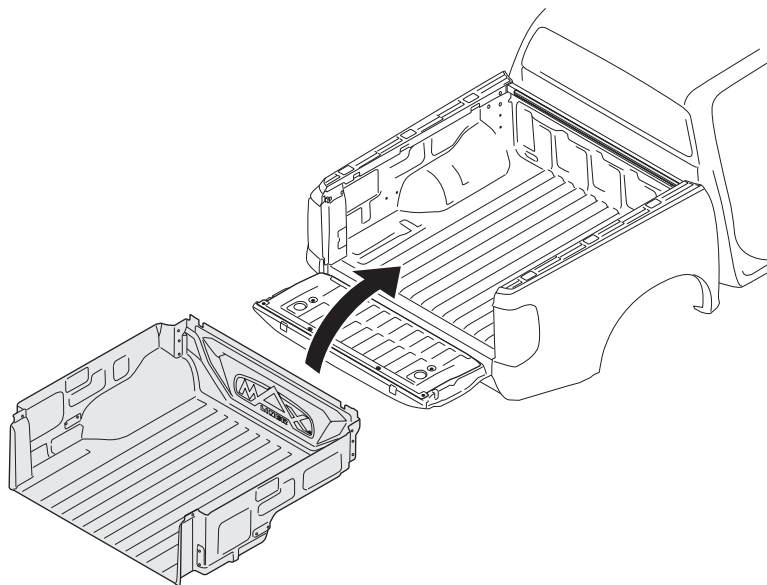



1.11

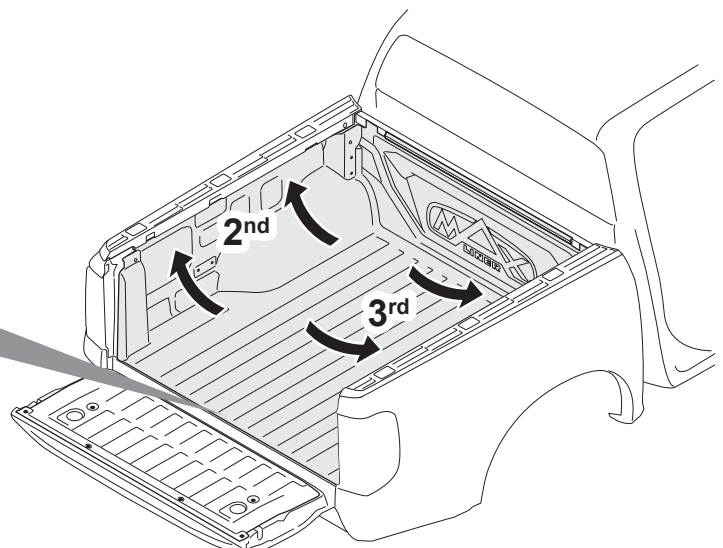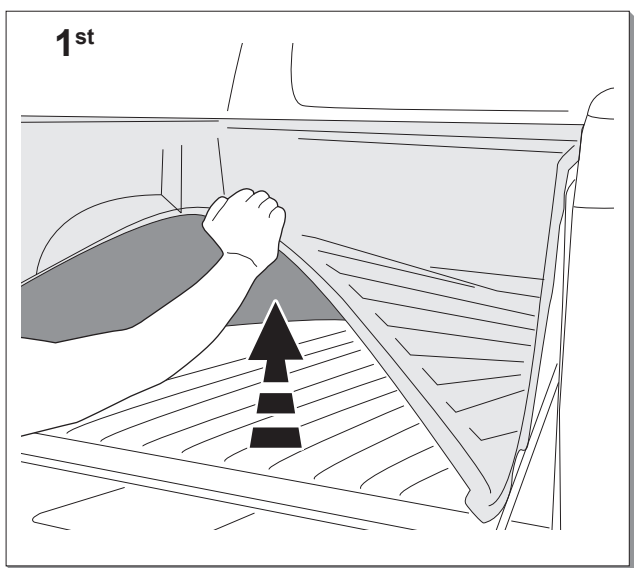


Instruction procedure

※ With bedliner DC under rail type (1.1 - 1.14)


1.12

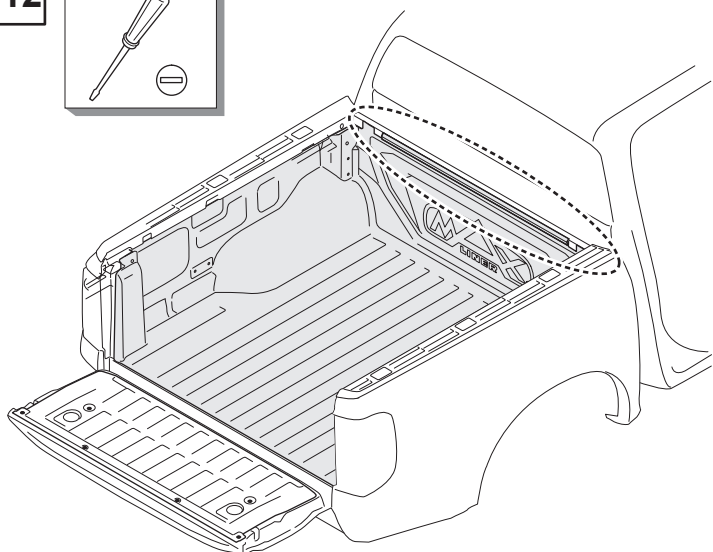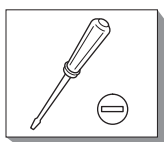



1st

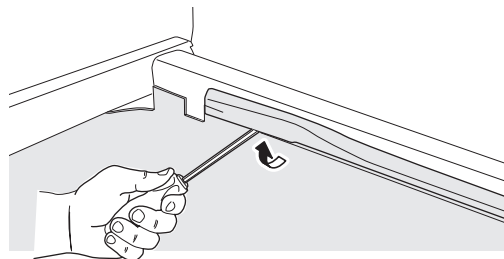


2nd

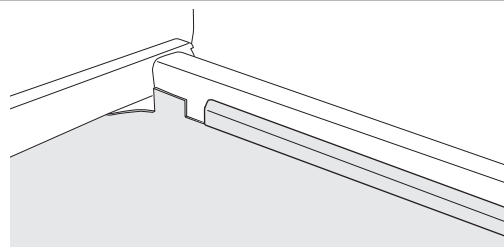


1.13

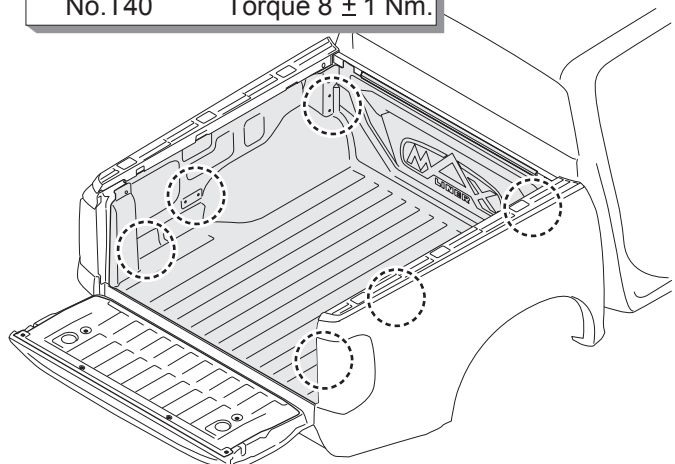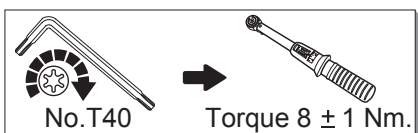

LH/RH (6x)

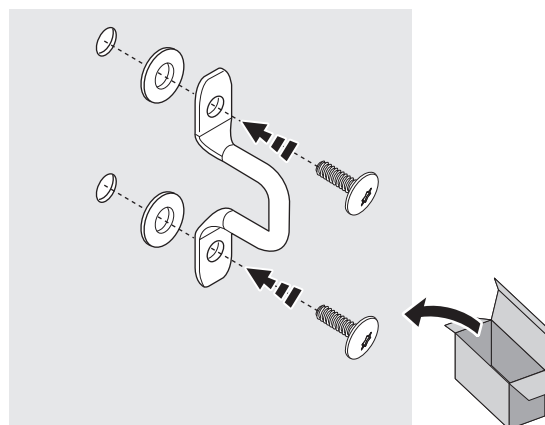


1.14

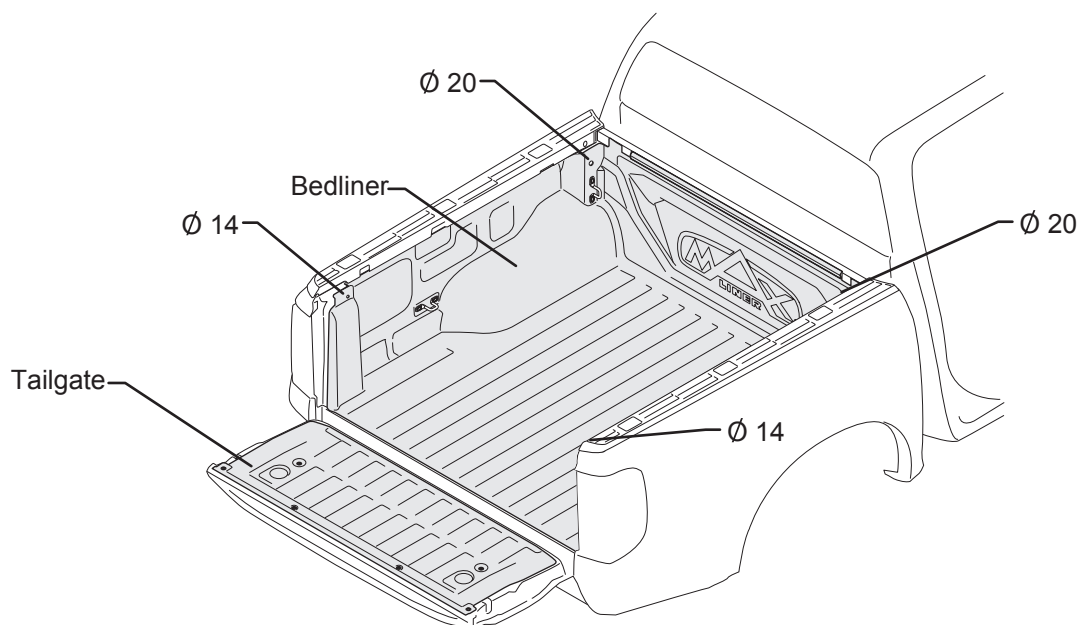


Instruction procedure

※ With KD liner DC under rail type (1.1 - 1.13)



1.1

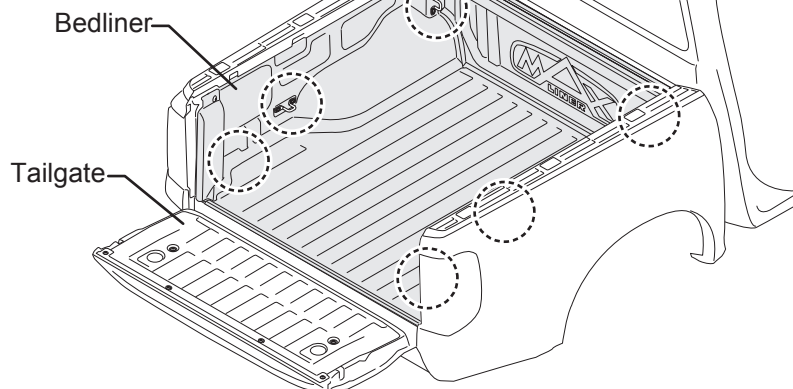


LH/RH (6x)

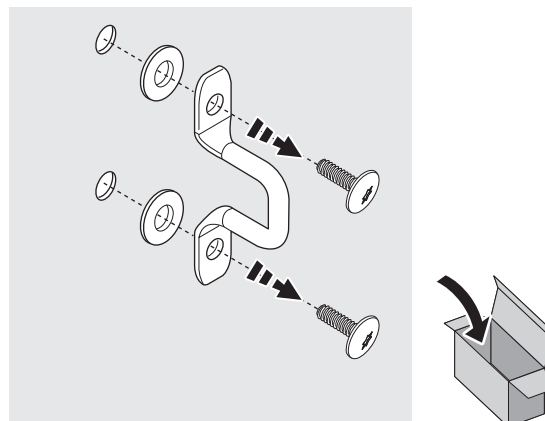


1.2

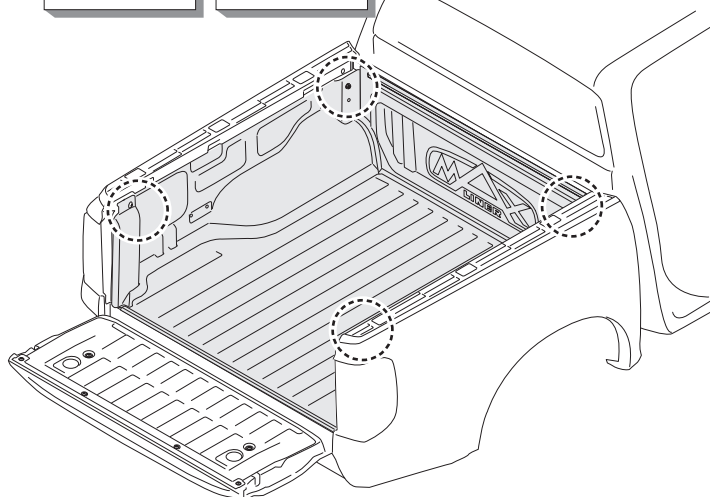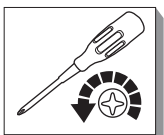


LH/RH (2x)

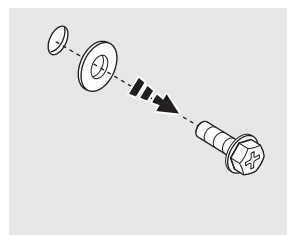


LH/RH (2x)

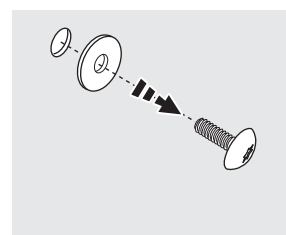


1.3

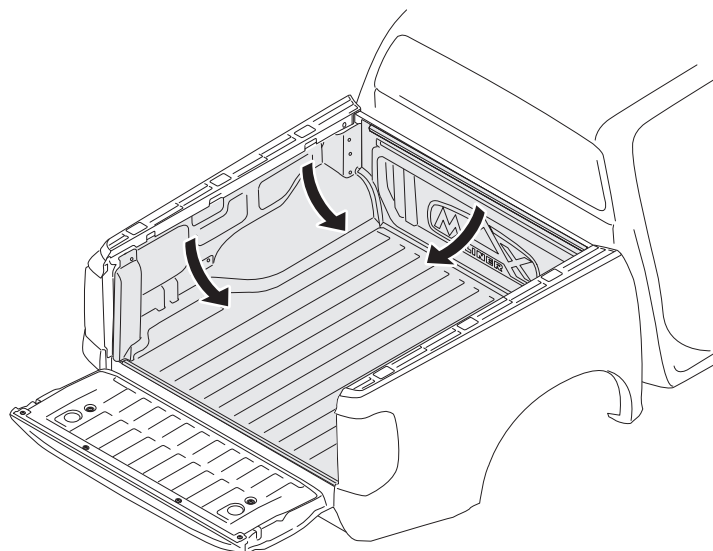

1st

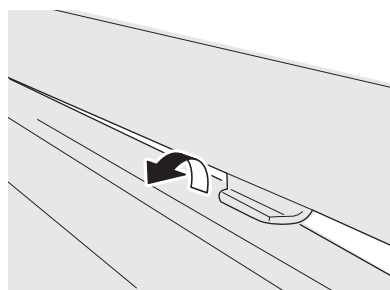

2nd


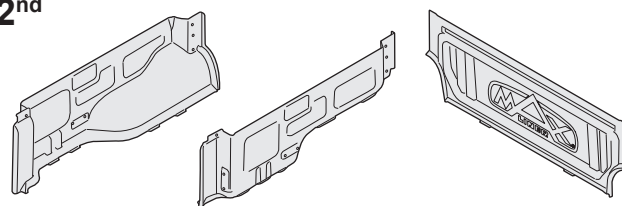


Instruction procedure



※ With KD liner DC under rail type (1.1 - 1.13)

1.4




LH/RH (2x)

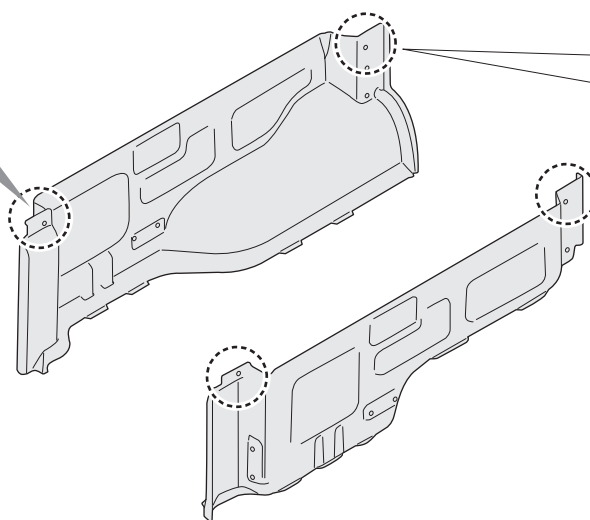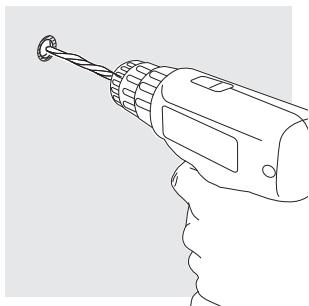




LH/RH (2x)

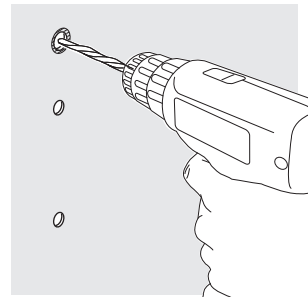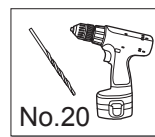

1.5 LH/RH

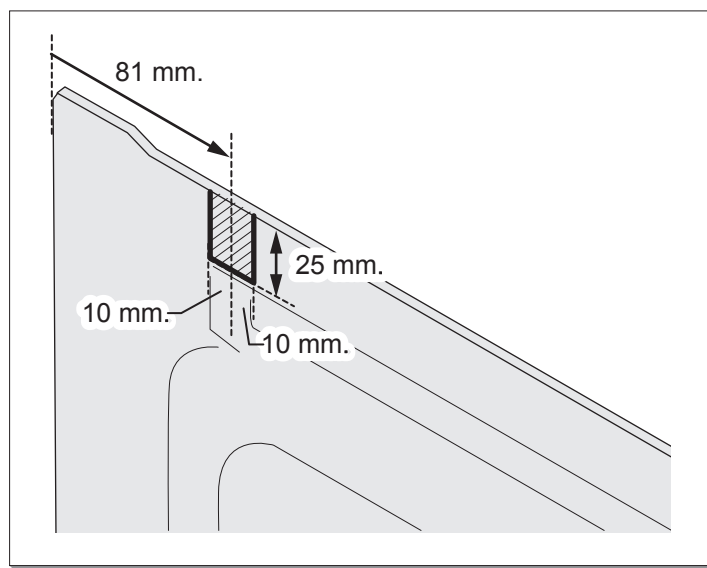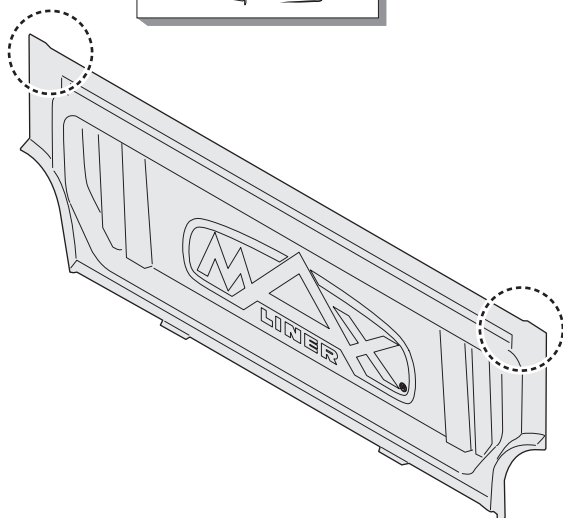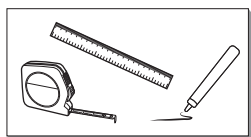




1.6 LH/RH

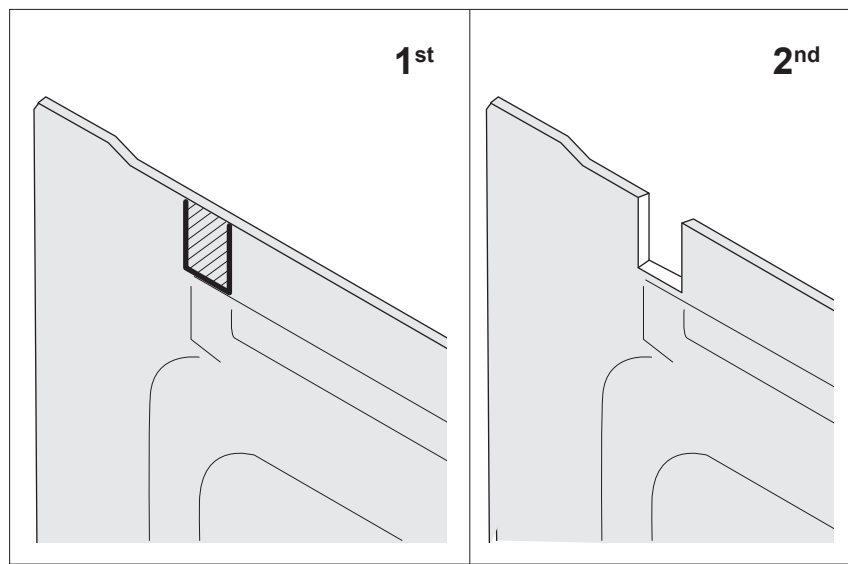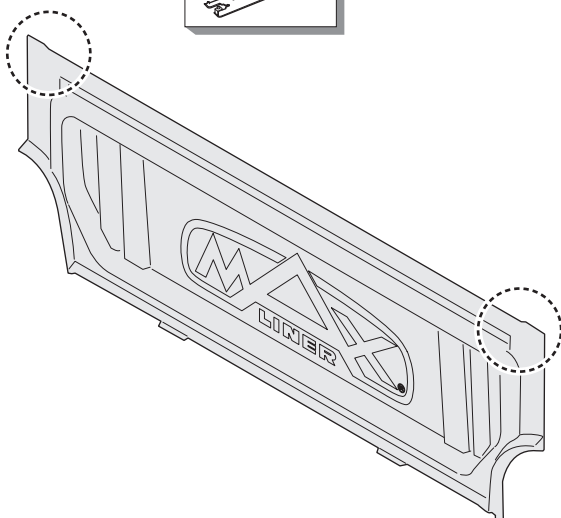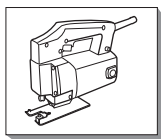




Instruction procedure

※ With KD liner DC under rail type (1.1 - 1.13)




1.7 LH/RH

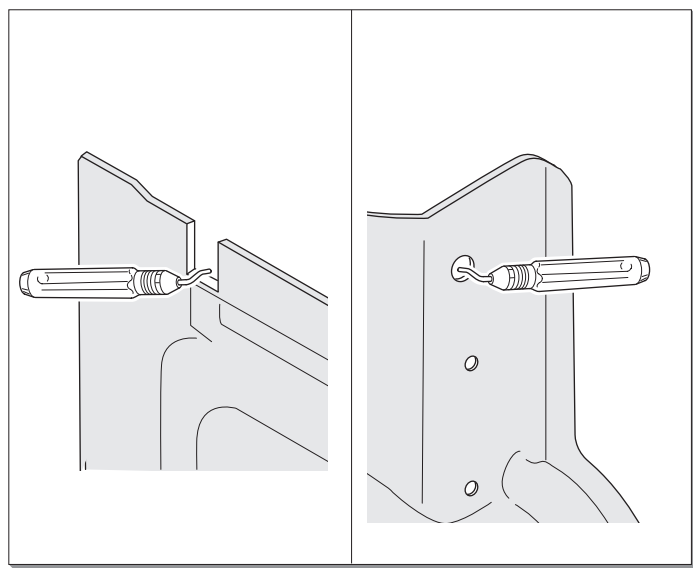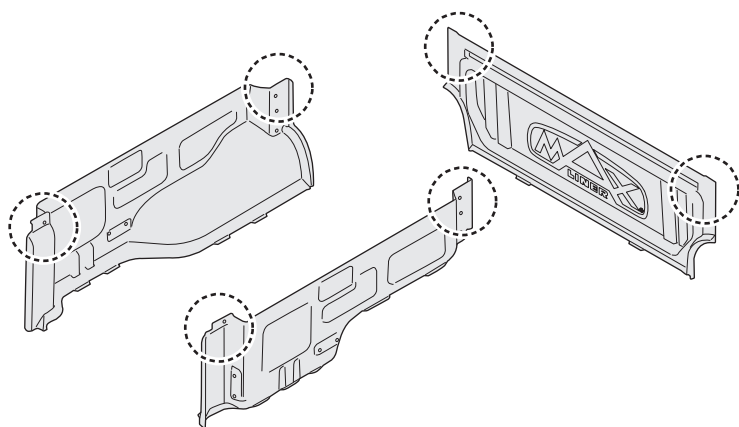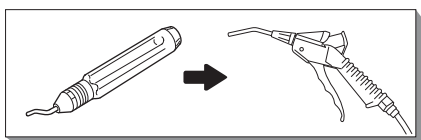

1.8 LH/RH

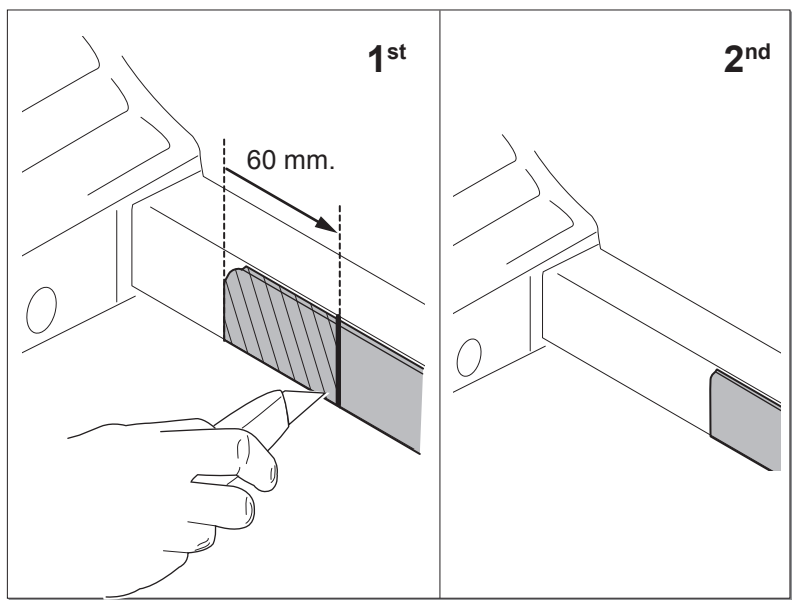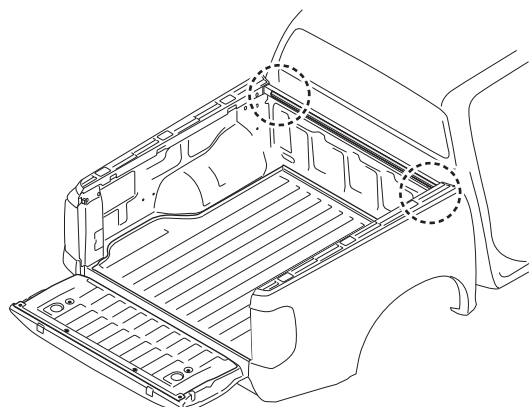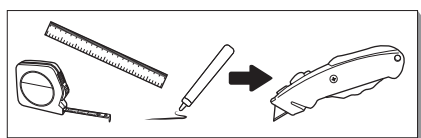



1.9 LH/RH

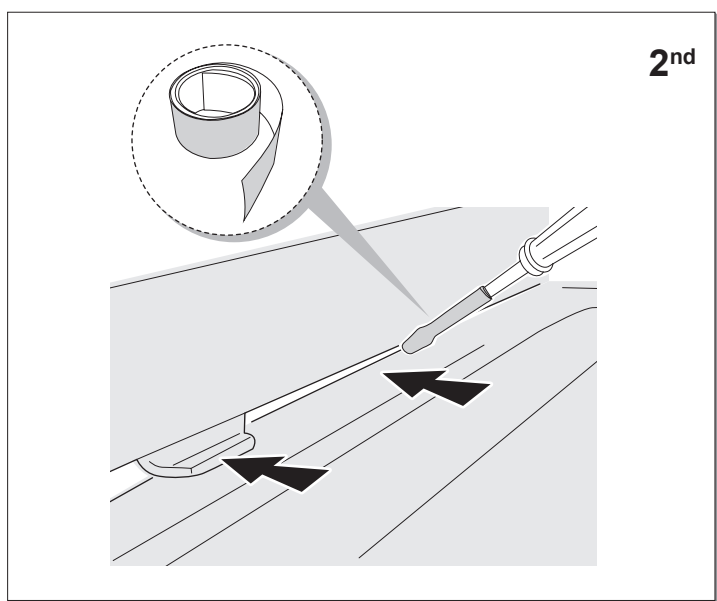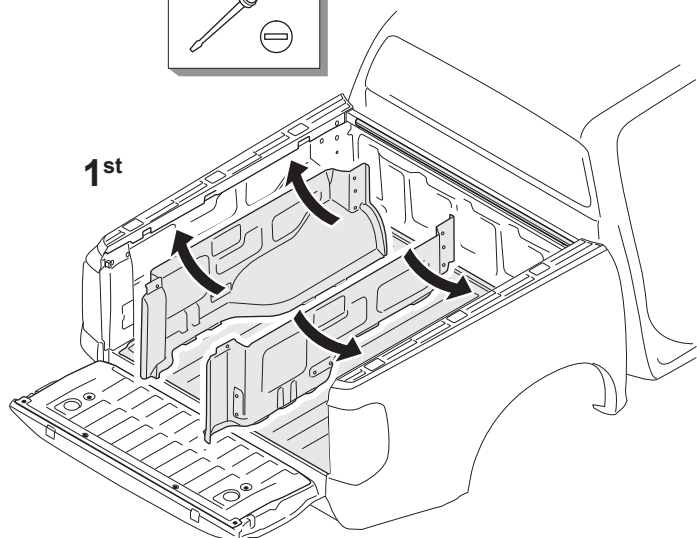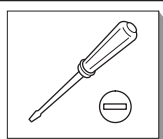


Instruction procedure

※ With KD liner DC under rail type (1.1 - 1.13)



1.10

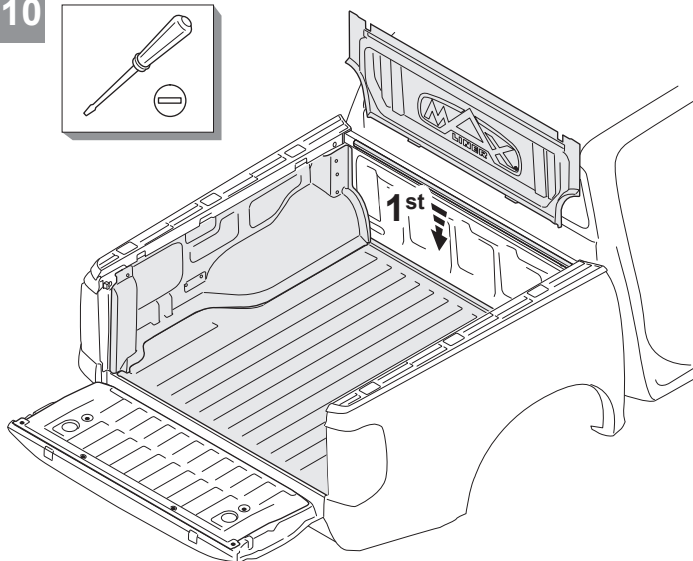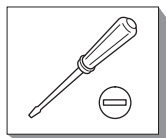


2nd

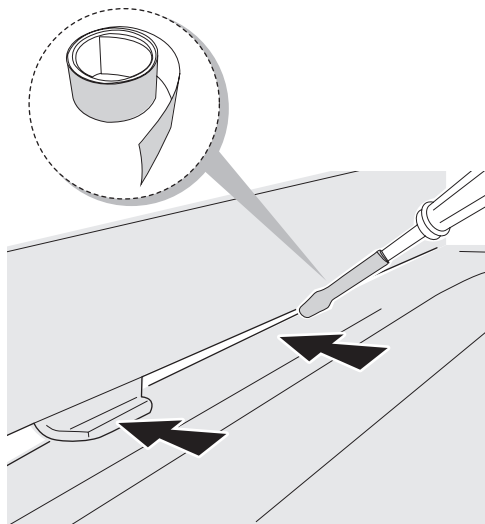


1.11

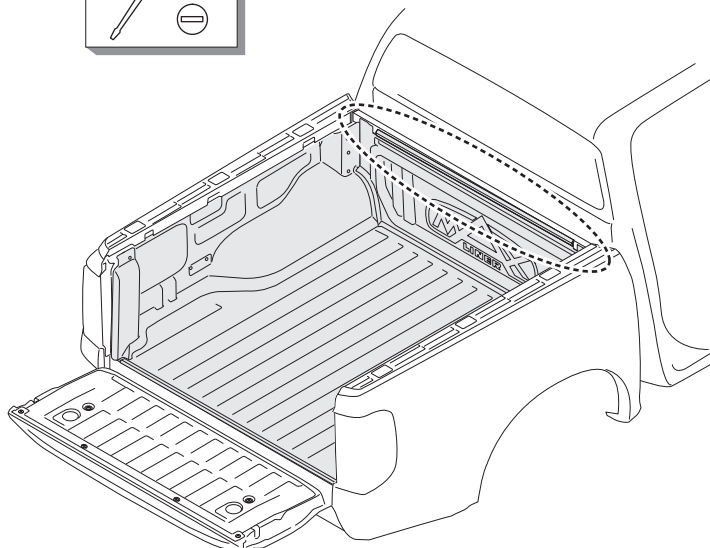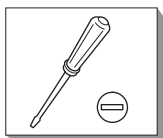



1st

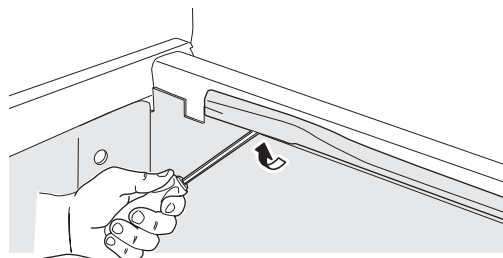


2nd

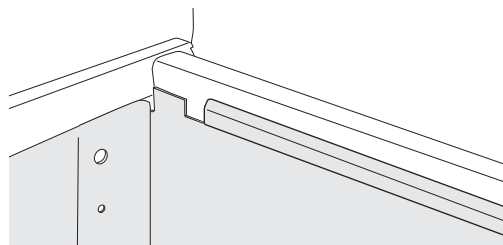

1.12 LH/RH

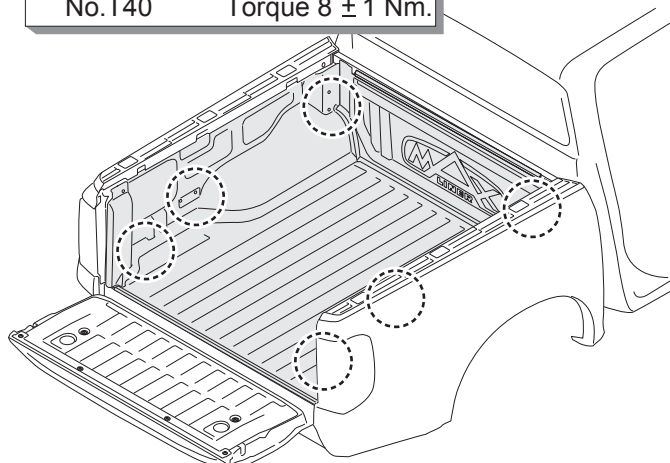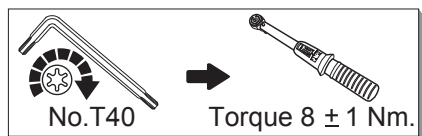


LH/RH (6x)

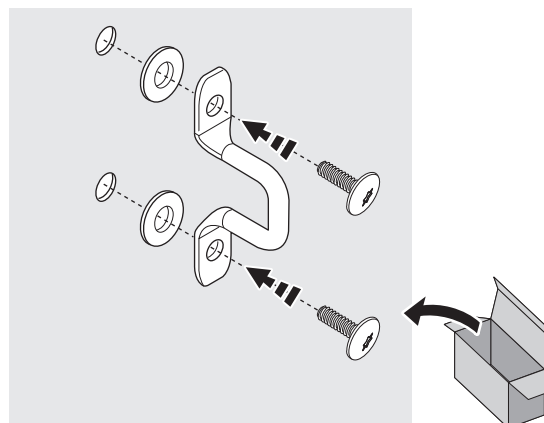

Instruction procedure


※ With KD liner DC under rail type (1.1 - 1.13)

1.13

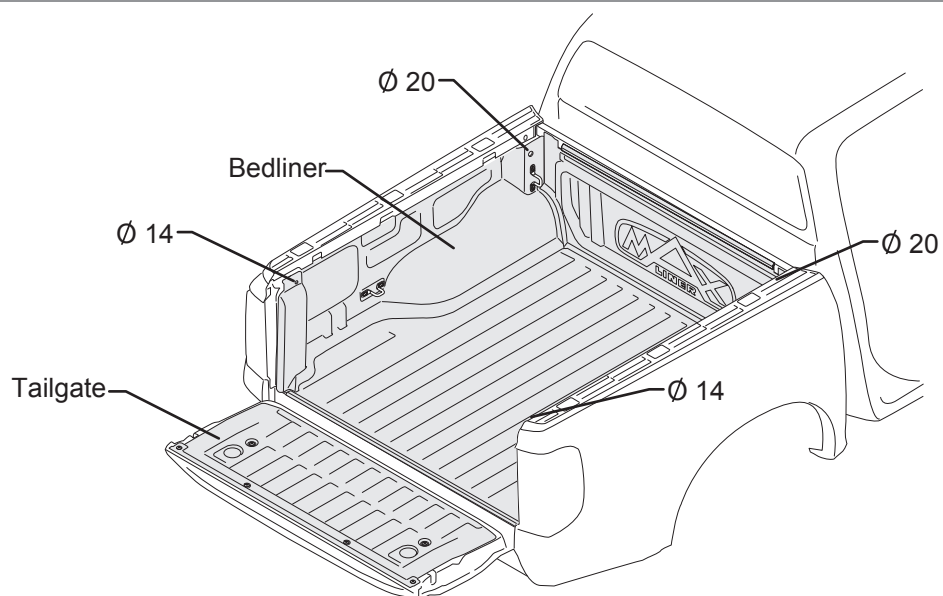


※ With bedliner TD type (1.1 - 1.15)



1.1

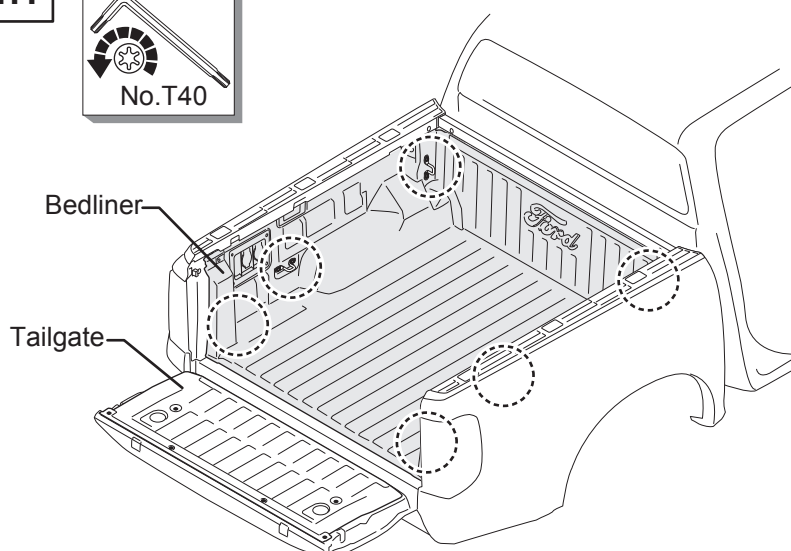


LH/RH (6x)

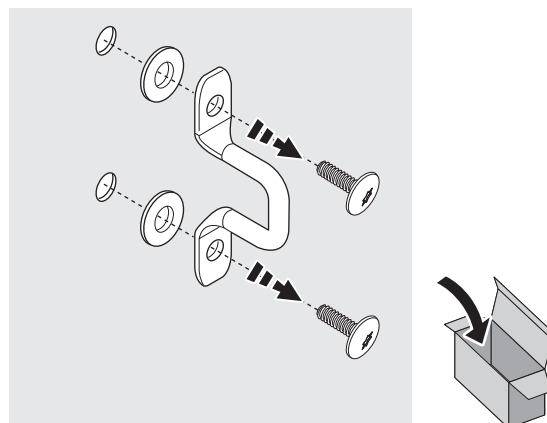


1.2

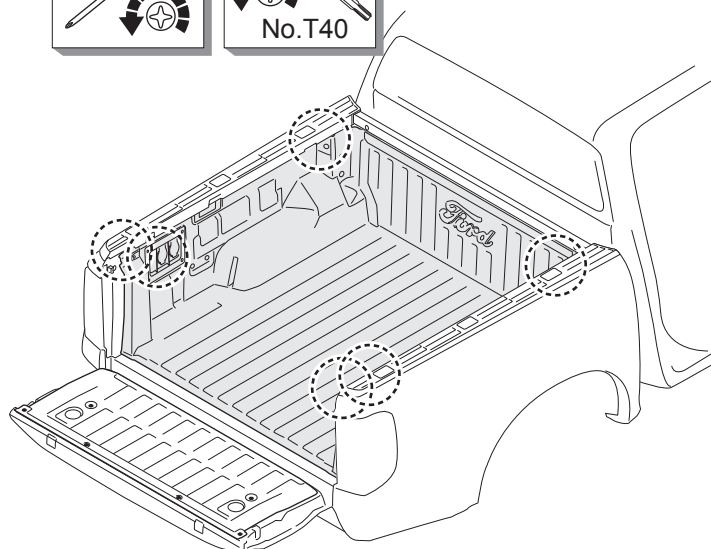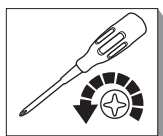

LH/RH (2x)

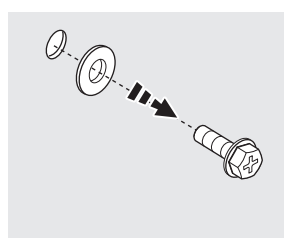




LH/RH (4x)

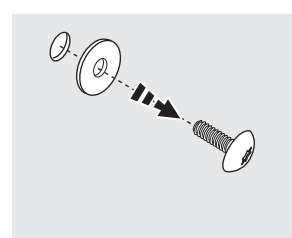


Instruction procedure

※ With bedliner TD type (1.1 - 1.15)




1.3

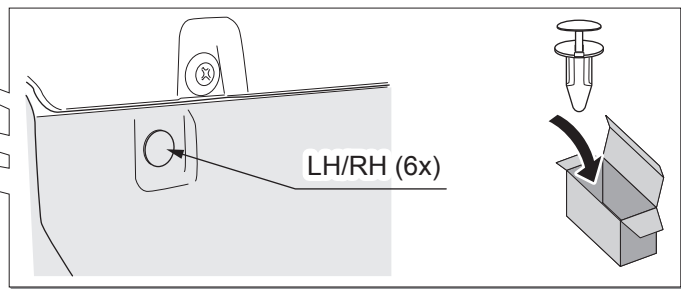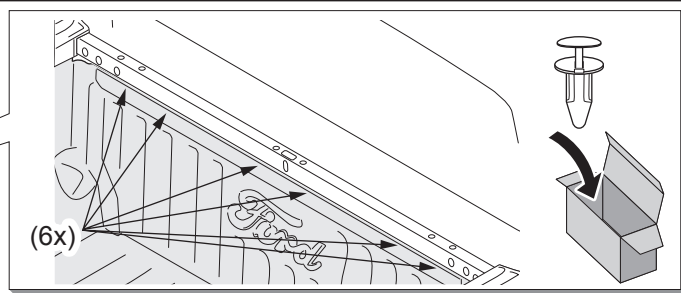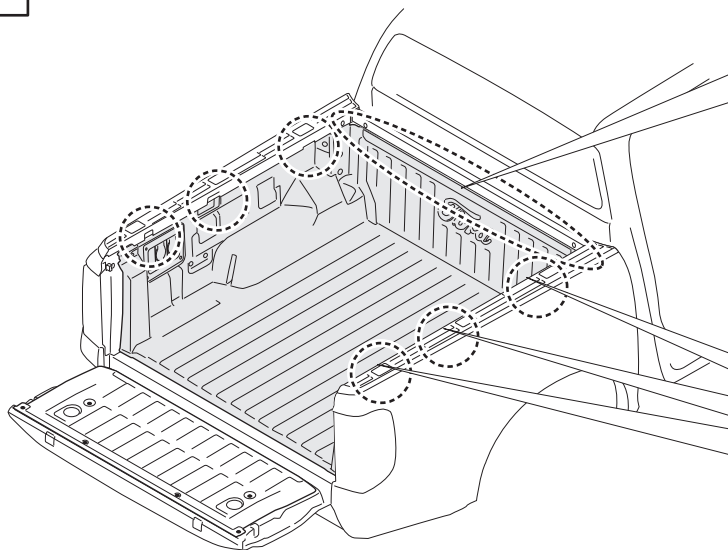



1.4

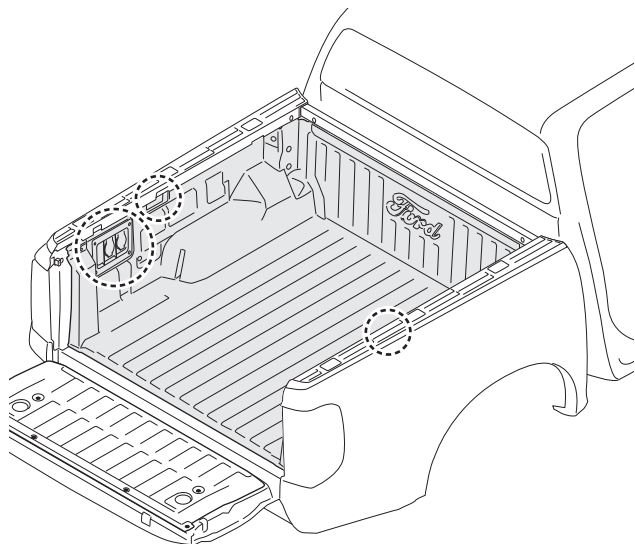


LH/RH (2x)

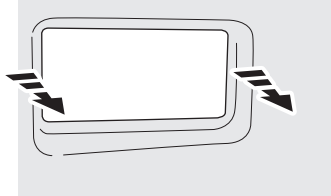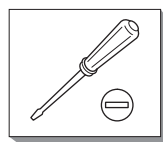

LH (4x)

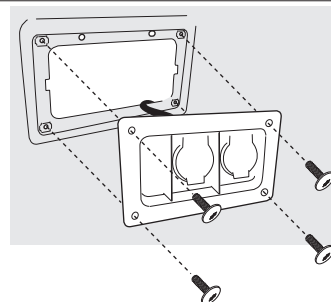




1.5

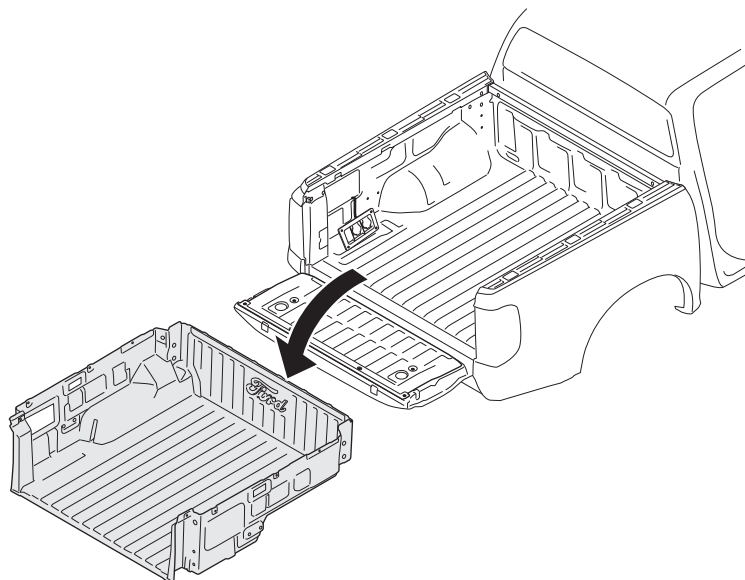

Instruction procedure



※ With bedliner TD type (1.1 - 1.15)

1.6 LH/RH

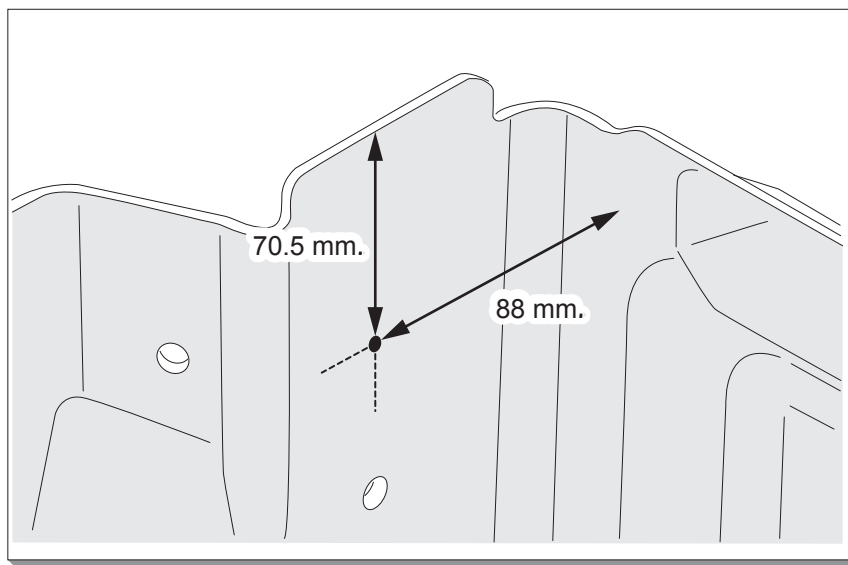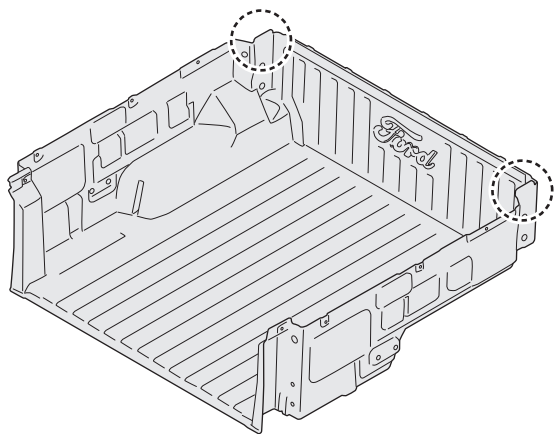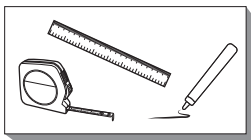

1.7


LH/RH (2x)

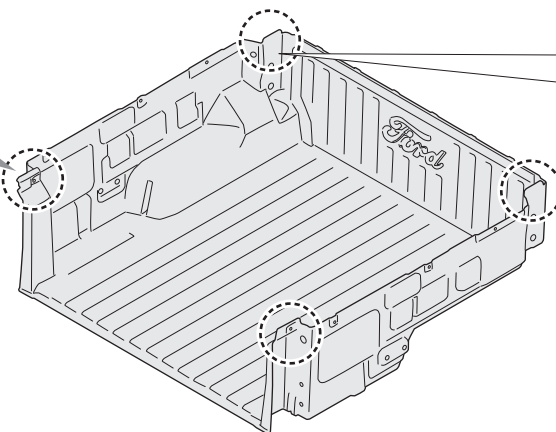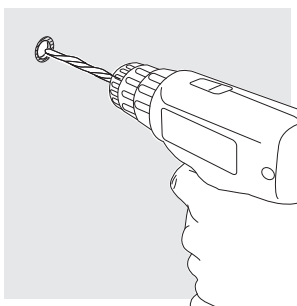




LH/RH (2x)

1st : $\varnothing 5$

2nd : $\varnothing 20$

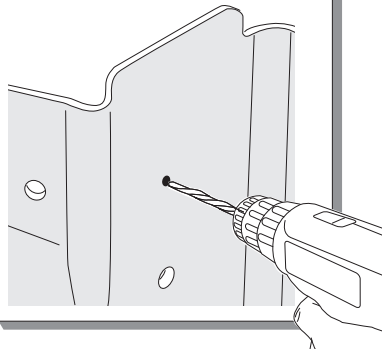


1.8 LH/RH

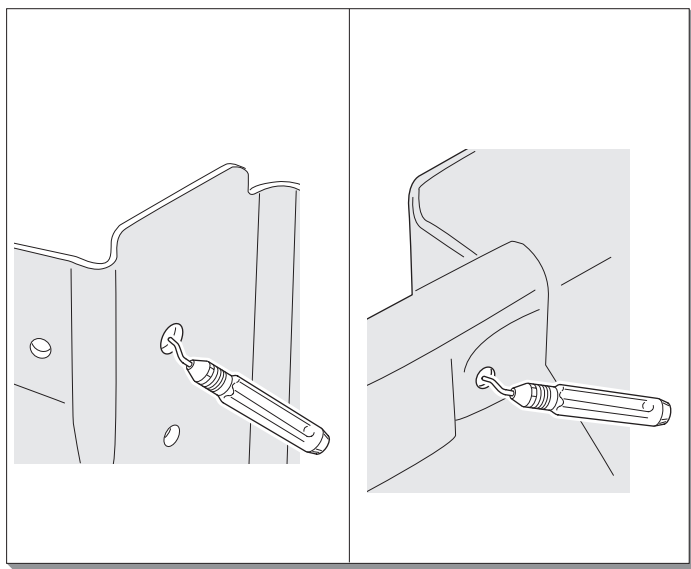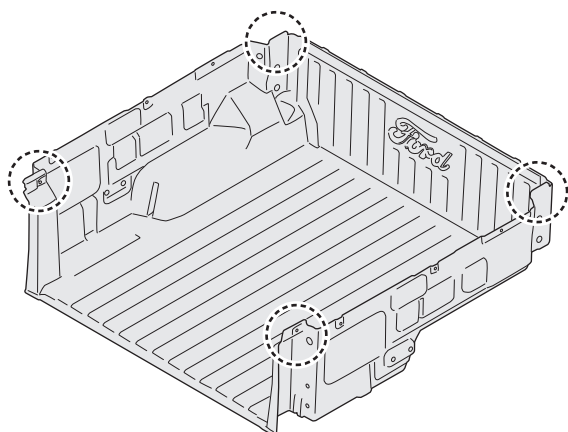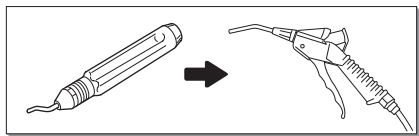



Instruction procedure

※ With bedliner TD type (1.1 - 1.15)


1.9

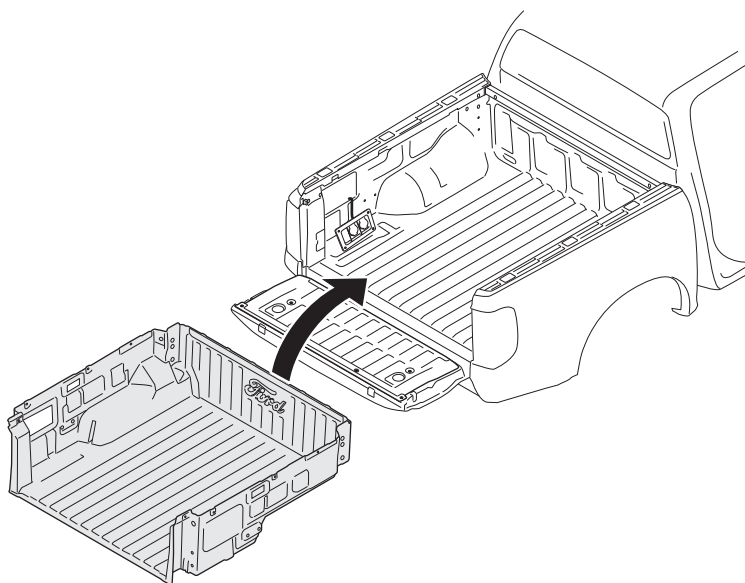


1.10 LH/RH

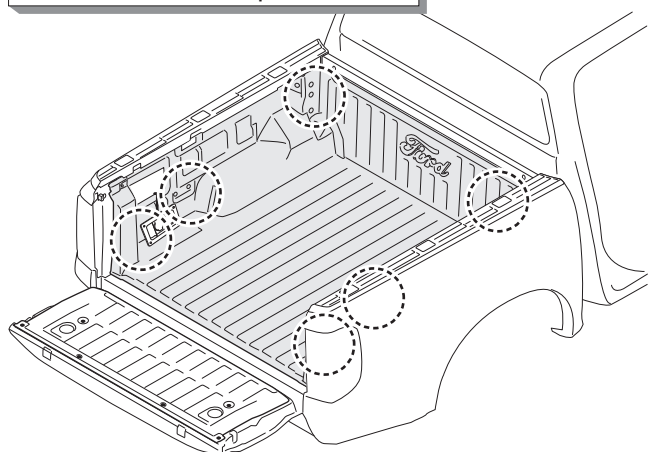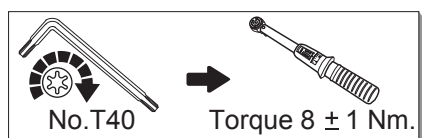


LH/RH (6x)

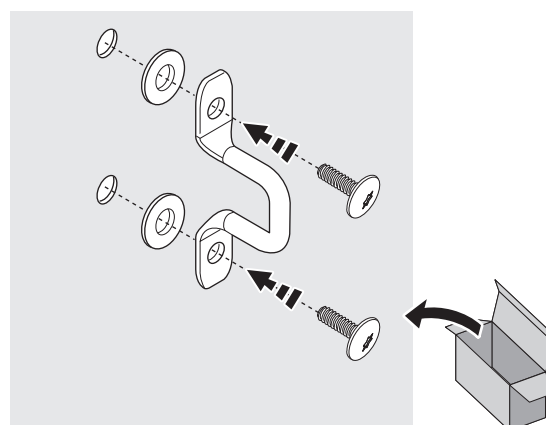

1.11

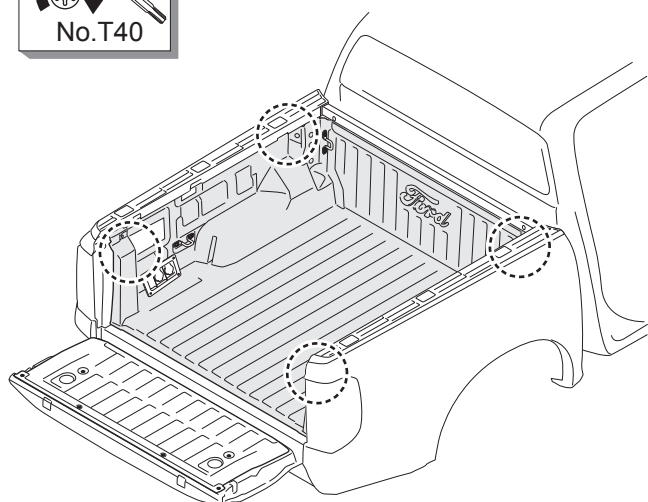




LH/RH (4x)

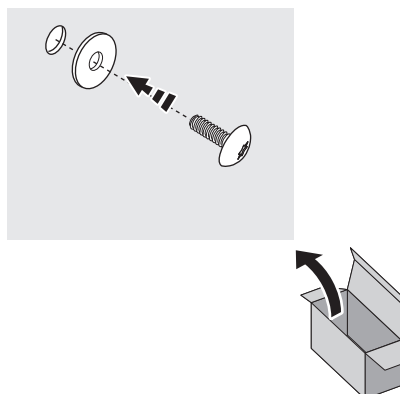



Instruction procedure

※ With bedliner TD type (1.1 - 1.15)



1.12

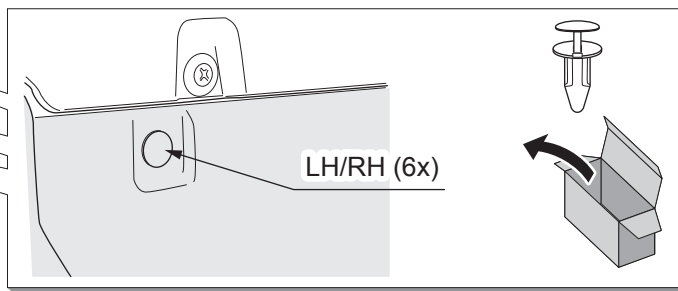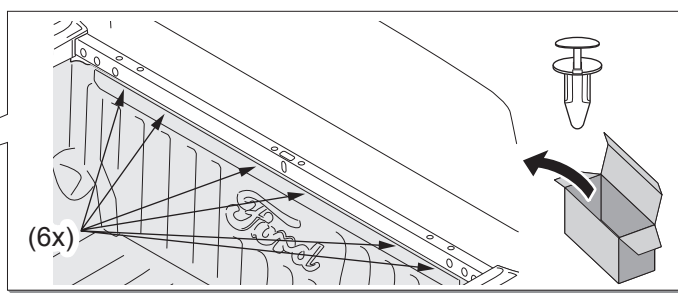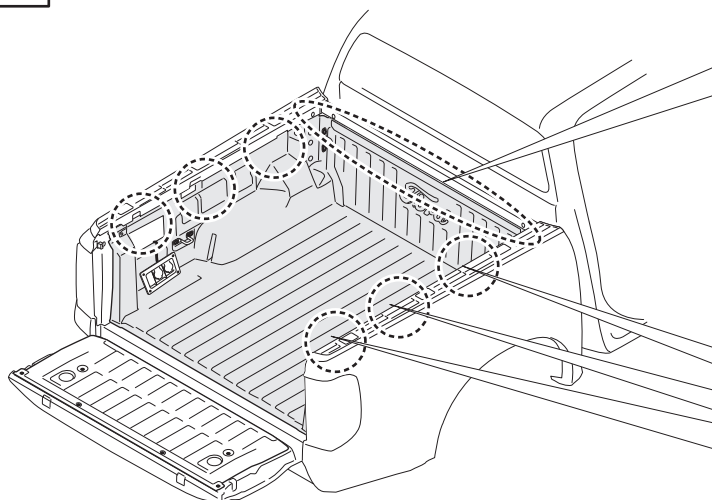

1.13 LH/RH

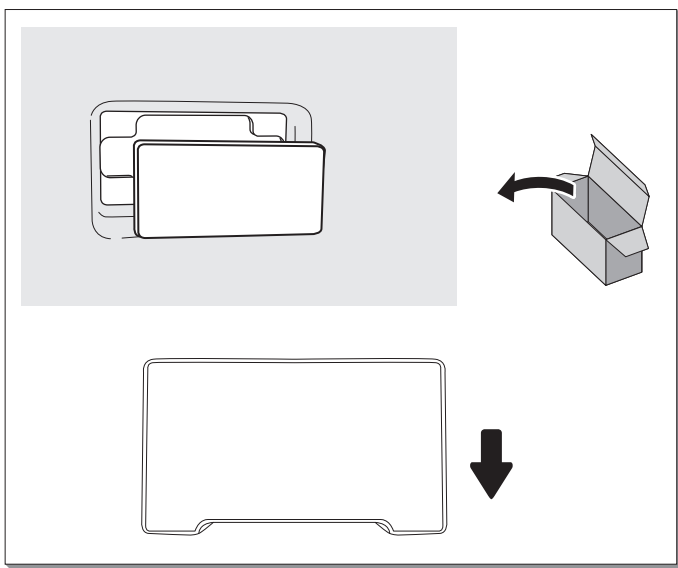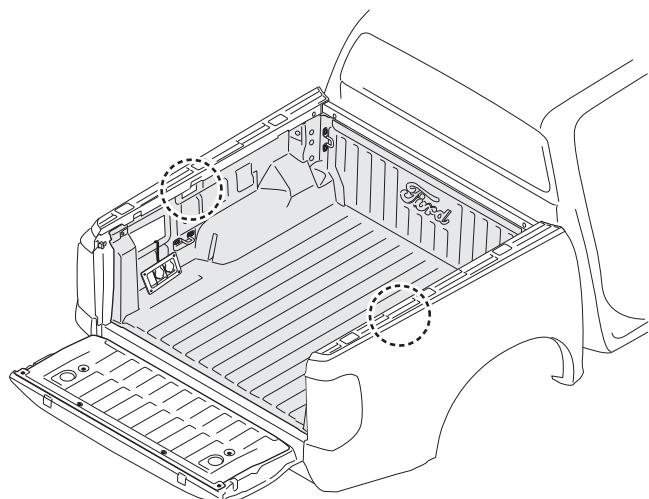


1.14

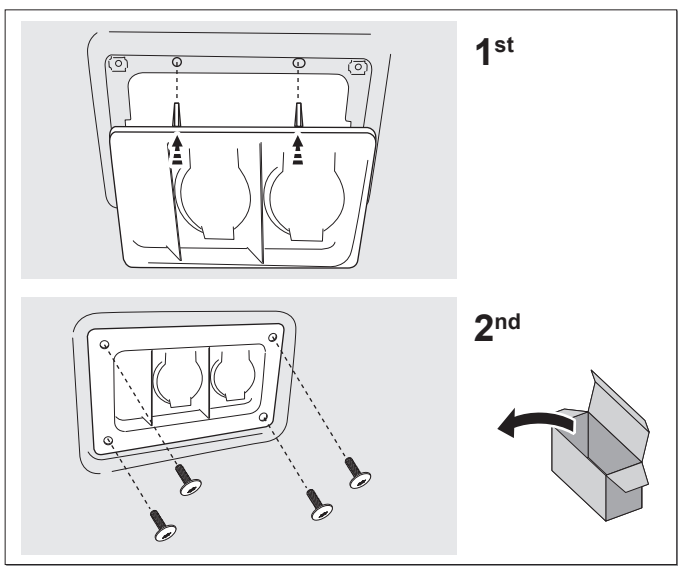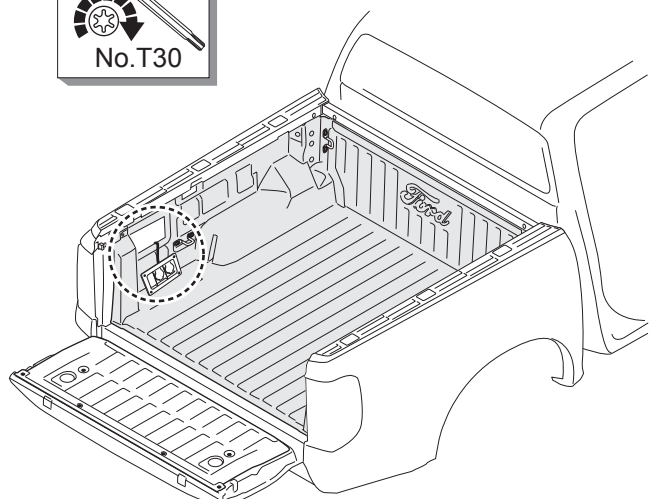

Instruction procedure


※ With bedliner TD type (1.1 - 1.15)

1.15

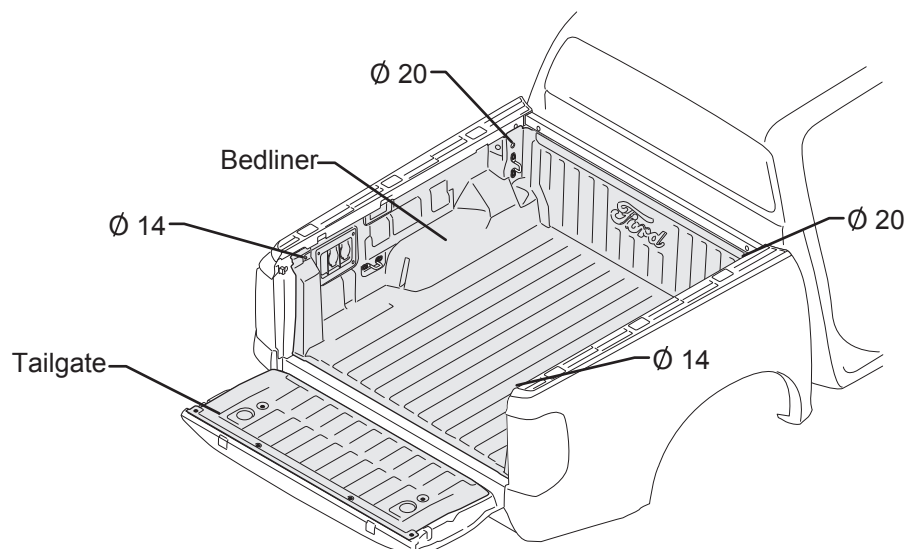


※ Without bedliner (1.1)

1.1

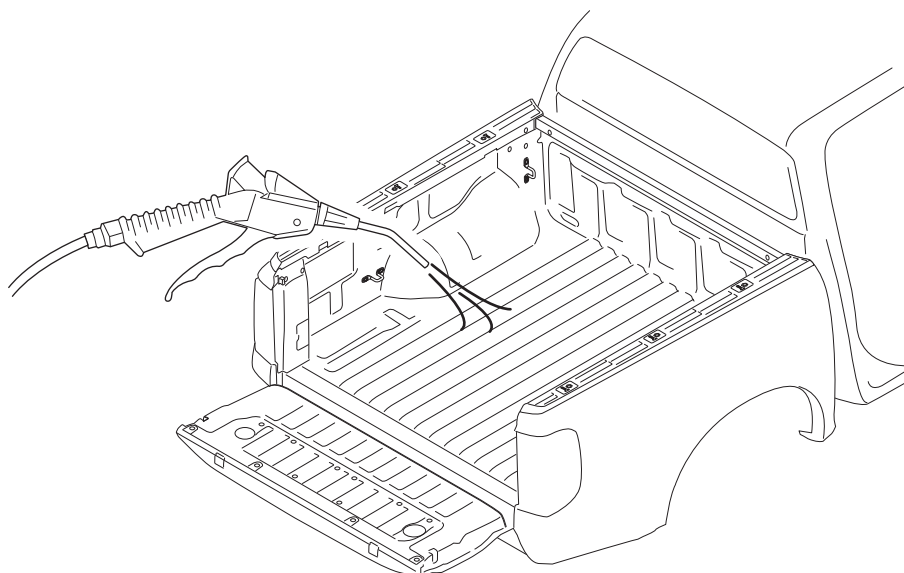


2


2.1

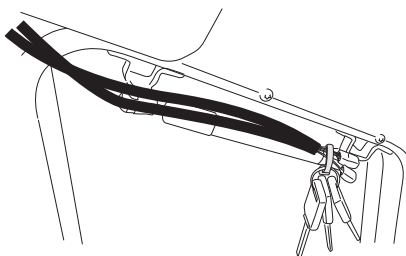

2.2

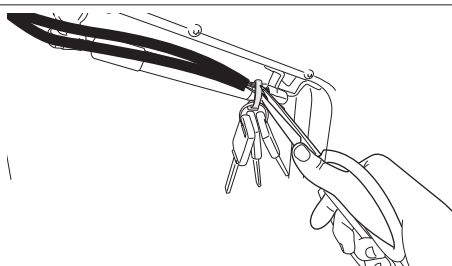


A

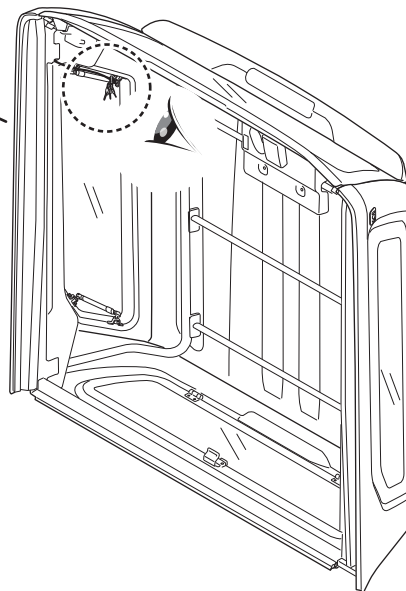


Instruction procedure

3


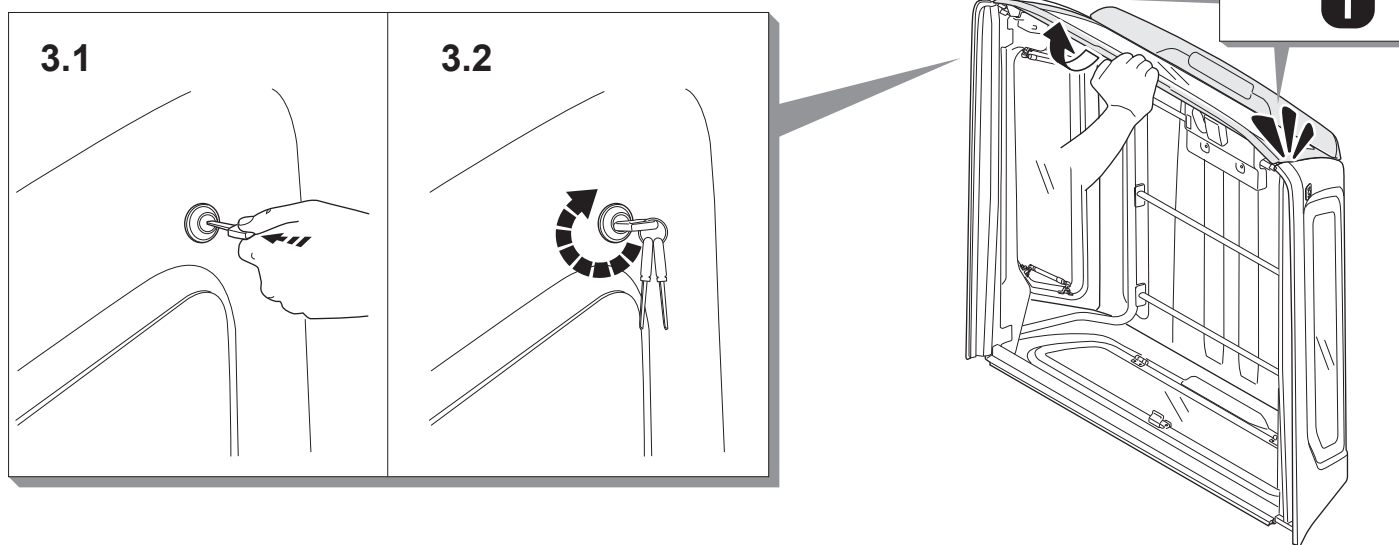


4

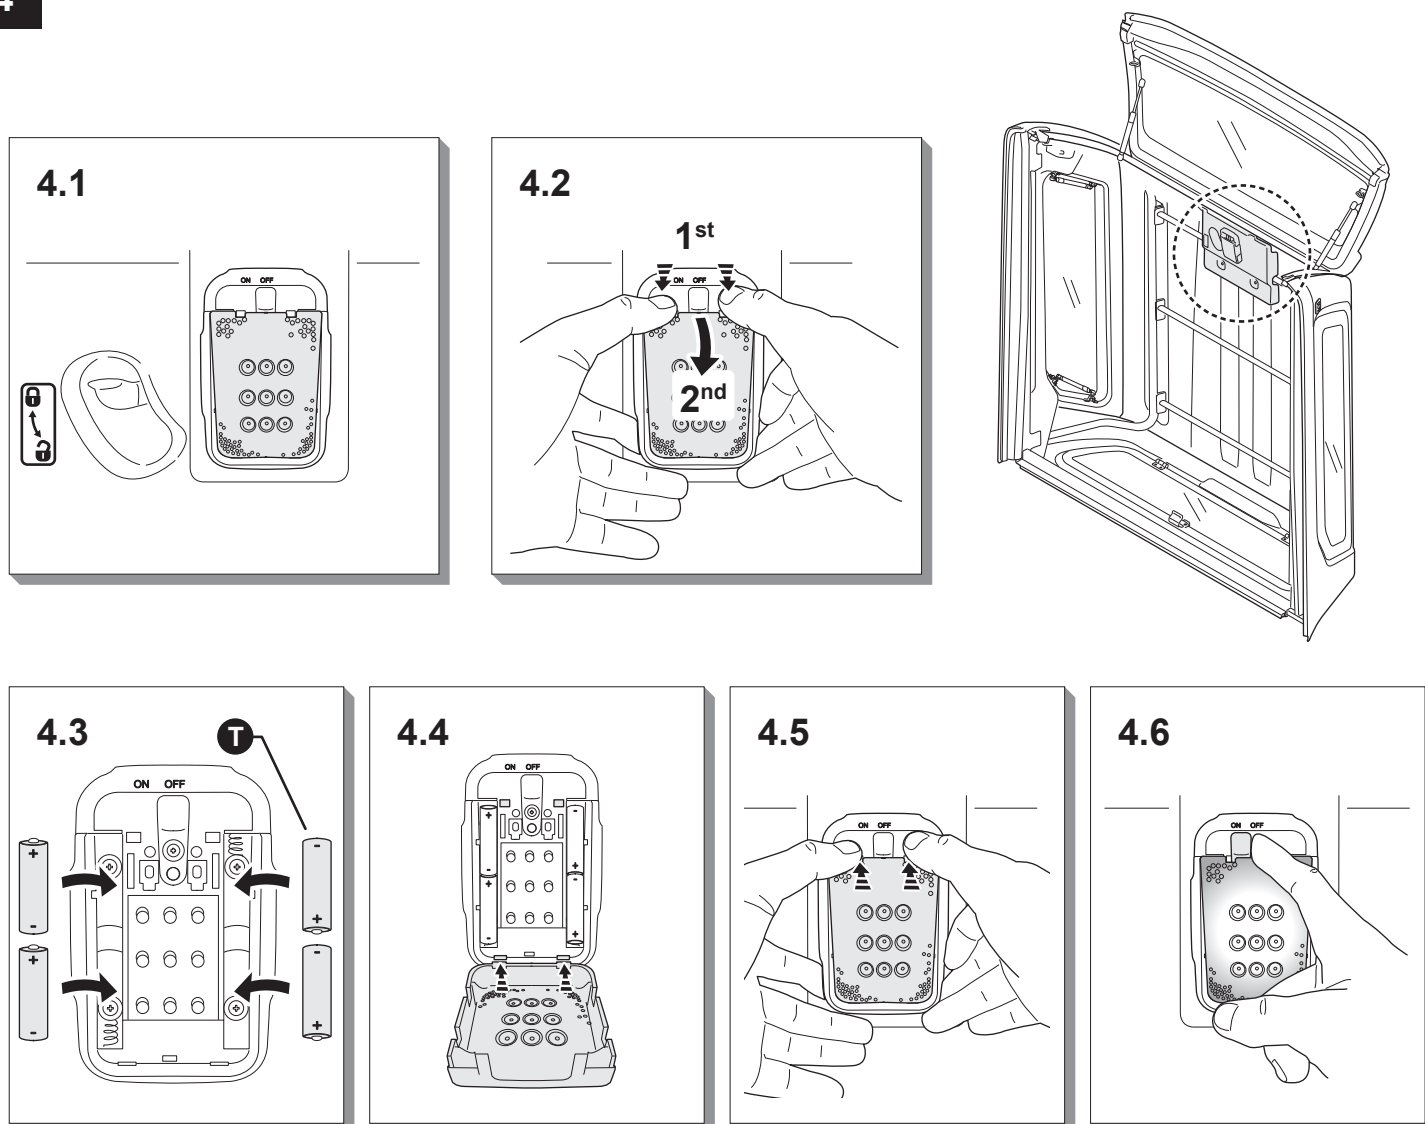



Instruction procedure

5 LH/RH

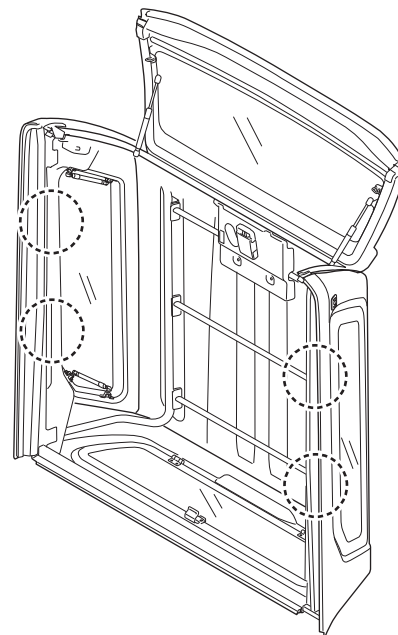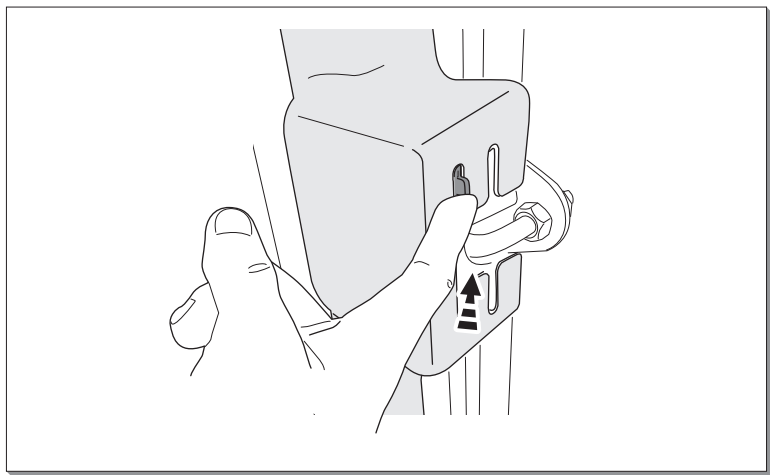


6 LH/RH


6.1

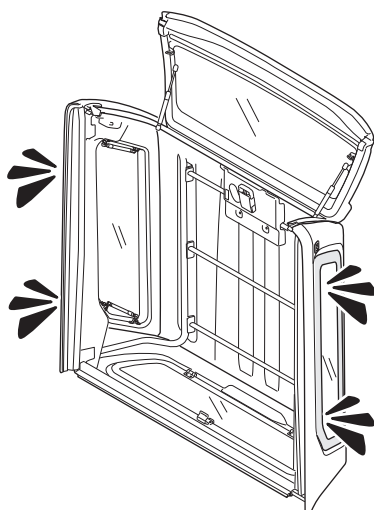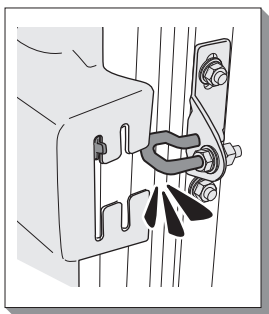





6.2

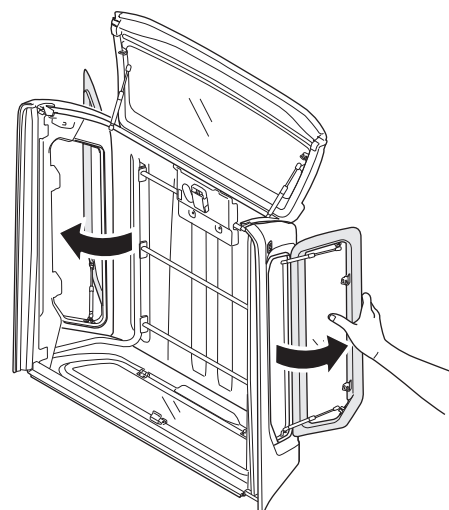


7 LH/RH

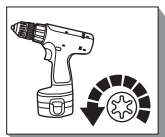




(20x)

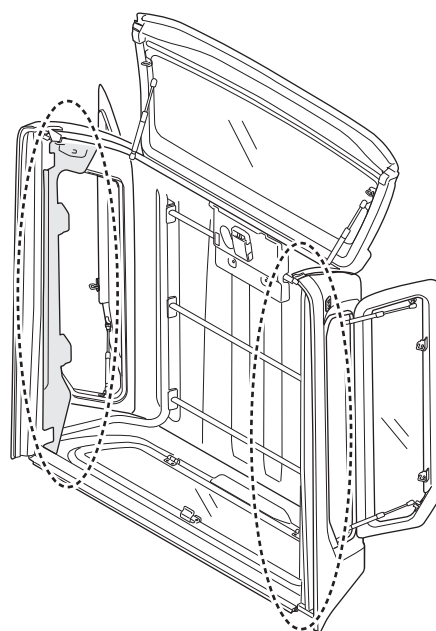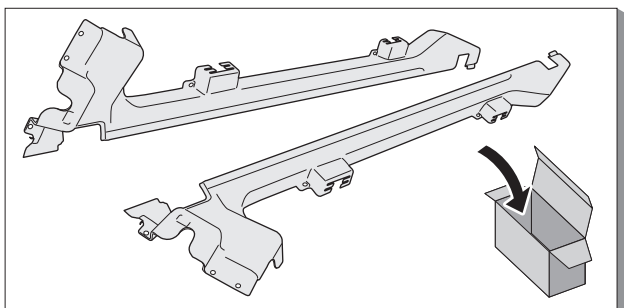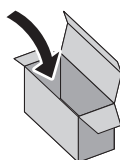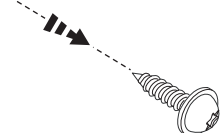


8

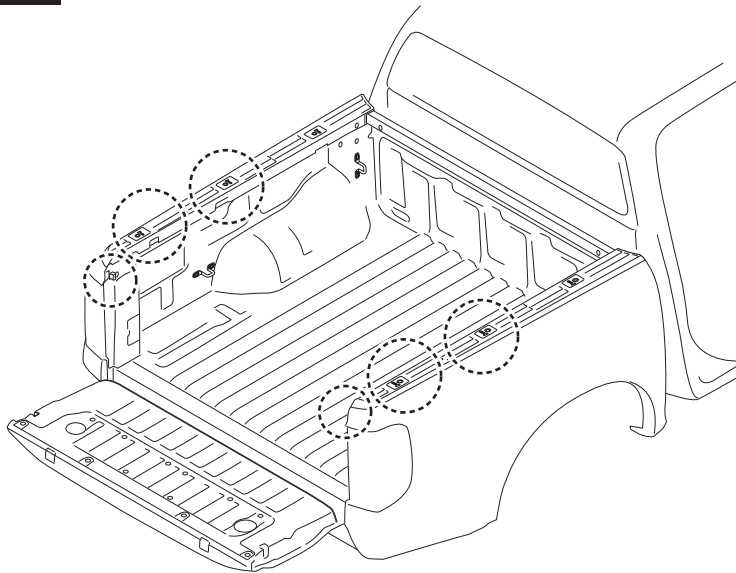



LH/RH
(4x)

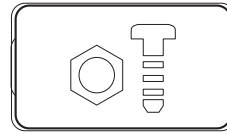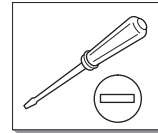


LH/RH
(2x)

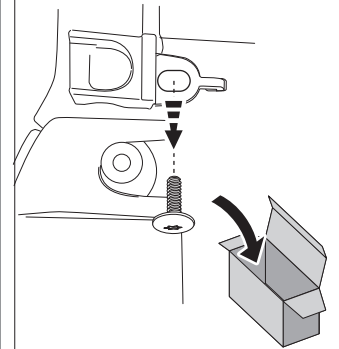


9

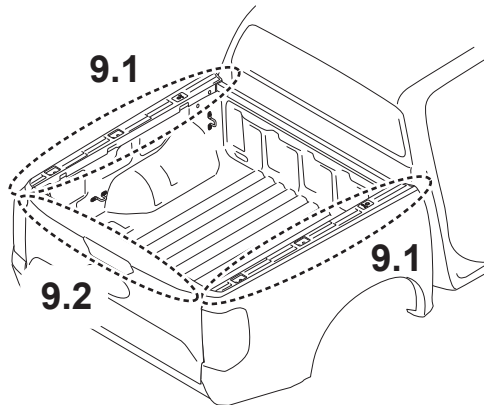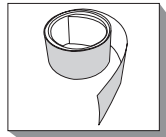

9.1 LH/RH

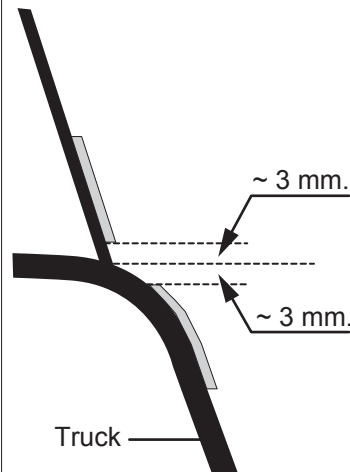





9.2

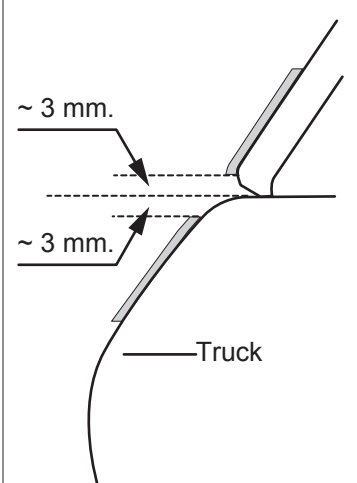

10




LH/RH

Section

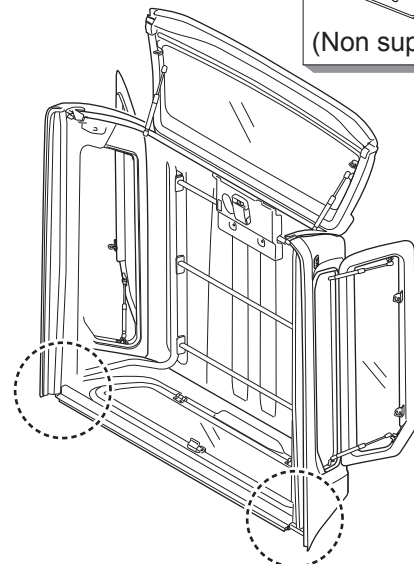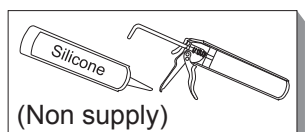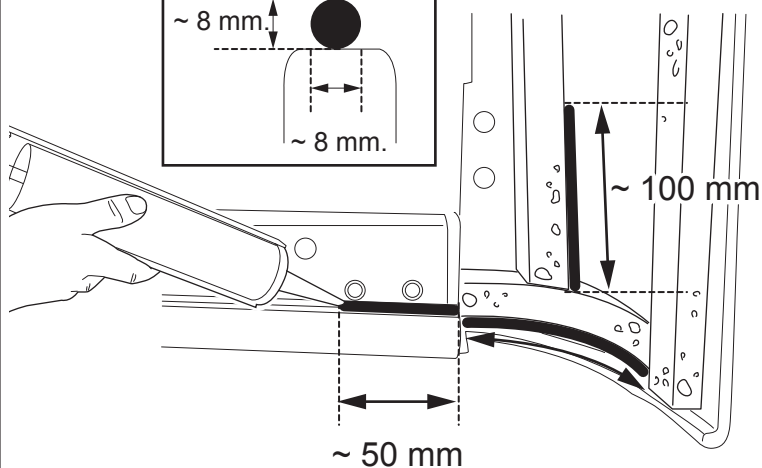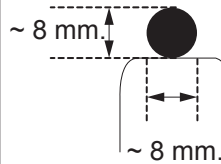

Instruction procedure



11 LH/RH

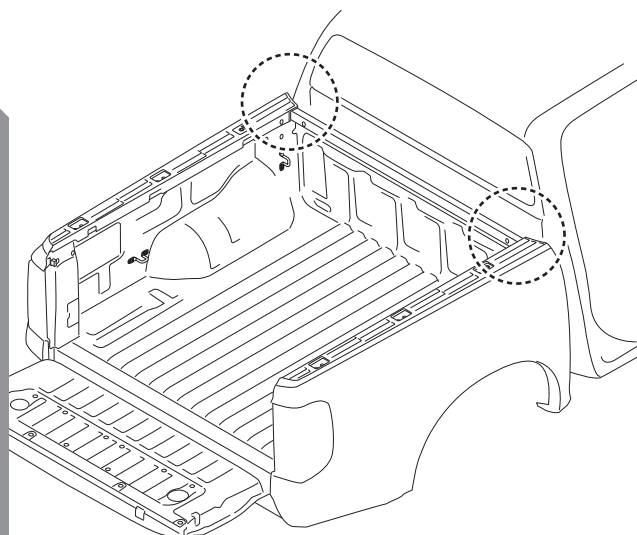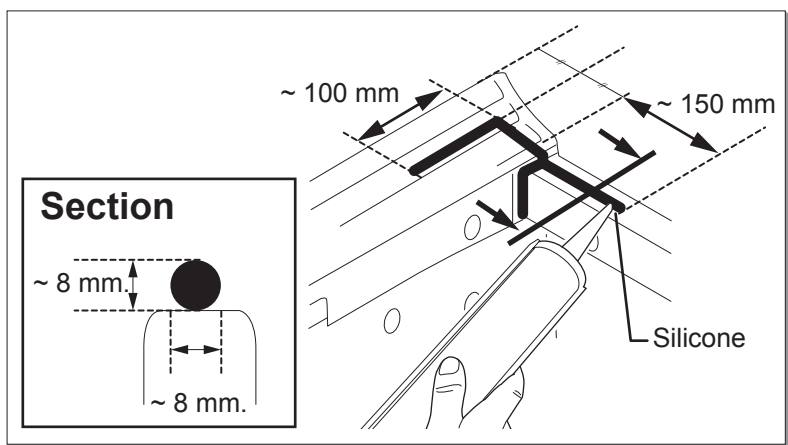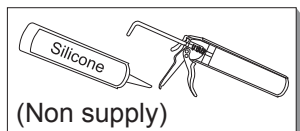

12



※ With bedliner DC under rail type

※ With KD liner DC under rail type

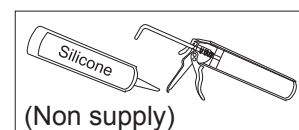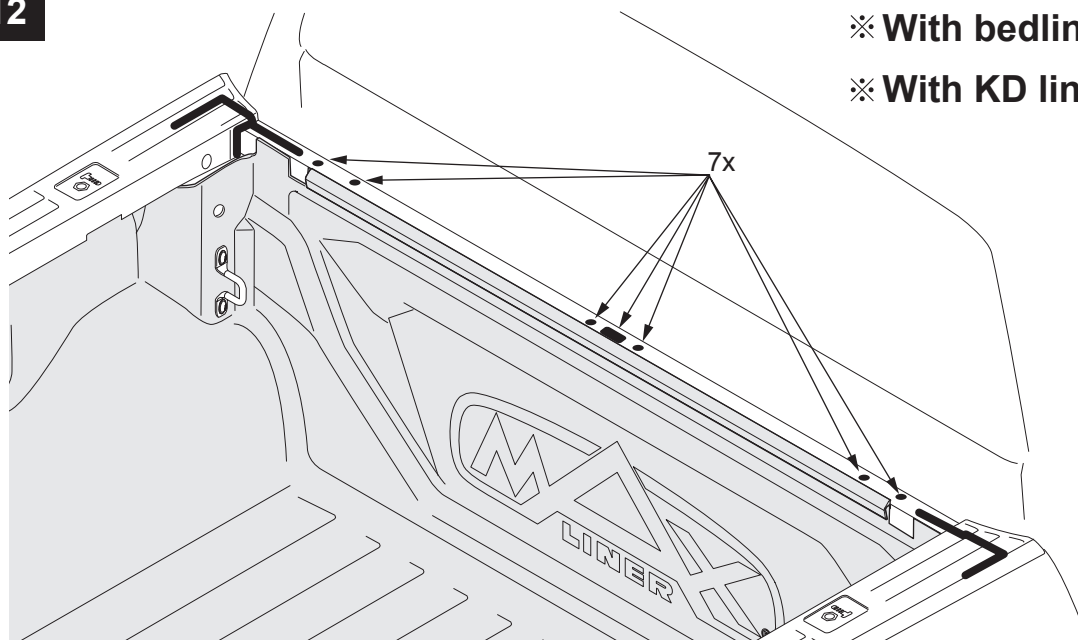



※ With bedliner TD type

※ Without bedliner

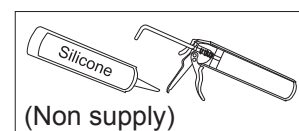
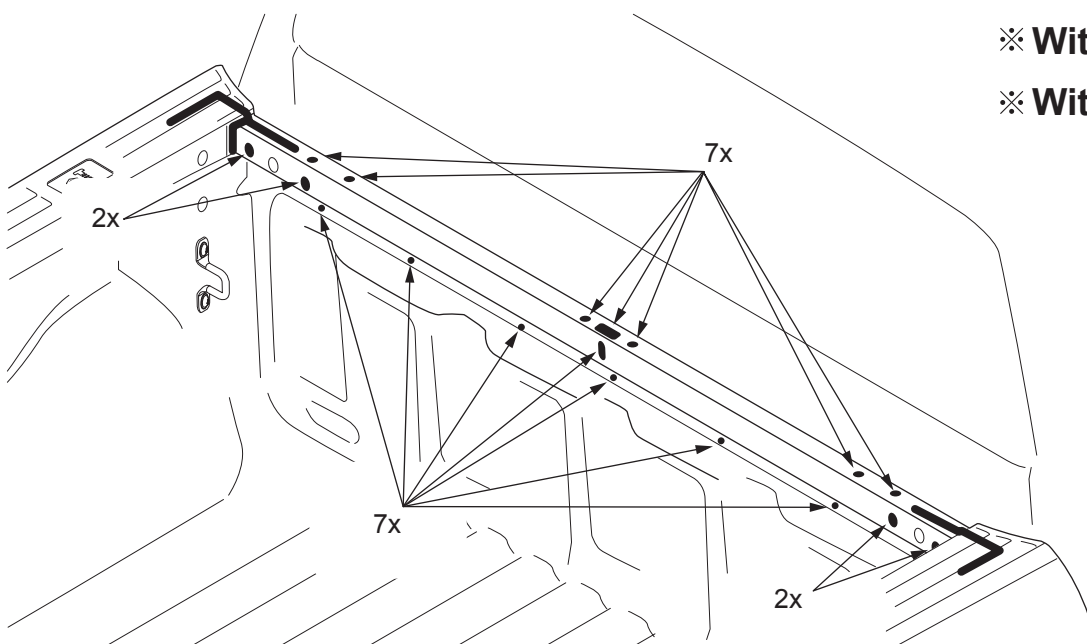


Instruction procedure


13

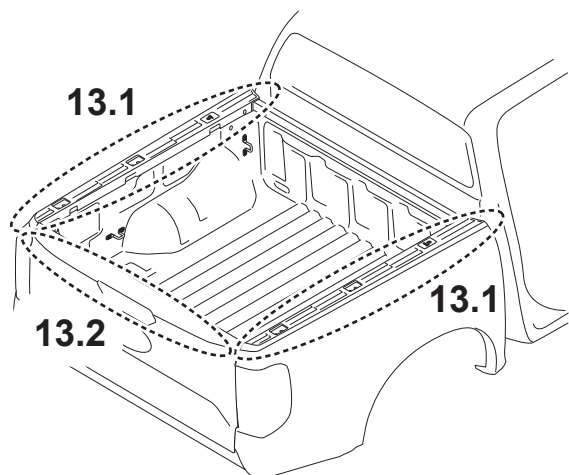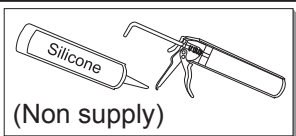


13.1 LH/RH

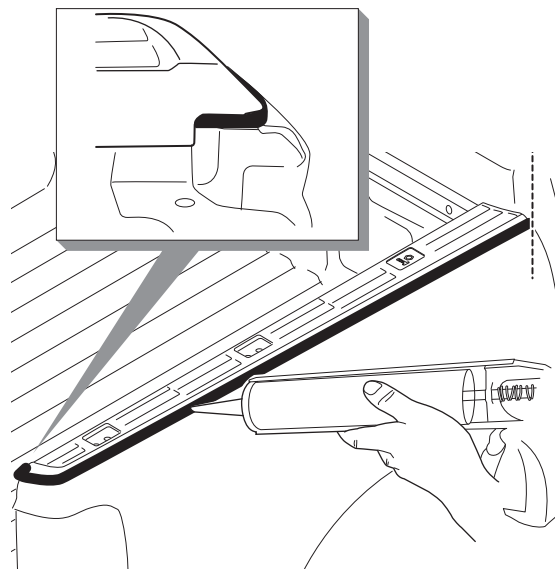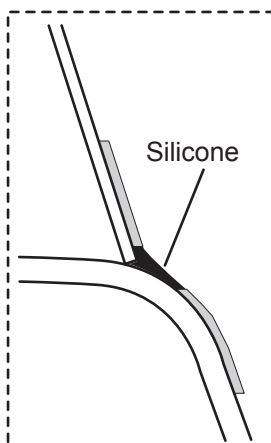




13.2

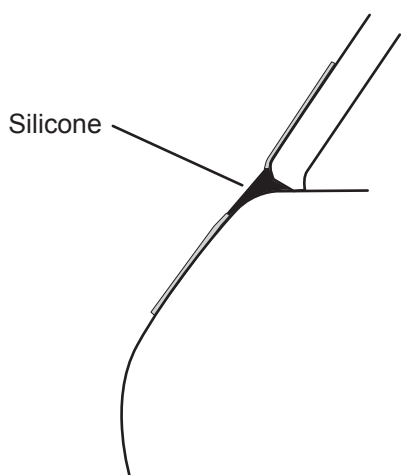

13.3



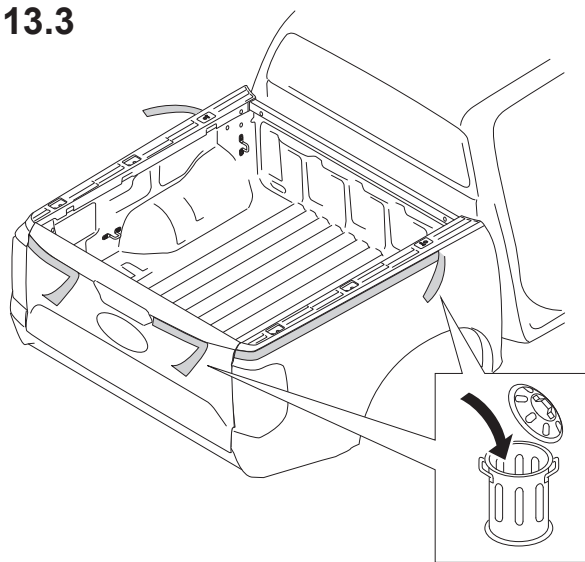


14 LH/RH

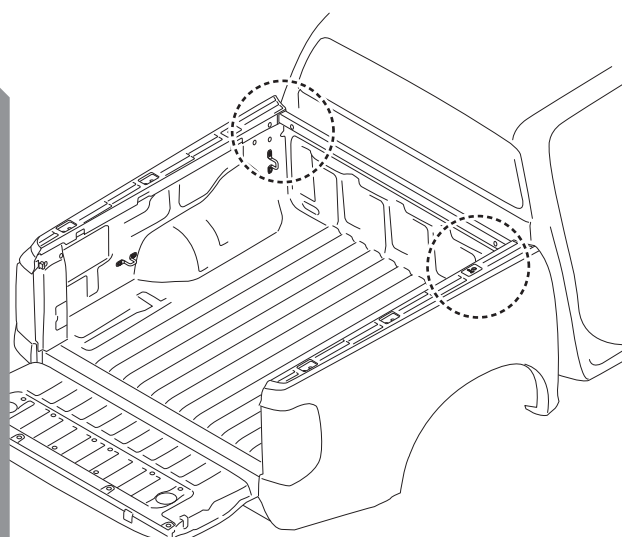
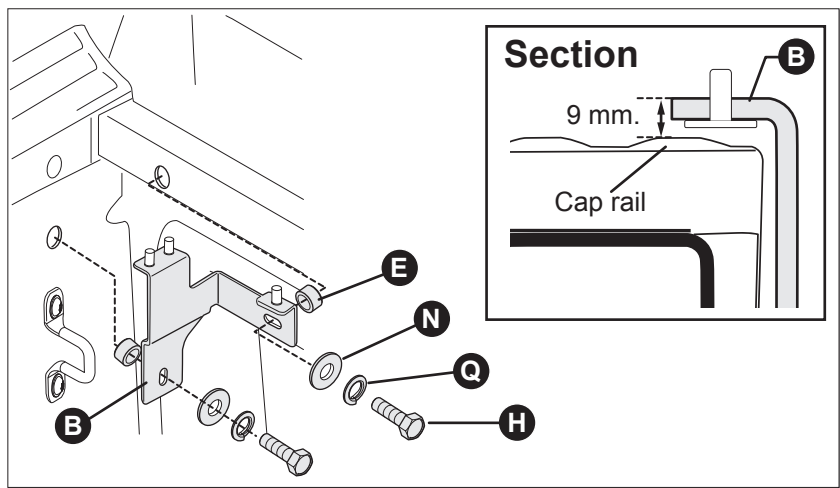
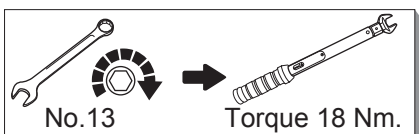


Instruction procedure

15 LH/RH

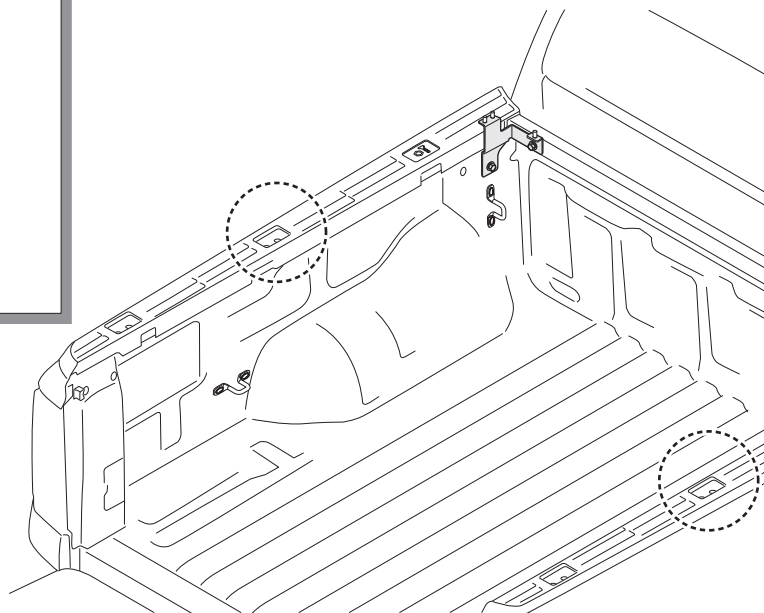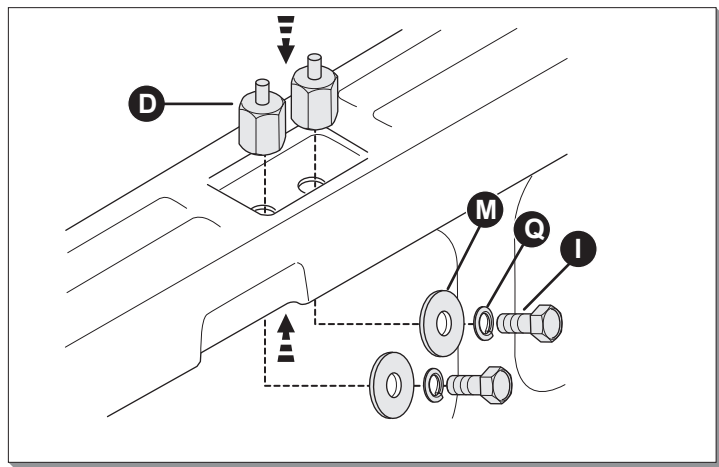
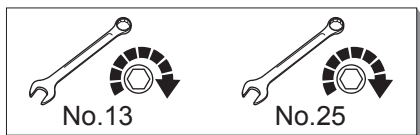


16 LH/RH

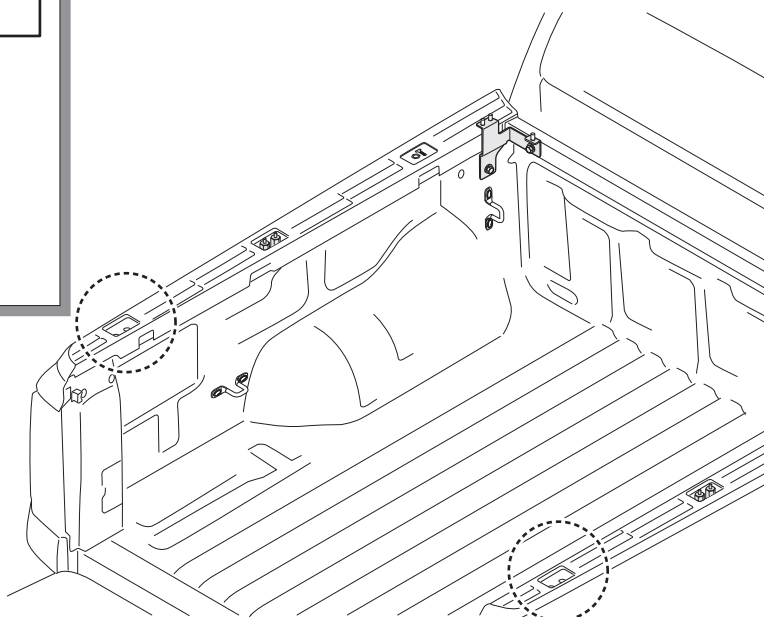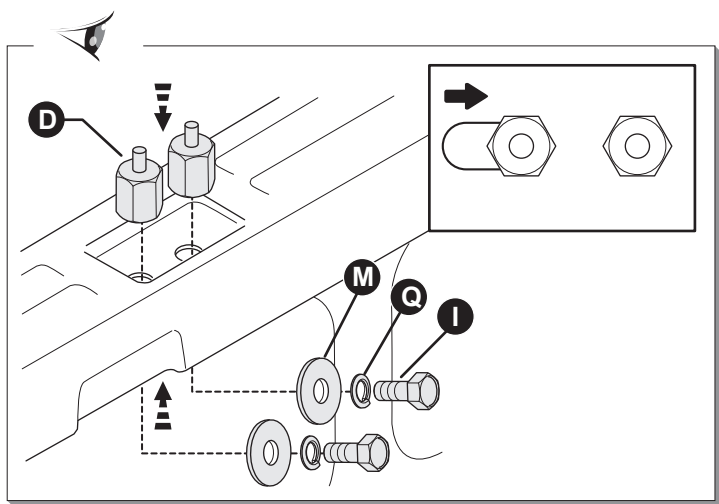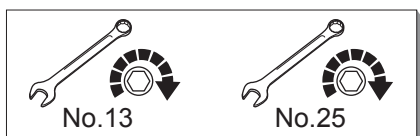


Instruction procedure


17

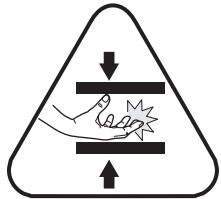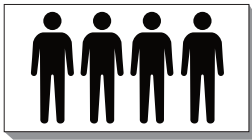



**BEWARE OF
CRUSHING HAND**

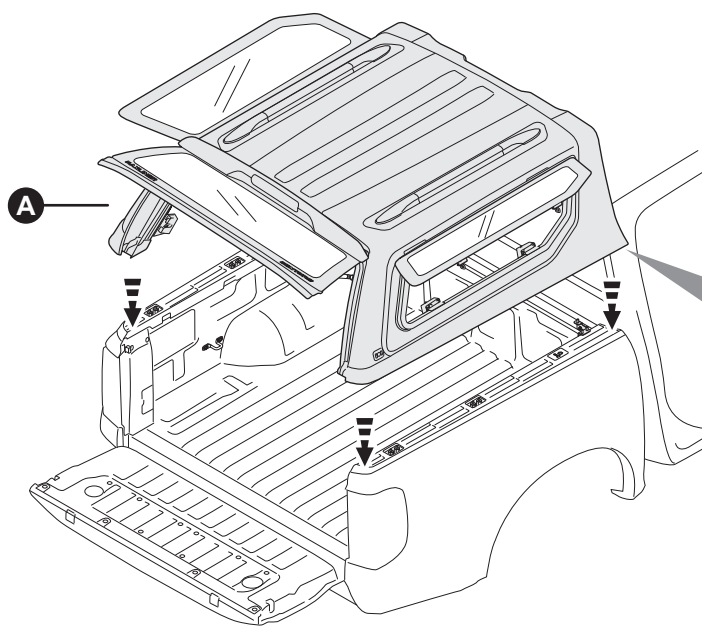

LH/RH



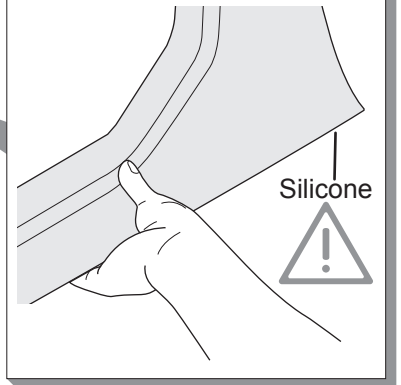


18 **LH/RH**

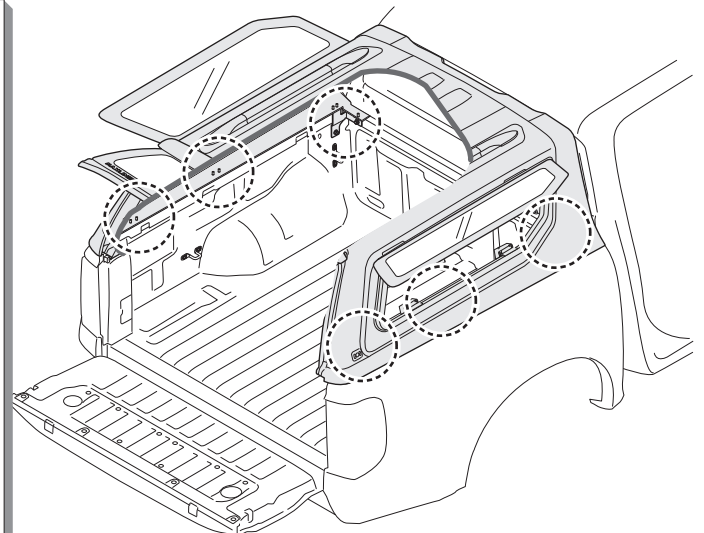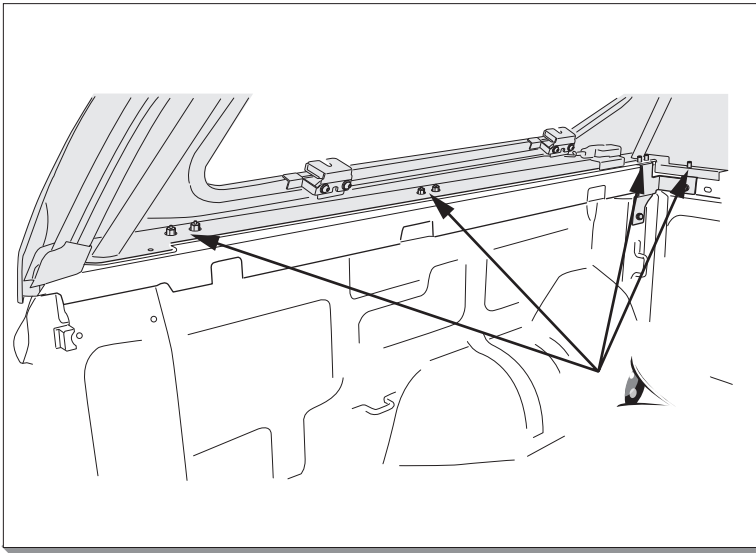




19

LH = RH

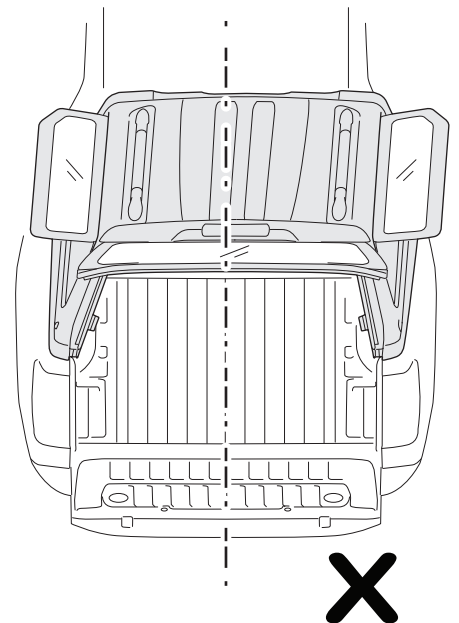
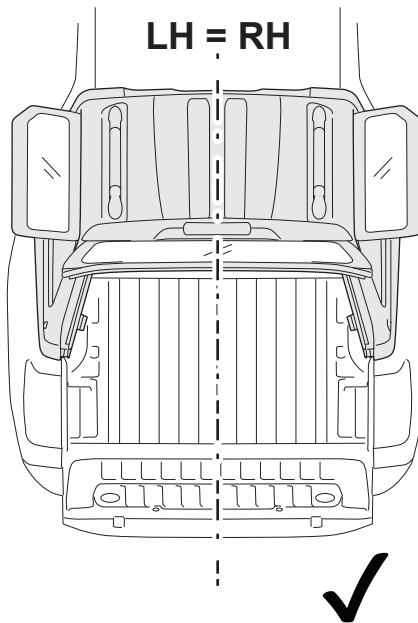
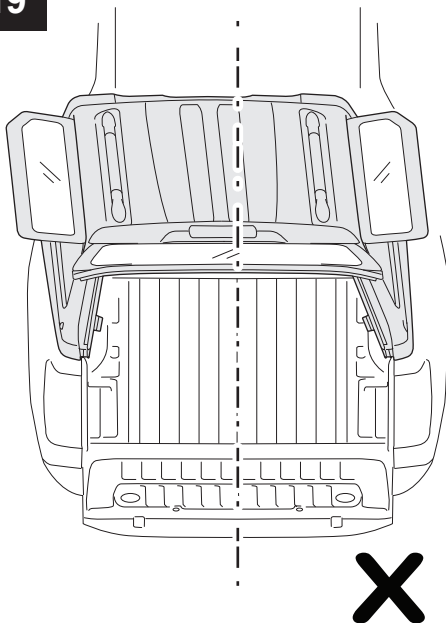


Instruction procedure

20 LH/RH

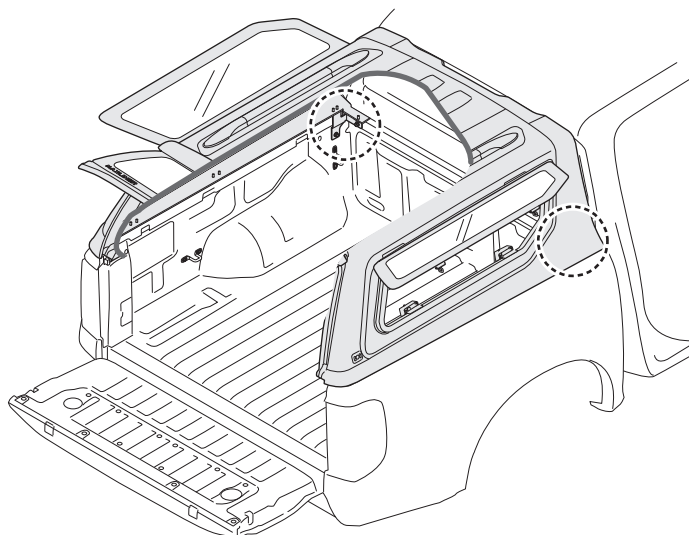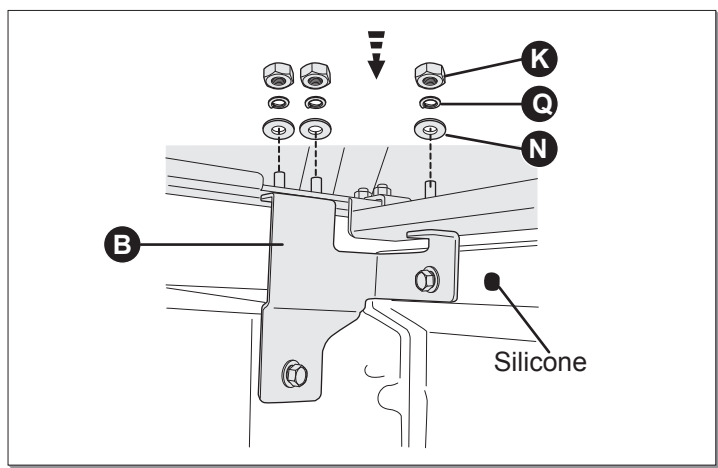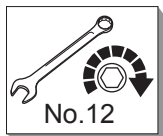


21 LH/RH

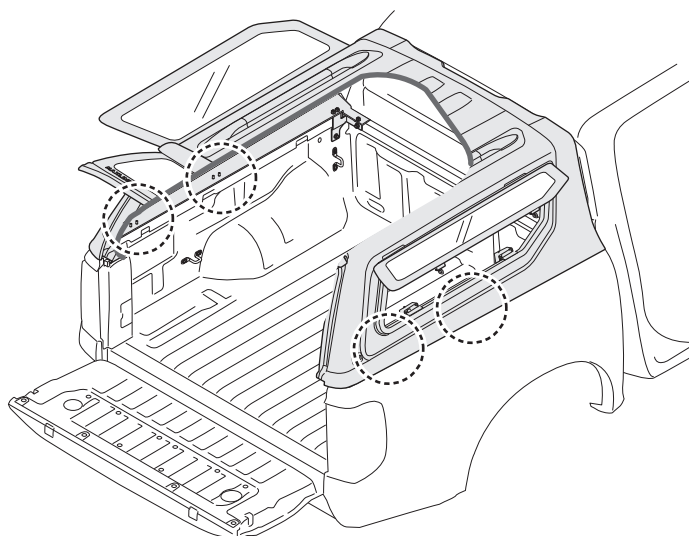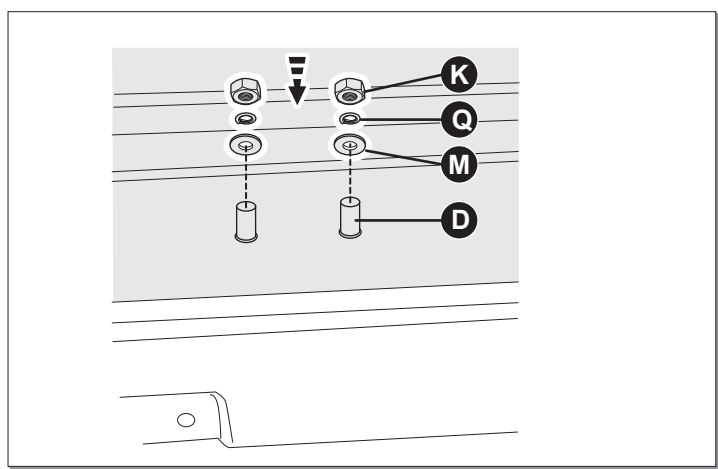
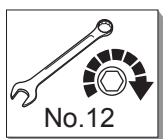


Instruction procedure




22 LH/RH

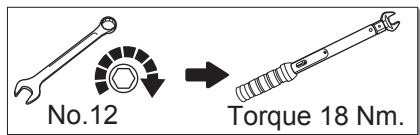



① → ⑥





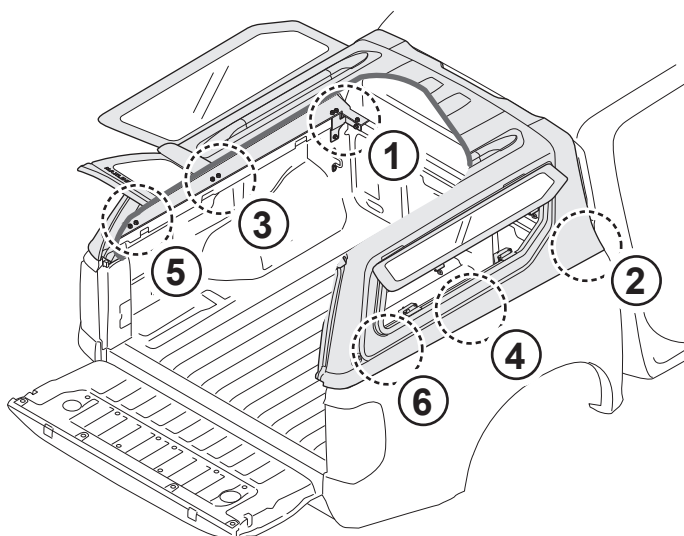
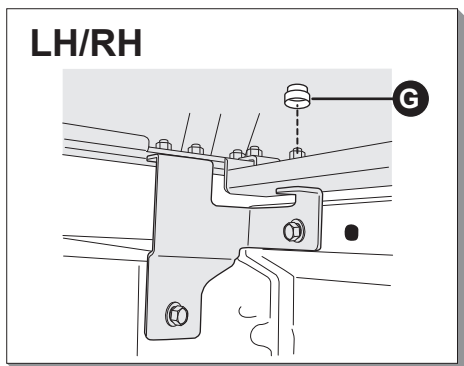


23 LH/RH

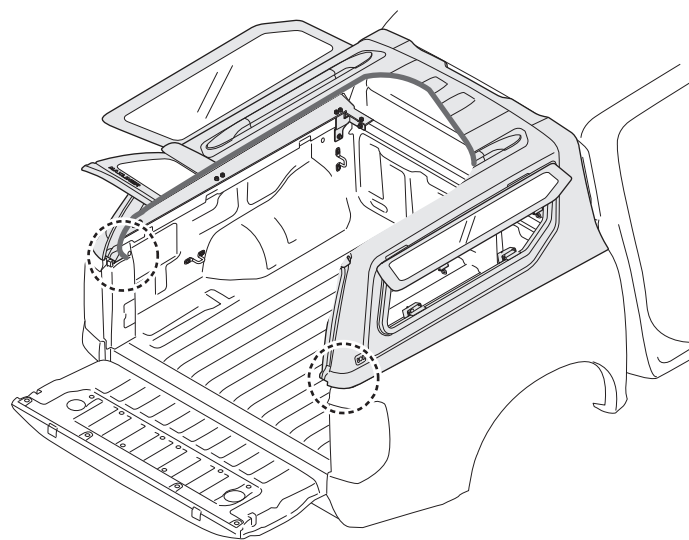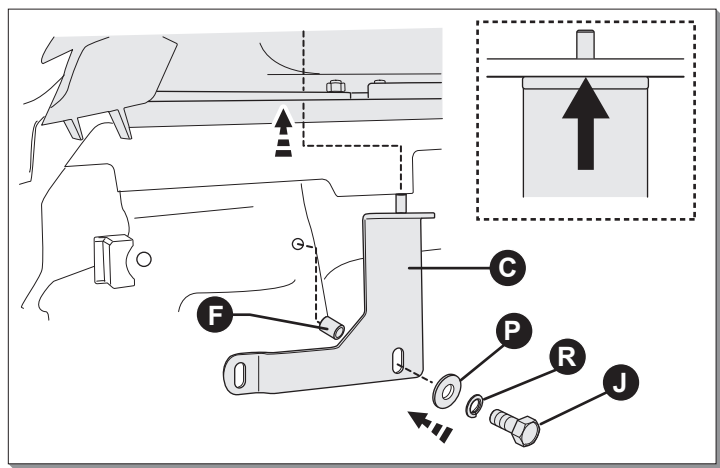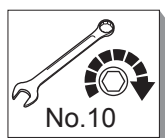


24 LH/RH

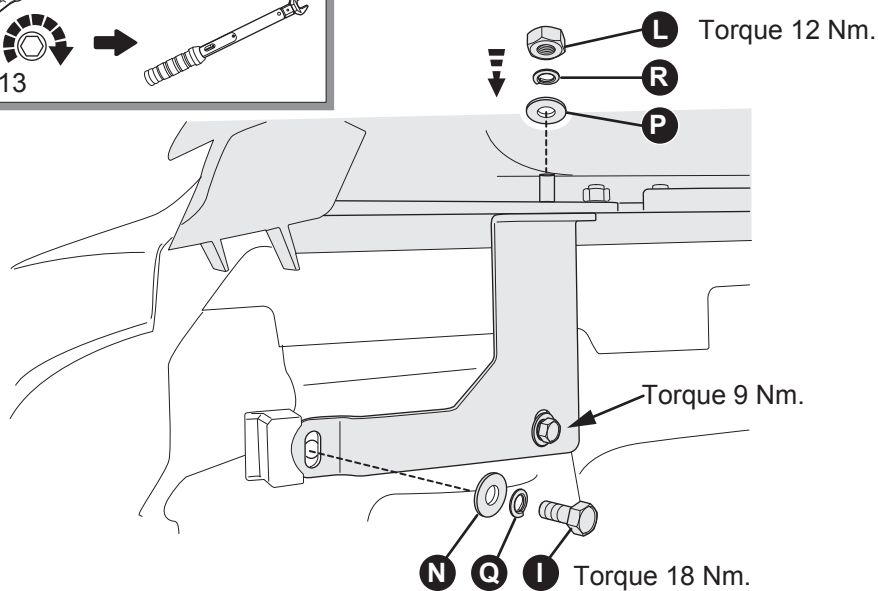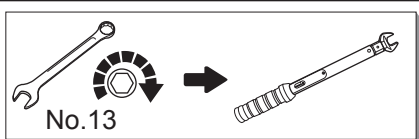

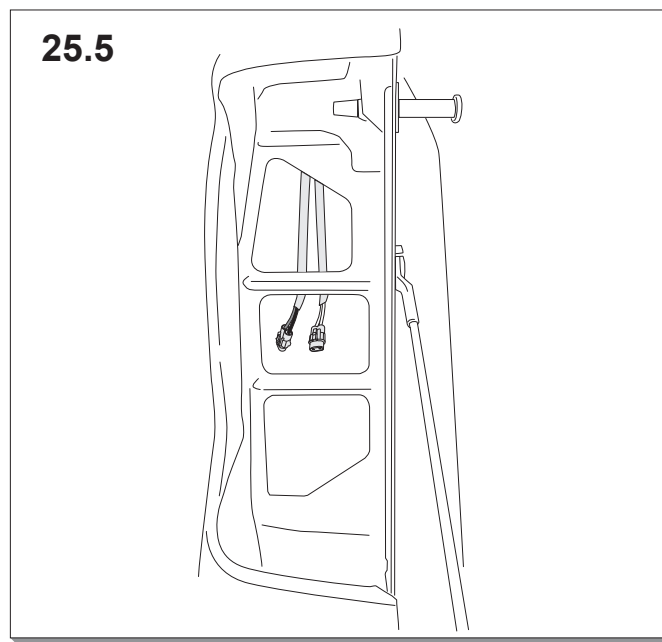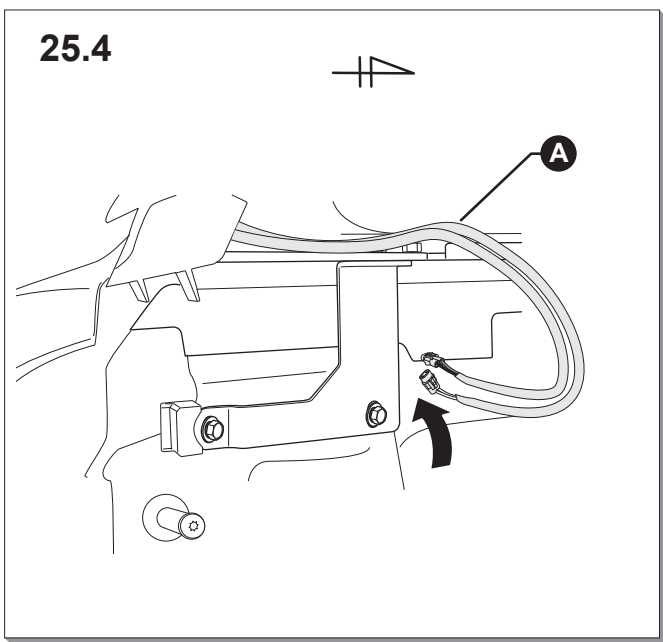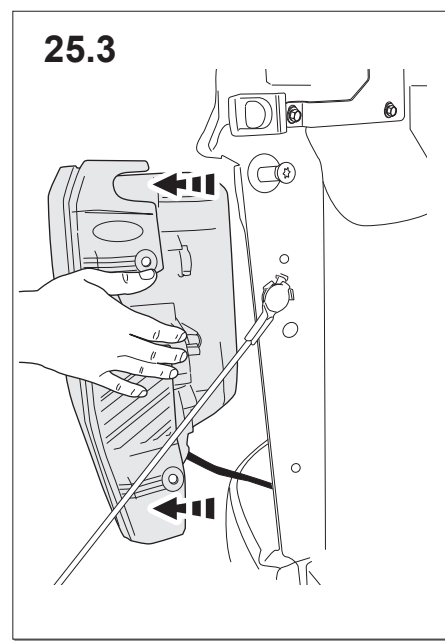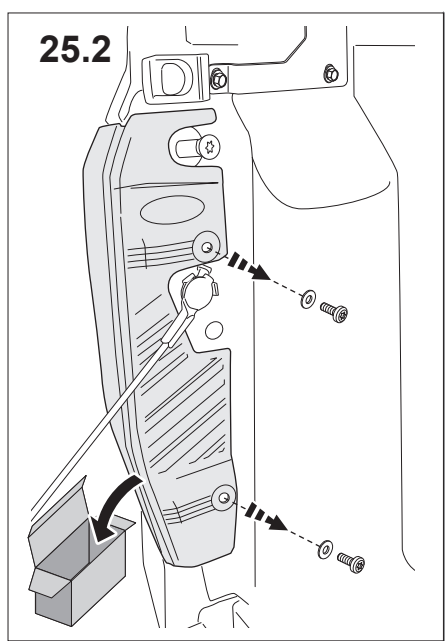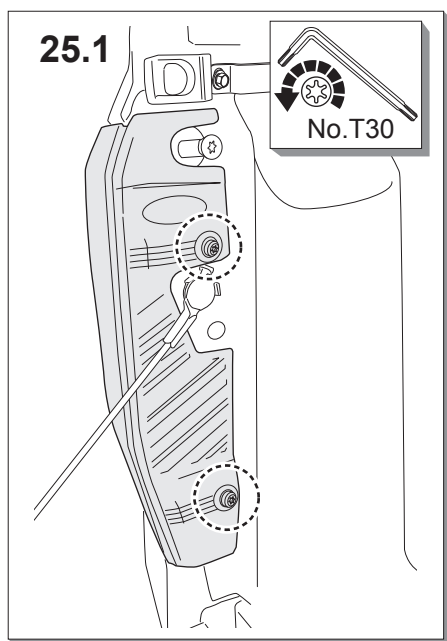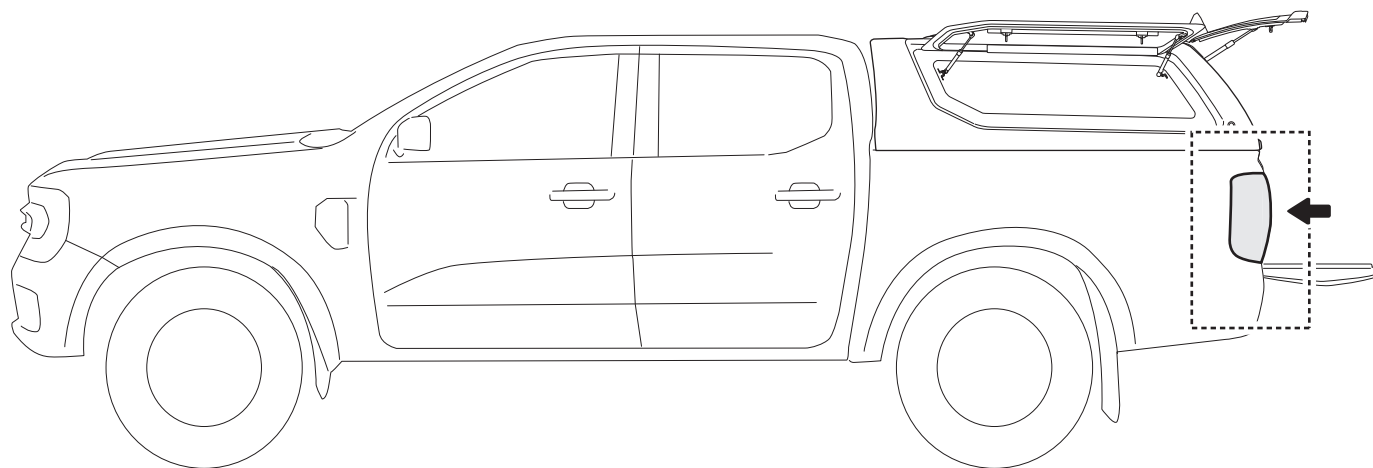


Instruction procedure


26

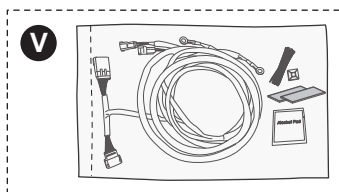


26.1

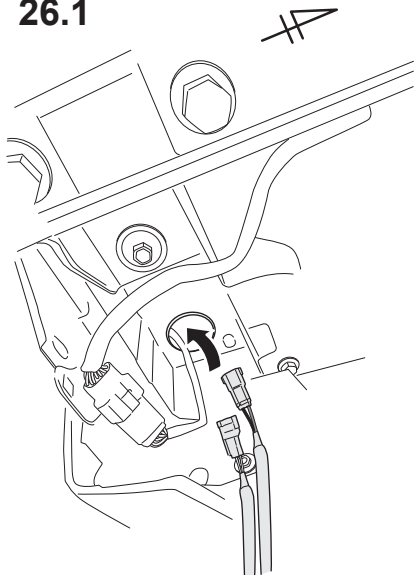


26.2

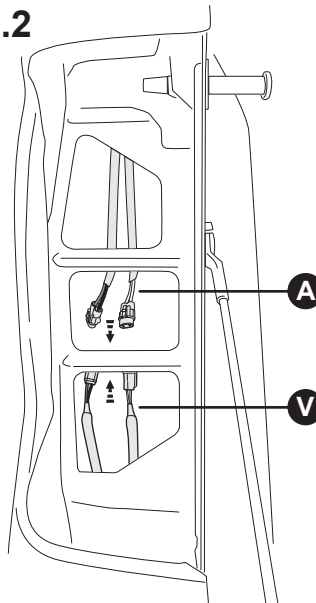


26.3

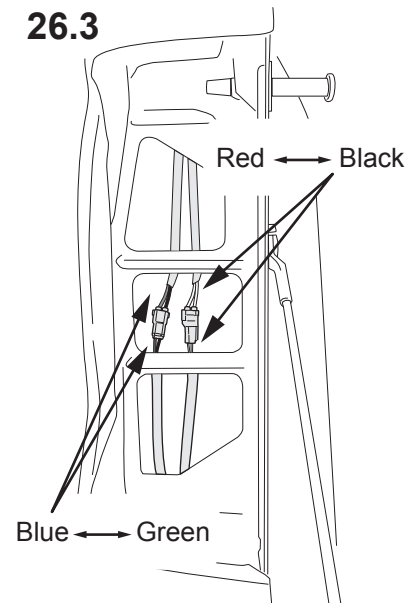


26.4

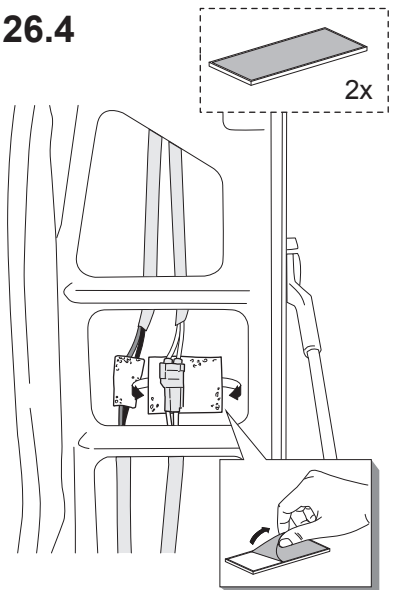

26.5

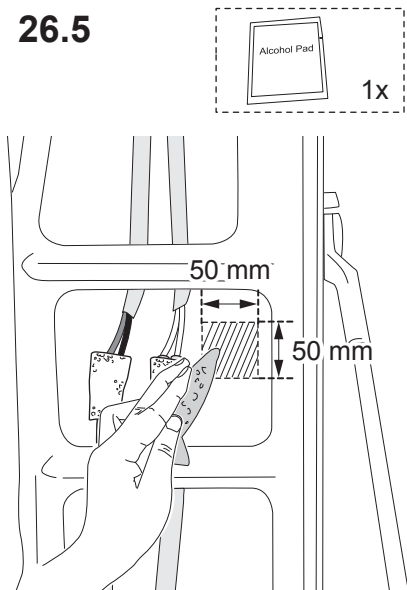


26.6

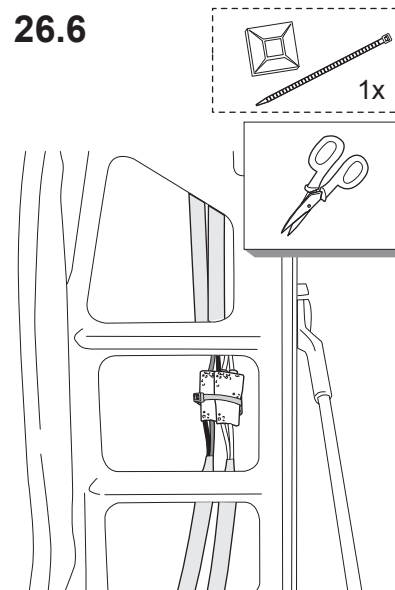


Instruction procedure

27


27.1

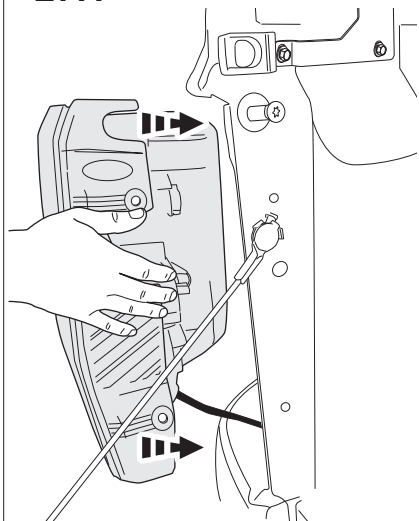


27.2

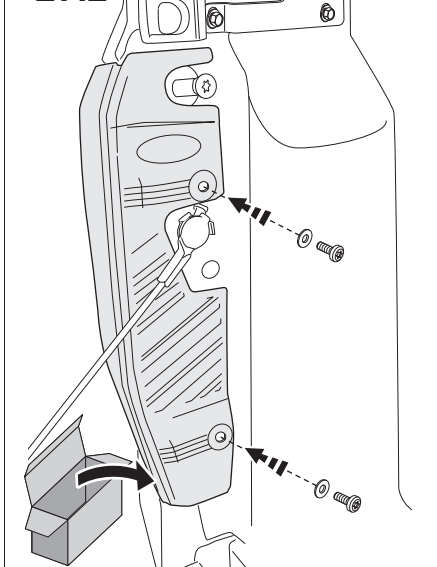


27.3







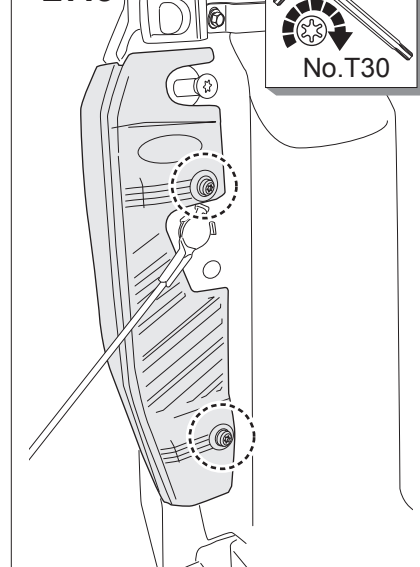



28

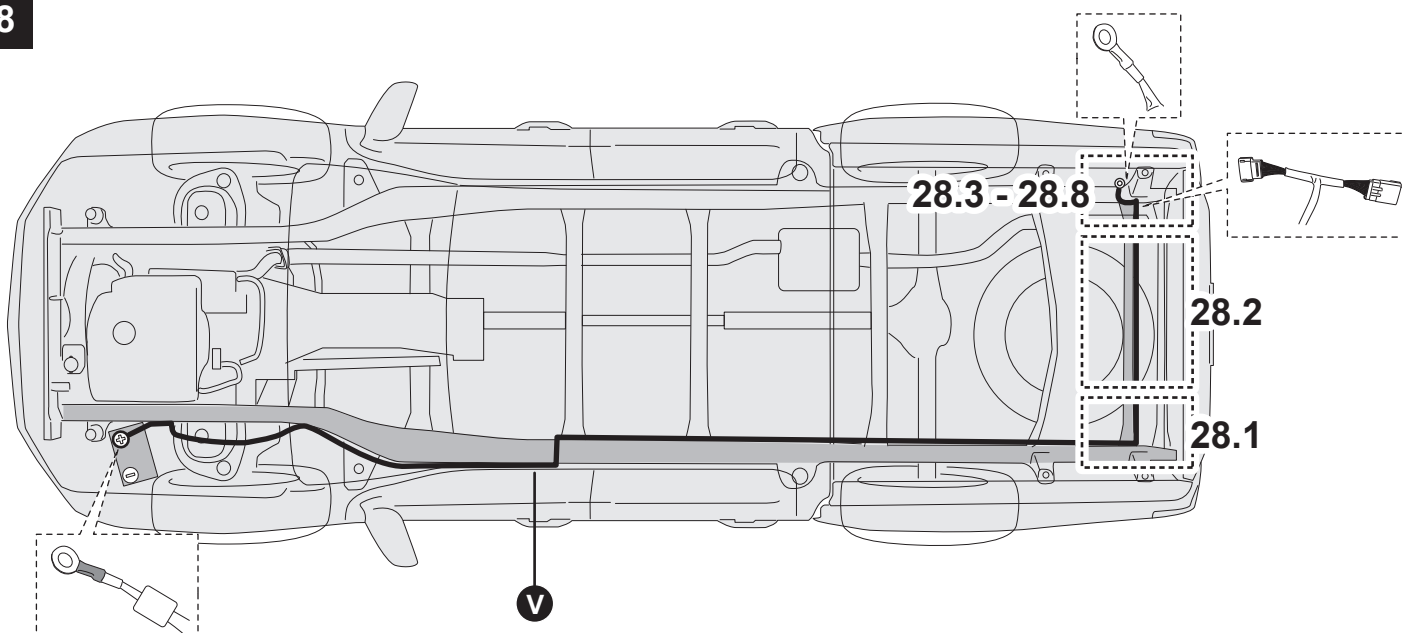



28.1



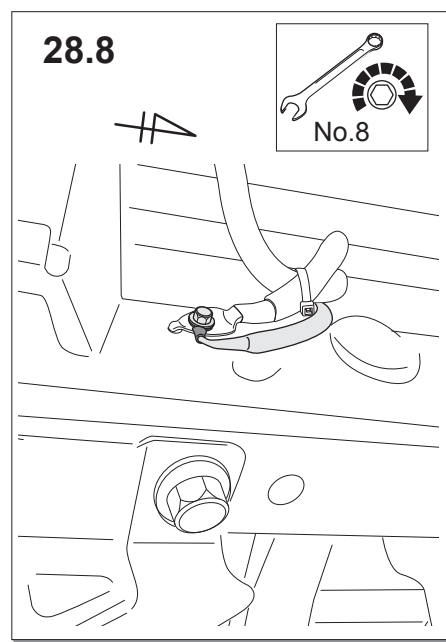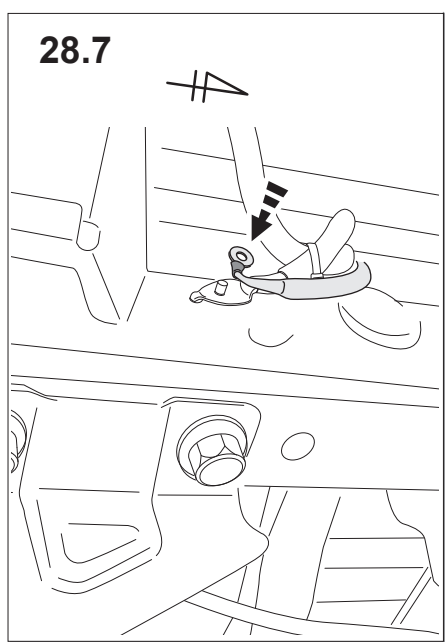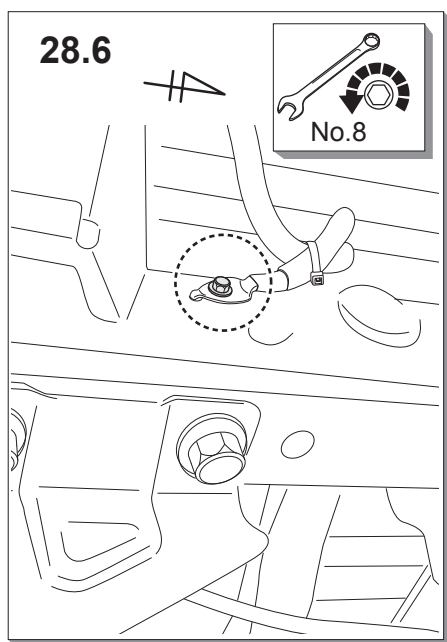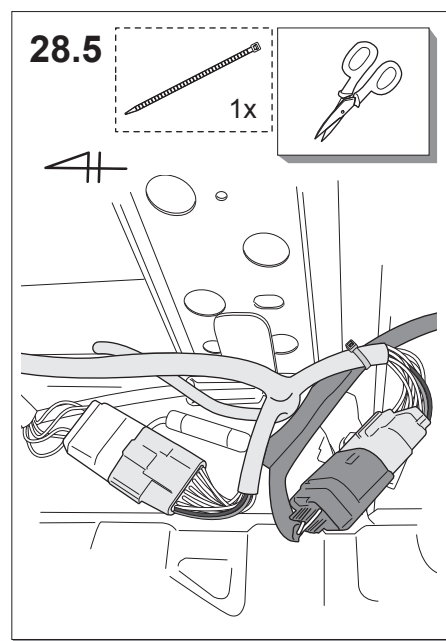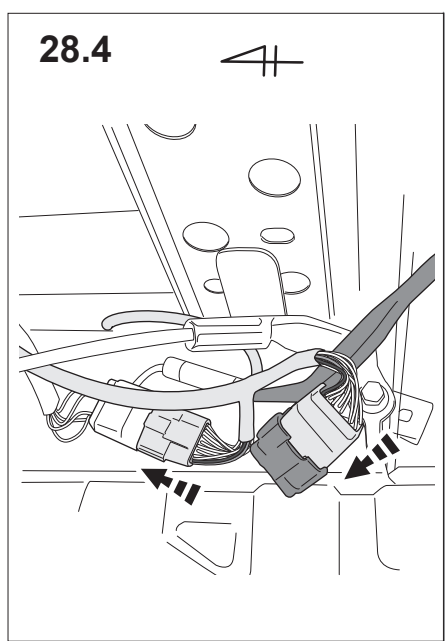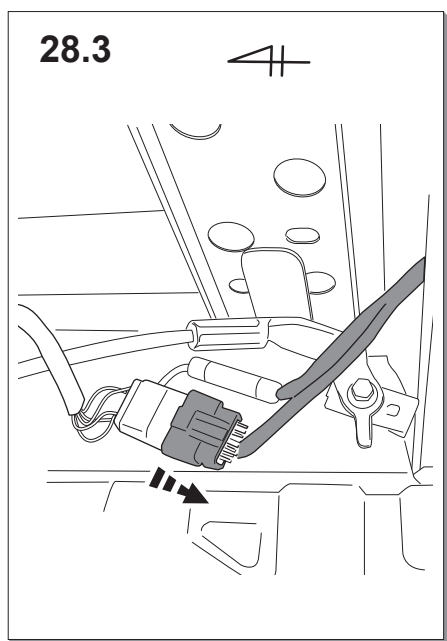
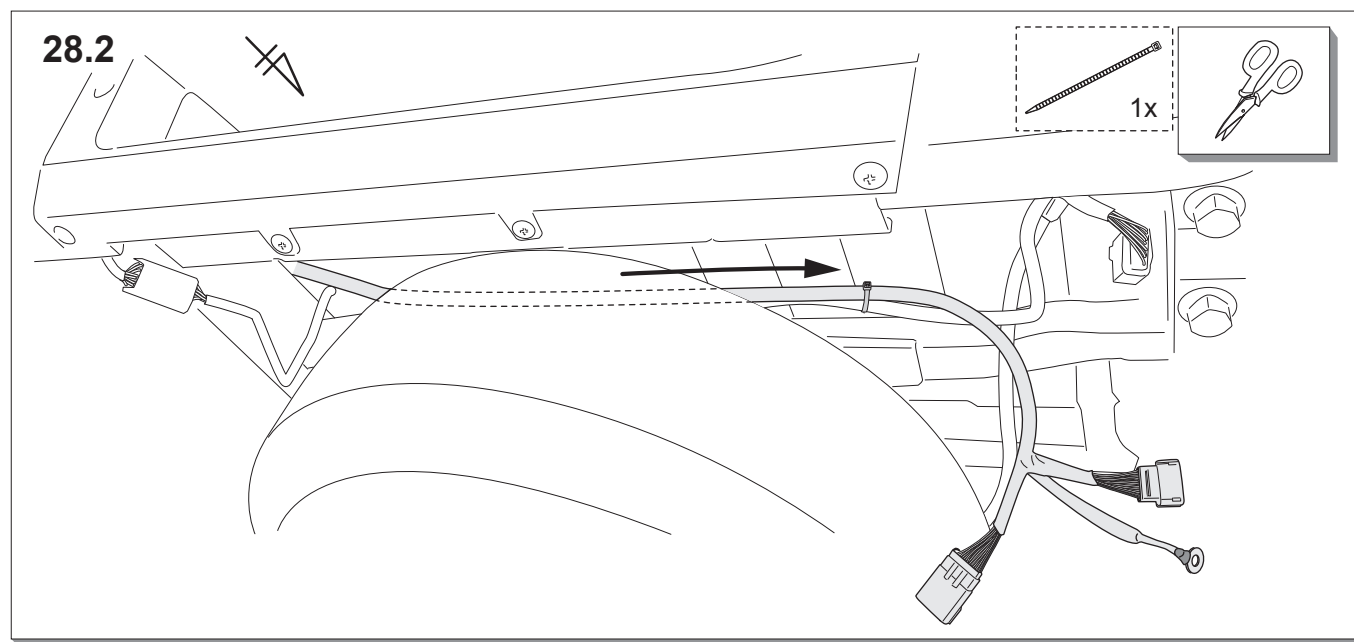


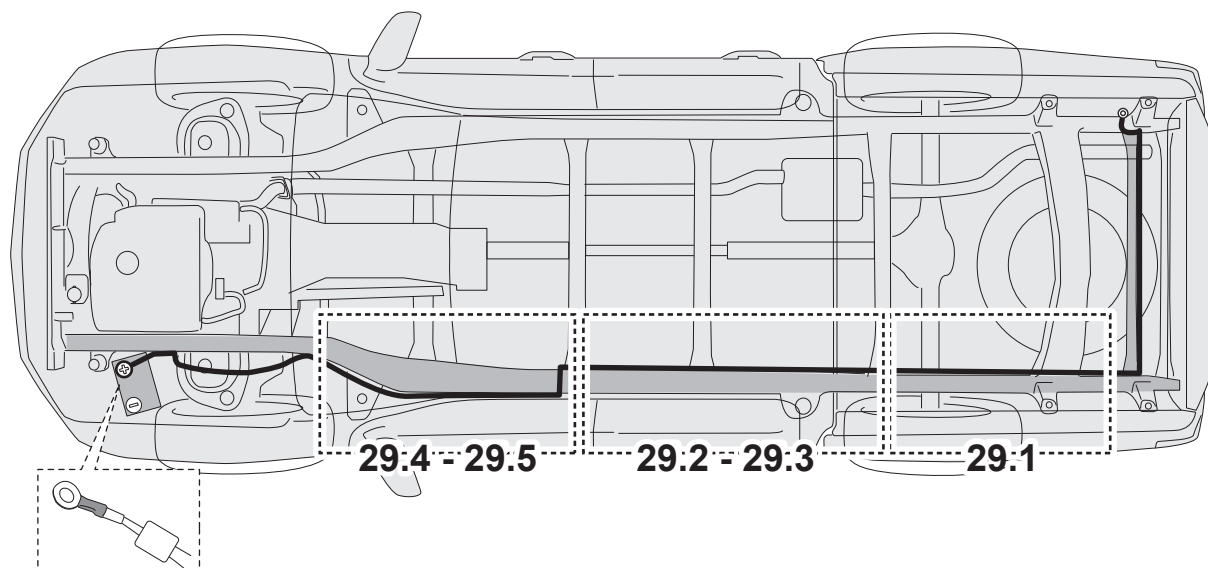



29.1

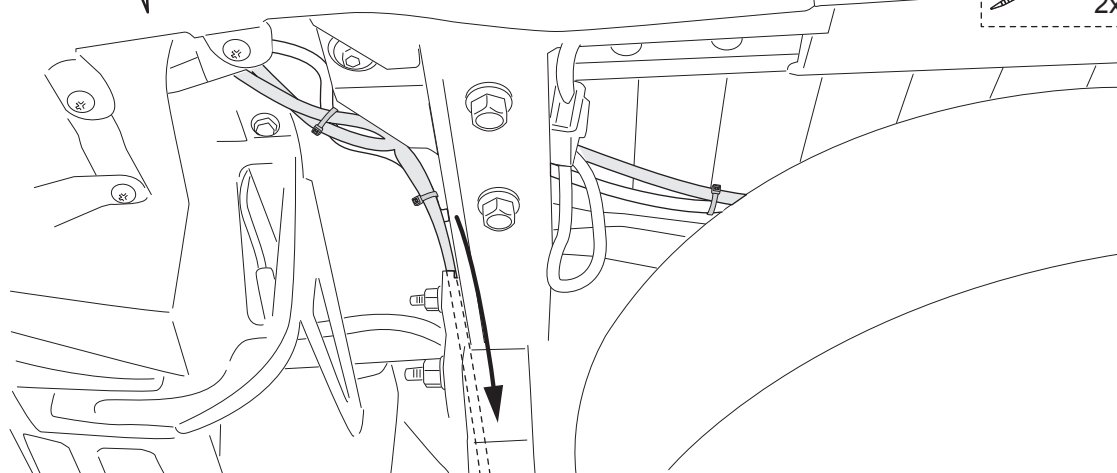



29.2

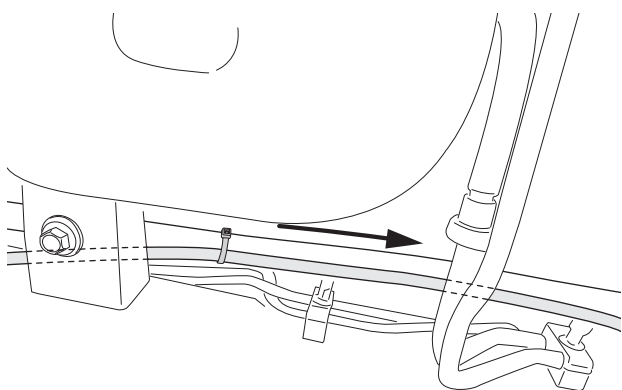




29.3

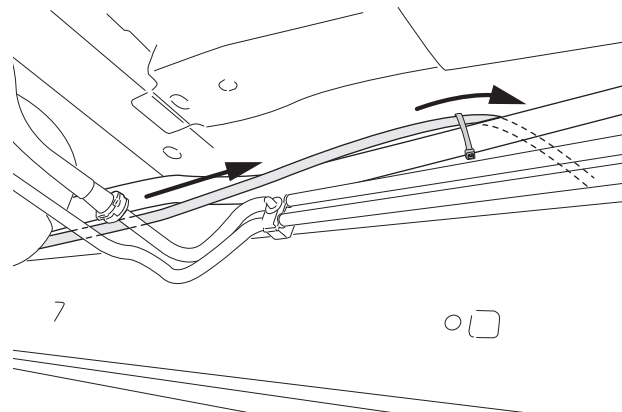

Instruction procedure

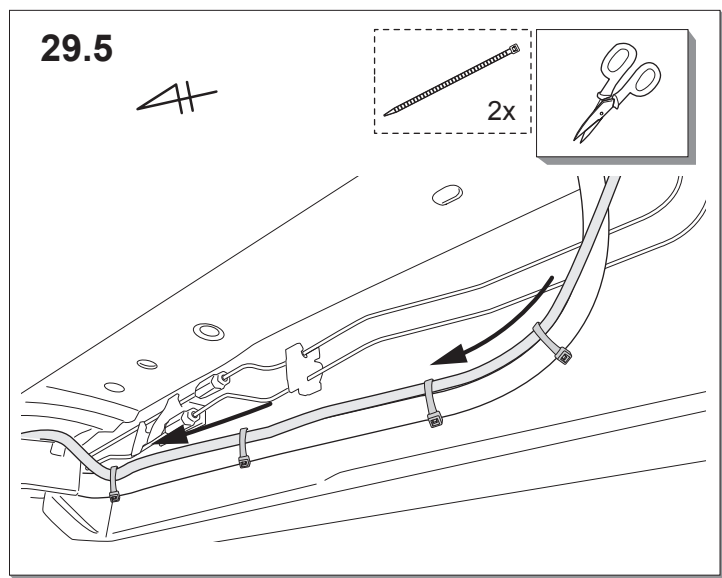
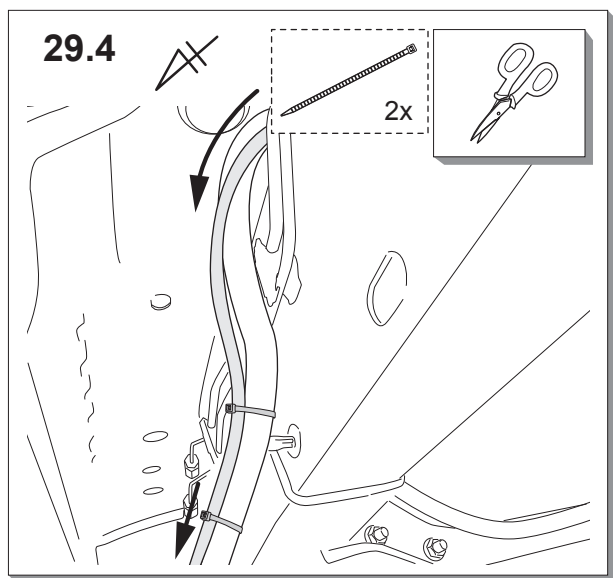


30

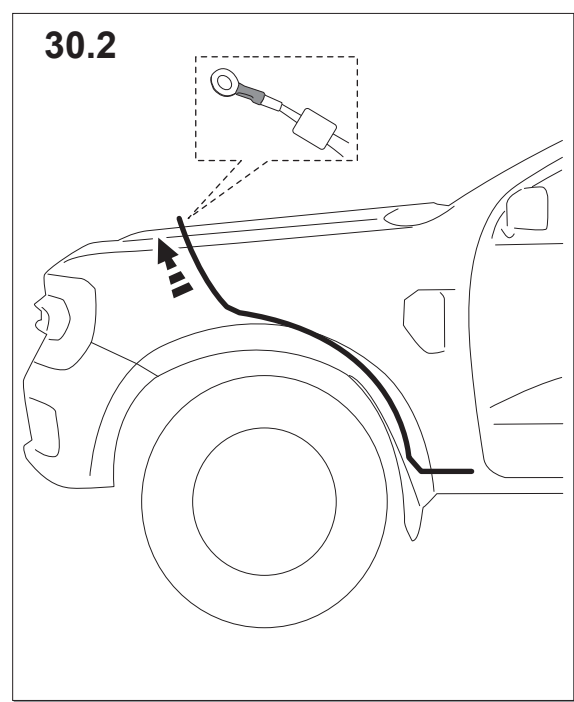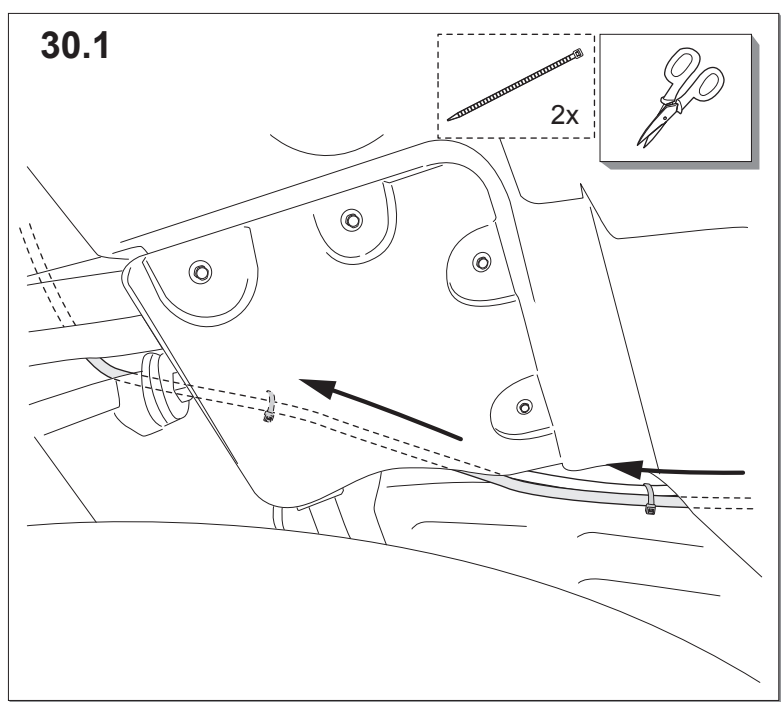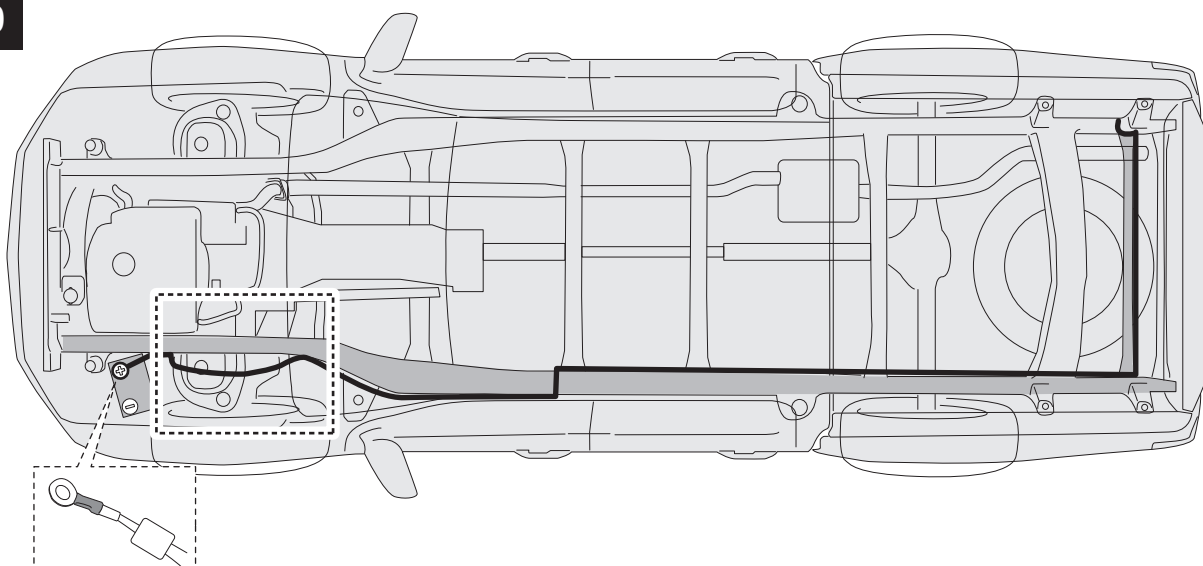


Instruction procedure


31

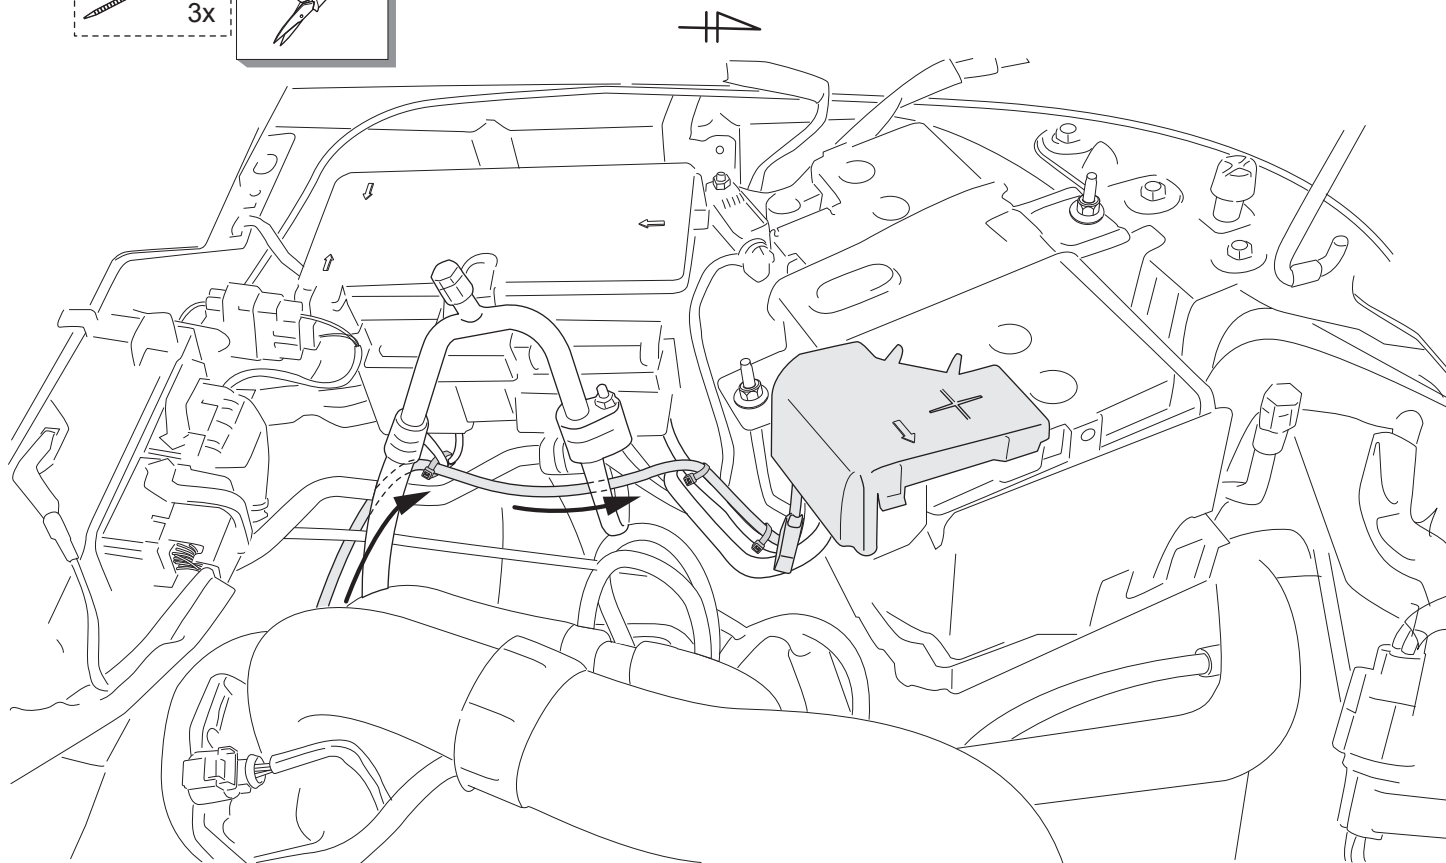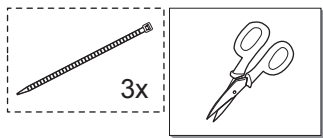


31.1

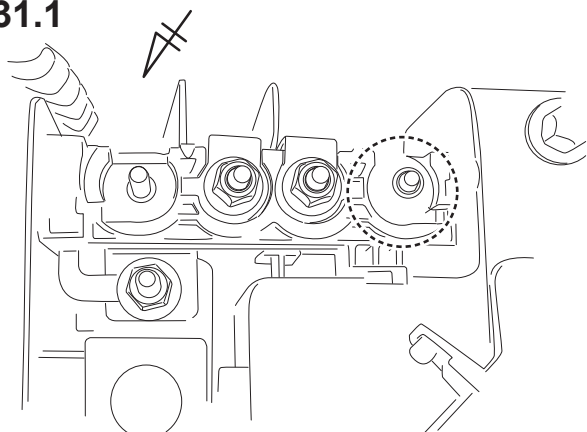

31.2

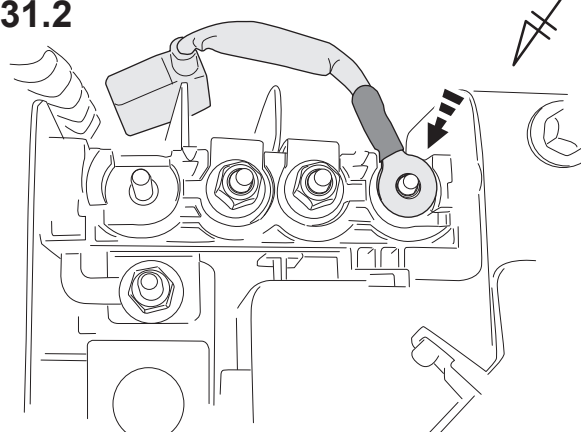


31.3

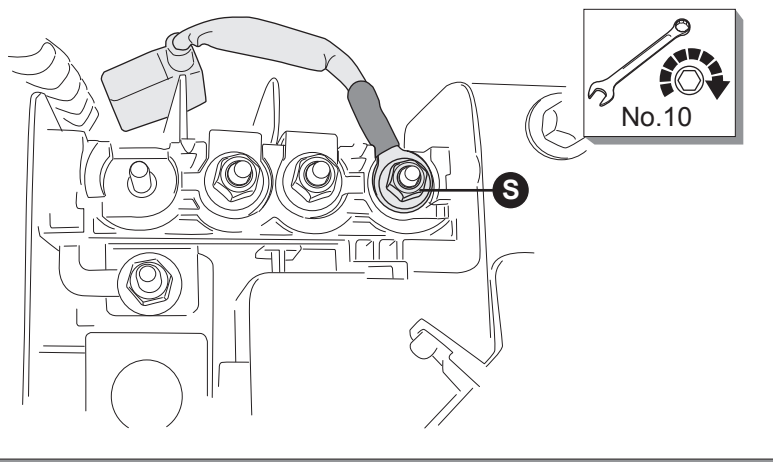


Instruction procedure

32

32.1

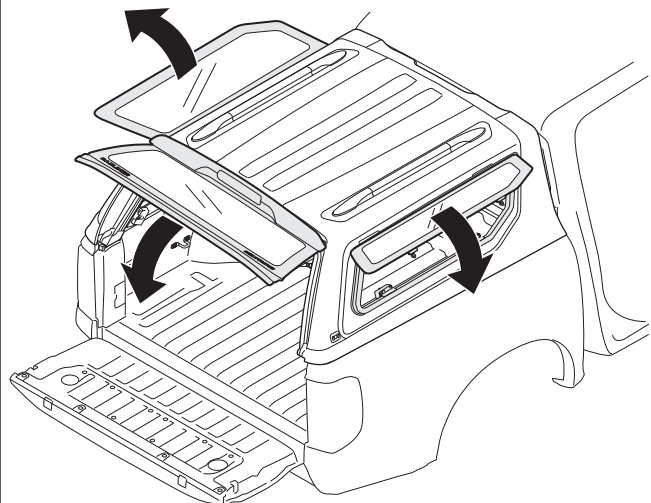


32.2

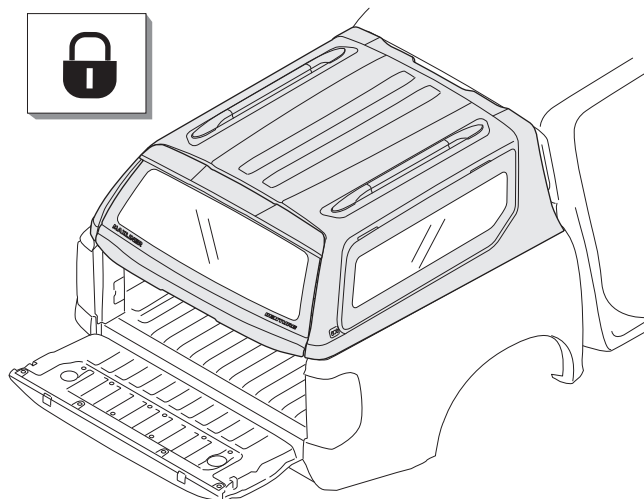


33


33.1

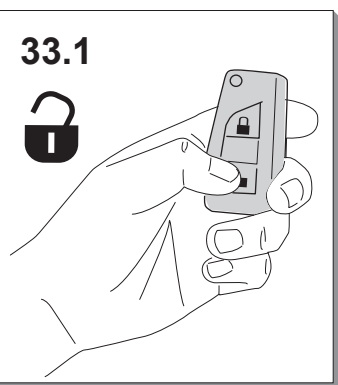


33.2

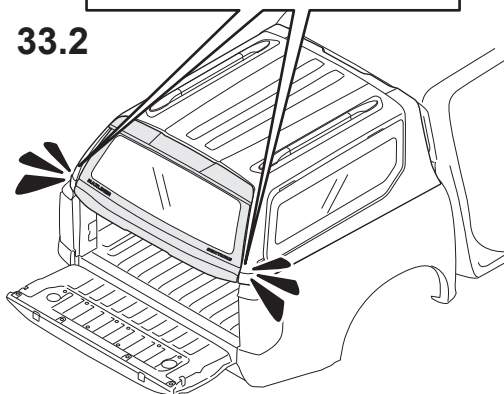


33.3

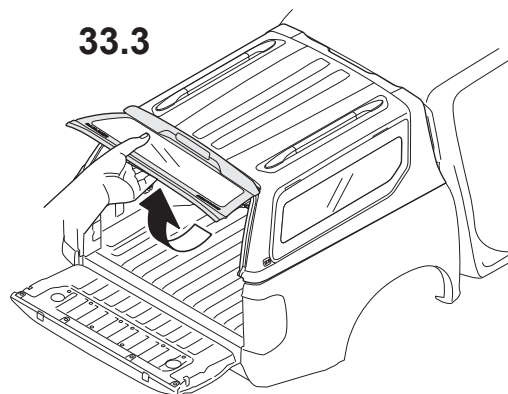

33.4

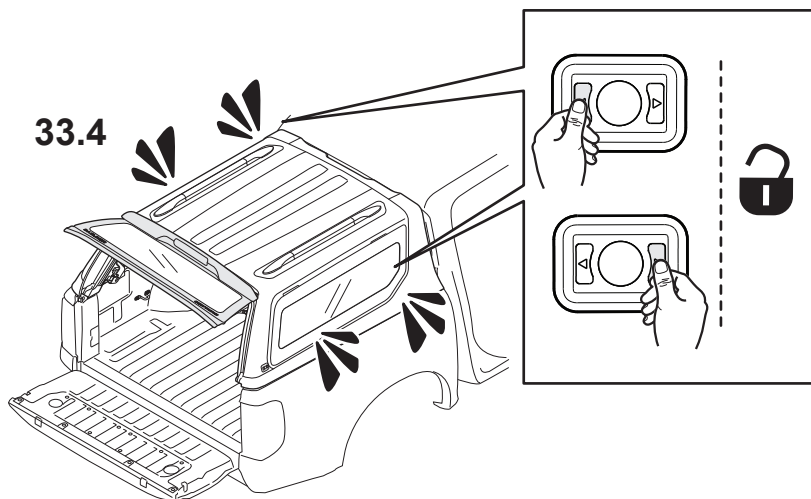


33.5

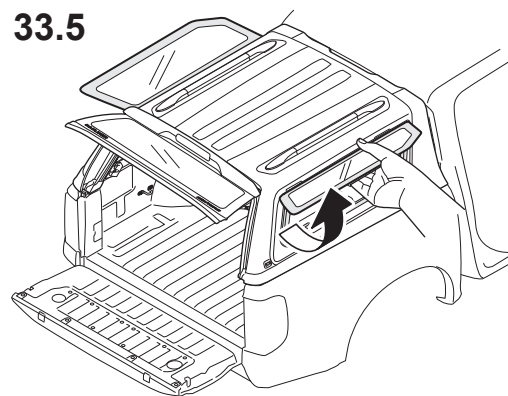


Instruction procedure

34

34.1

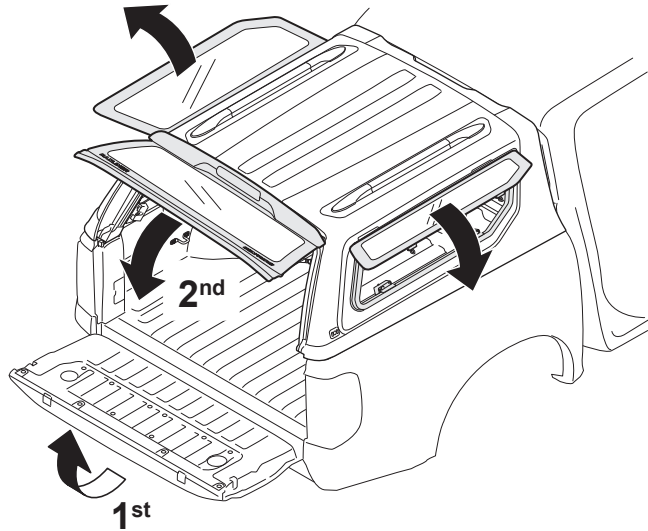





34.2

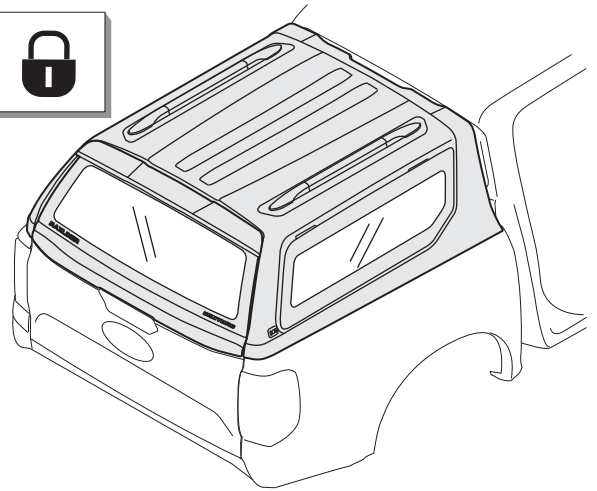



35



(20x)

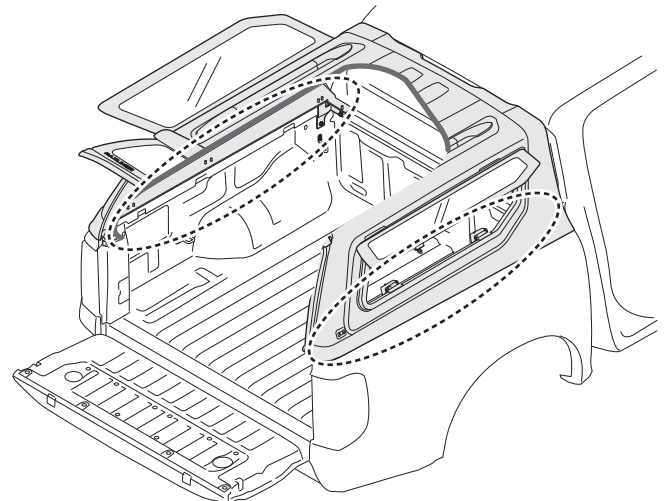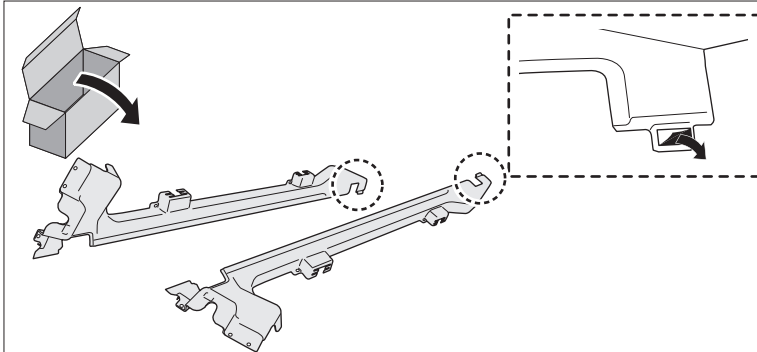
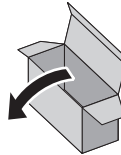
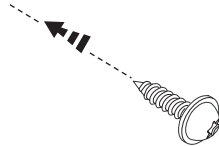


36

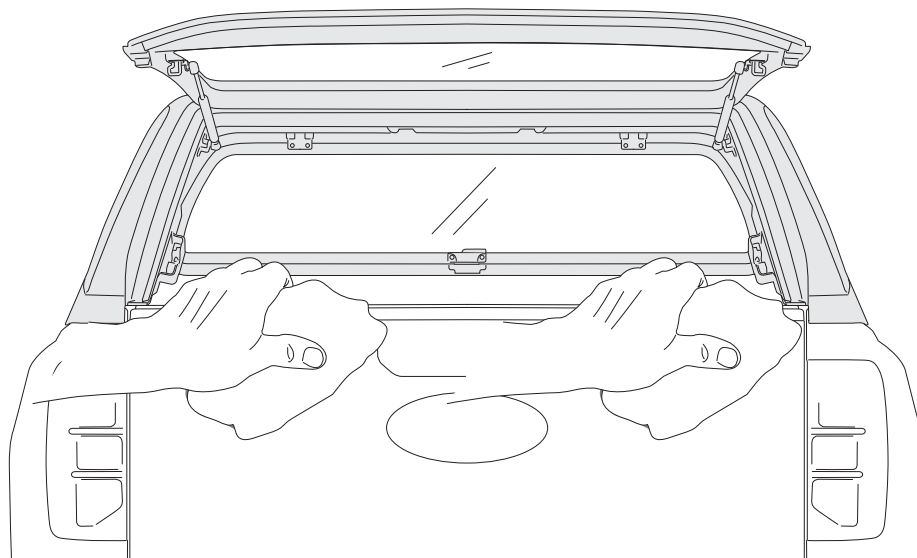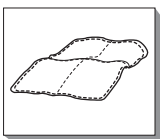


Instruction procedure





37

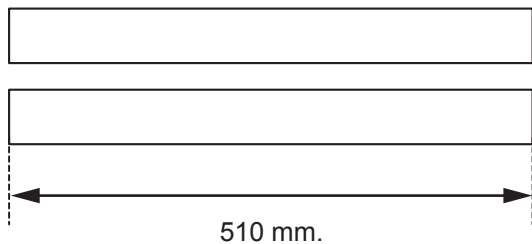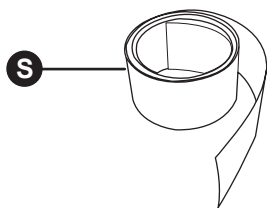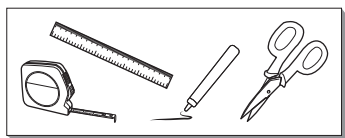




38

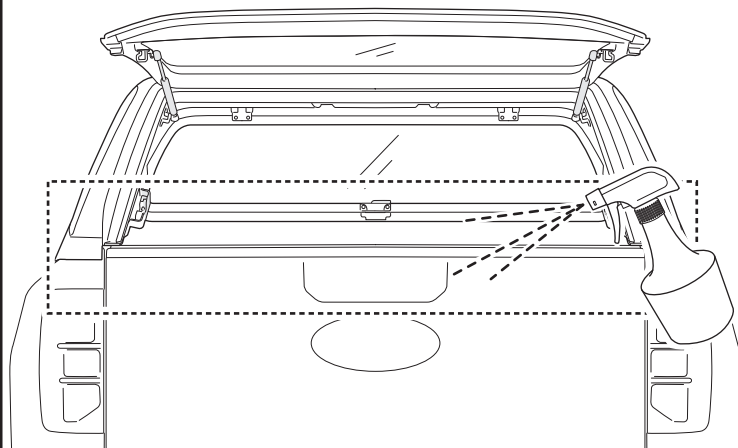



39

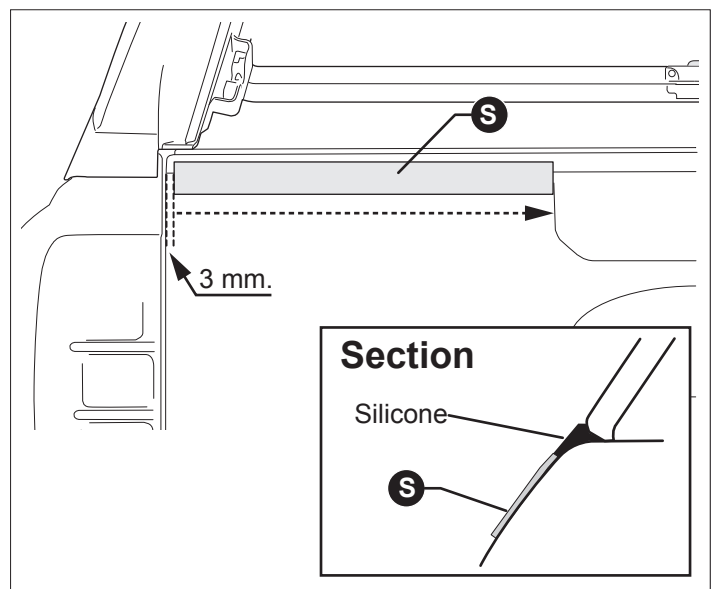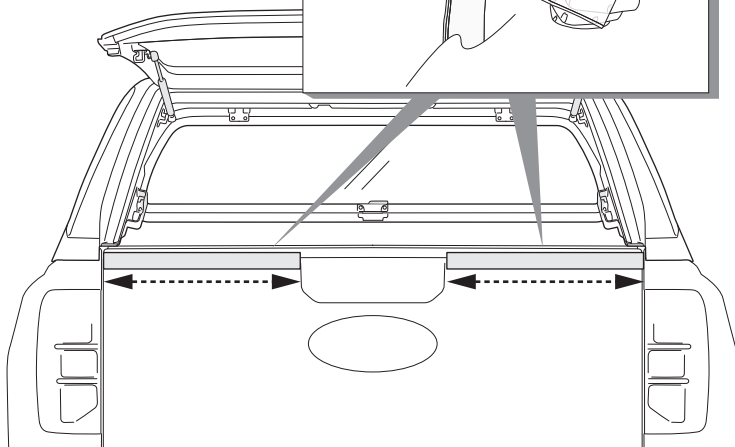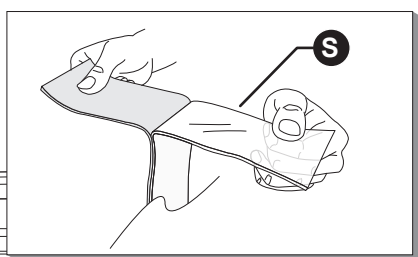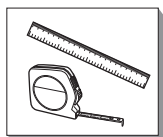

40

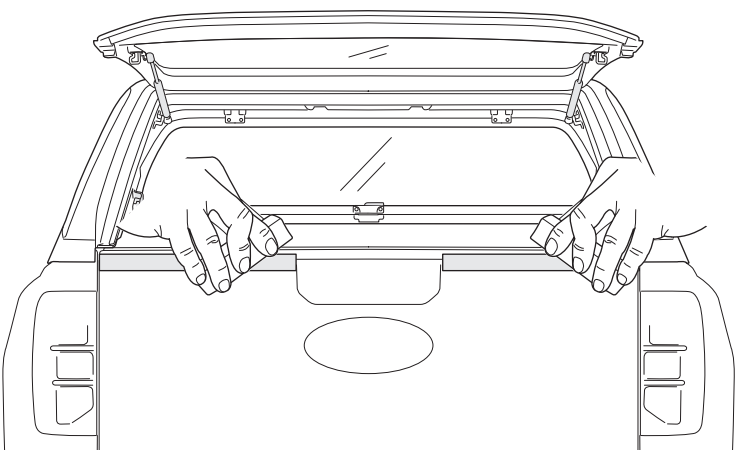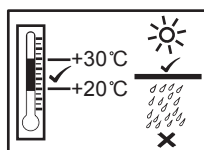
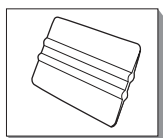


41

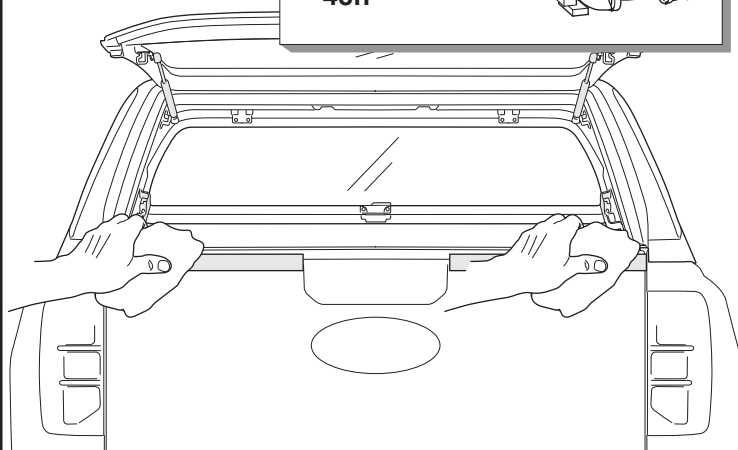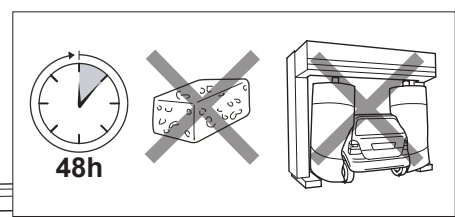



※ Adjustment

※ Latch & Striker rear

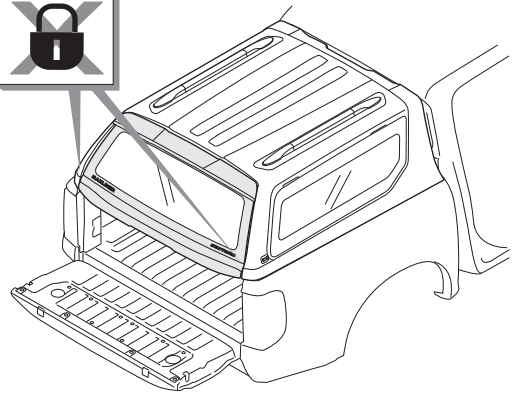
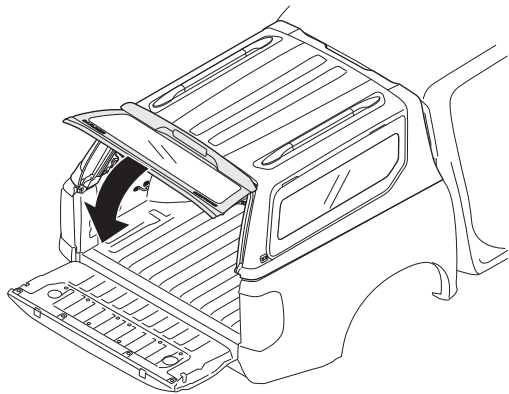


1.1



CASE 1 LH/RH

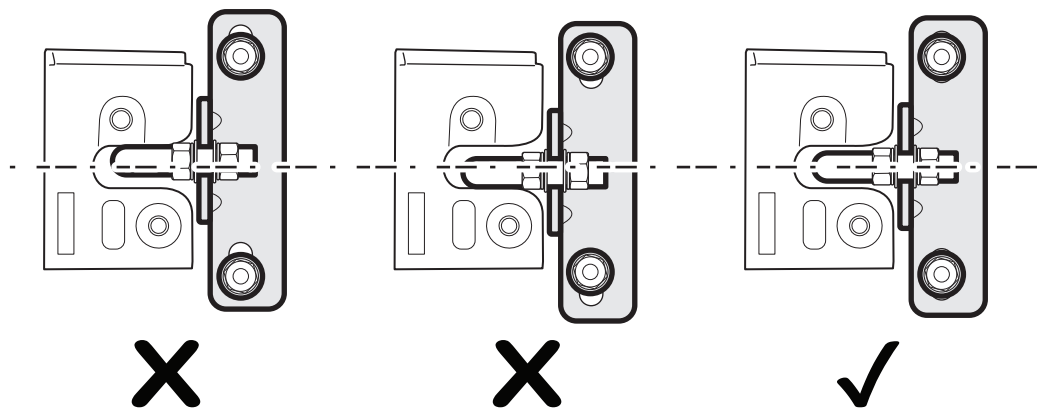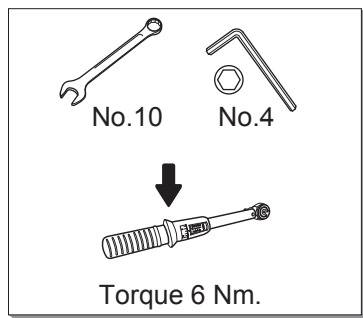


CASE 2 LH/RH

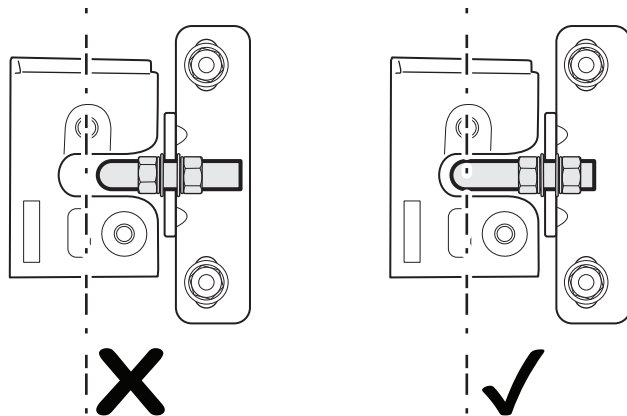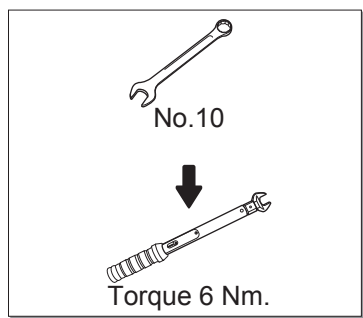


CASE 3 LH/RH

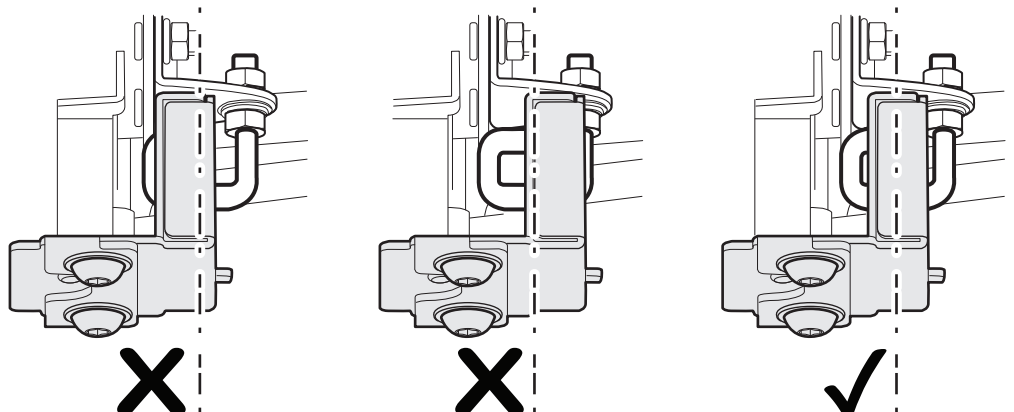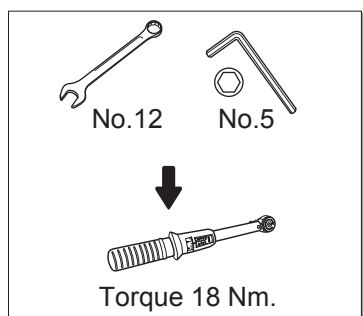



1.2

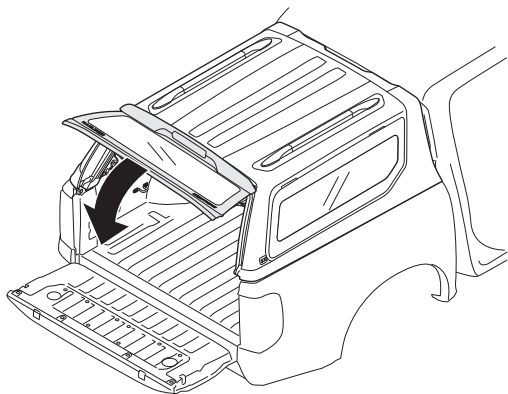


1.3

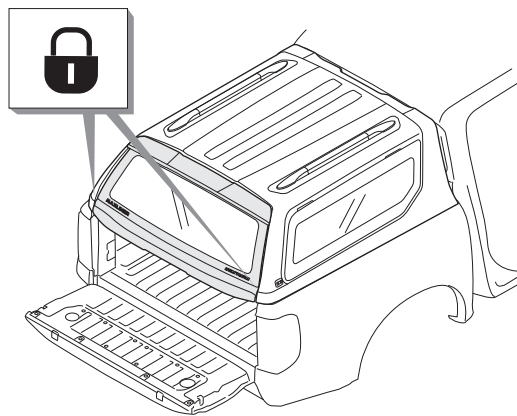

※ Latch & Striker side lift up




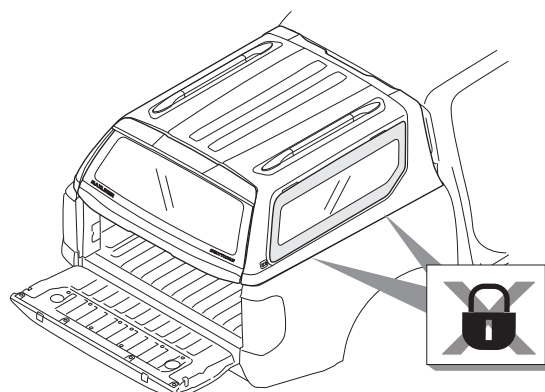
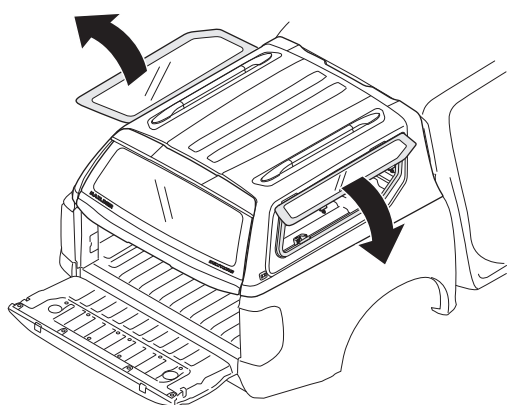


Latch & Striker side


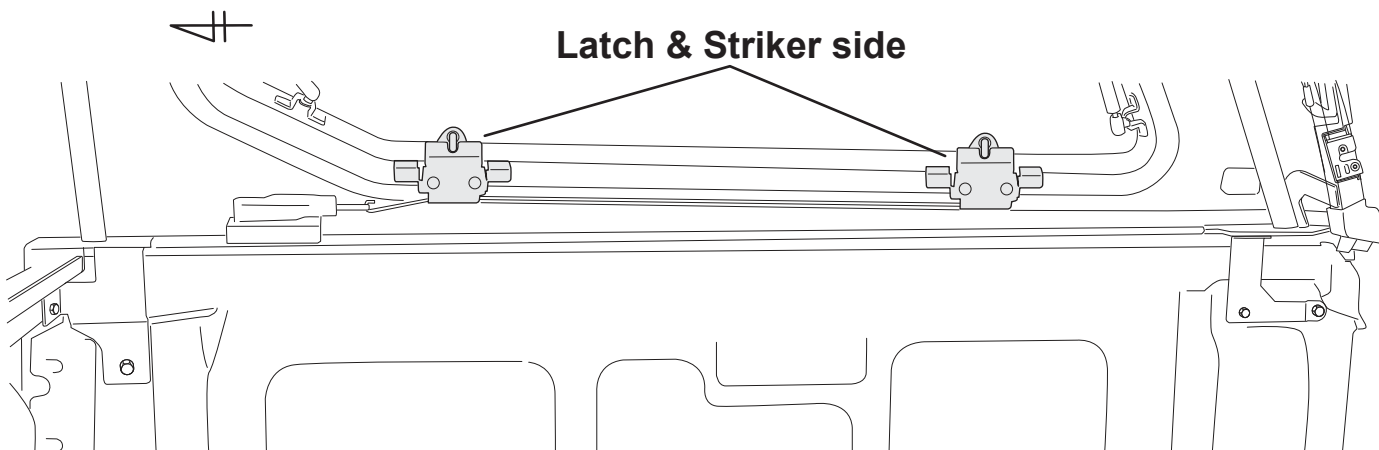


1.1

CASE 1 LH/RH

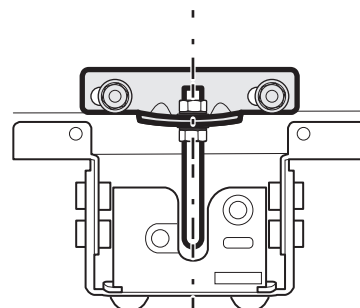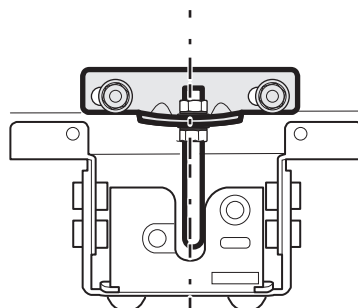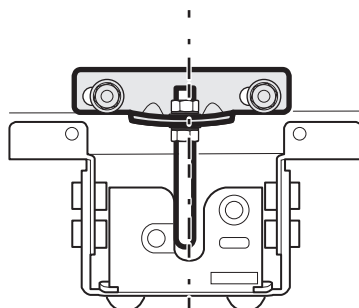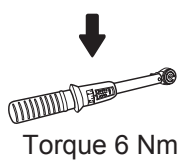
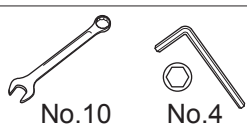


CASE 2 LH/RH

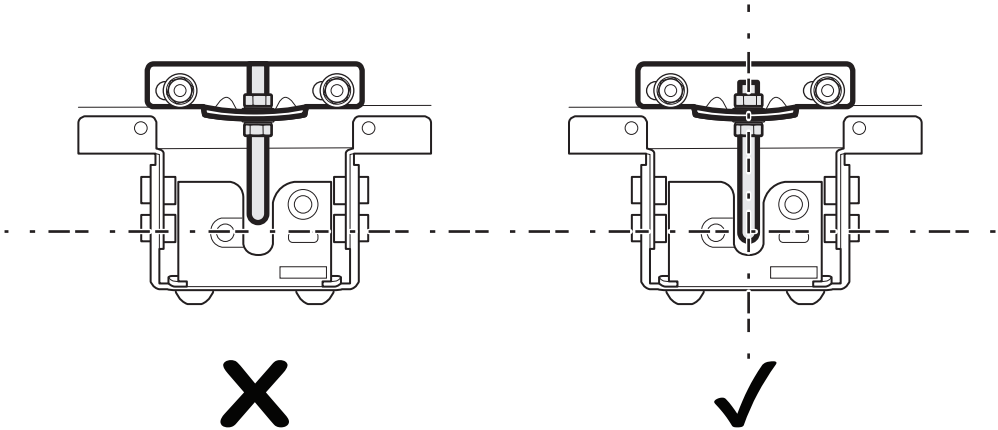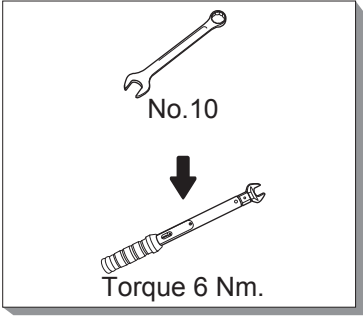


※ Latch & Striker side

CASE 3 LH/RH

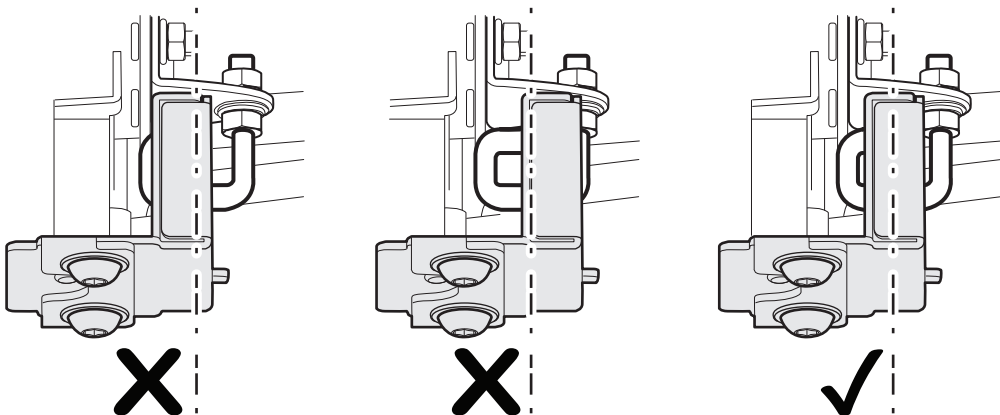
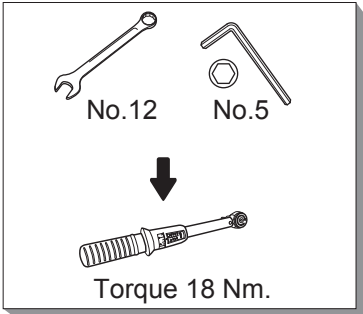


※ Latch & Striker side slide in lift up



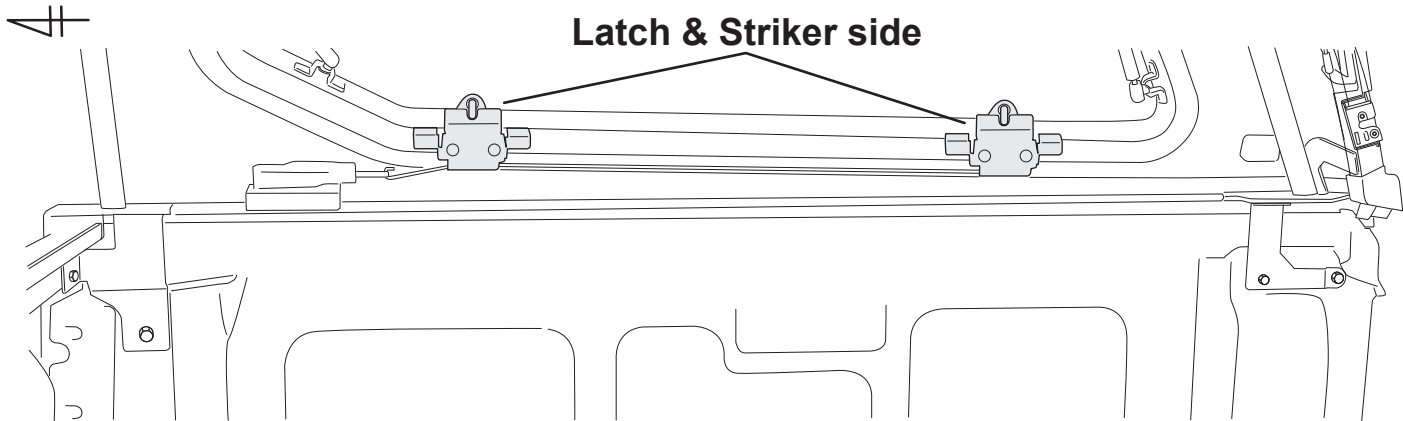


1.1

CASE 1 LH/RH



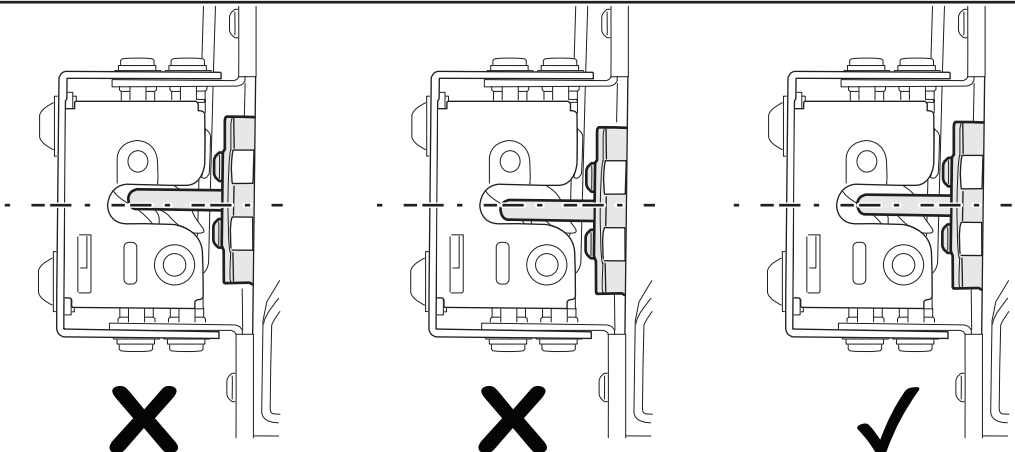
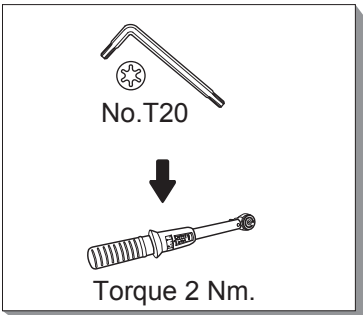


CASE 2 LH/RH

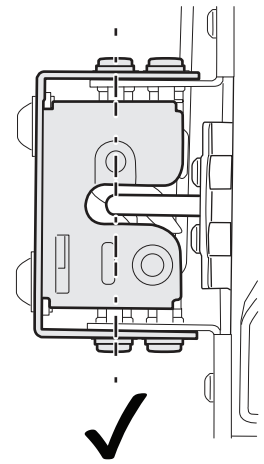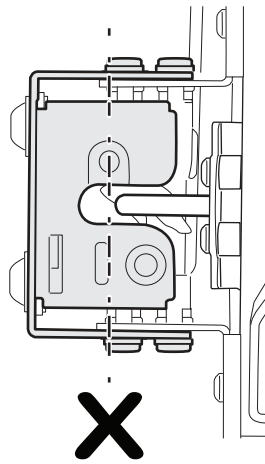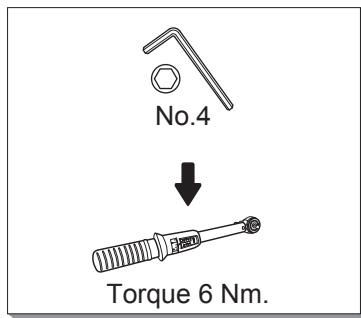


※ Latch & Striker side slide in lift up


CASE 3 LH/RH

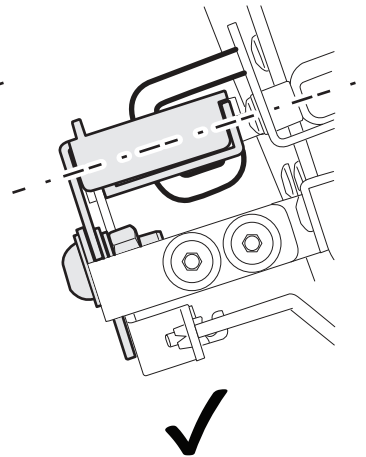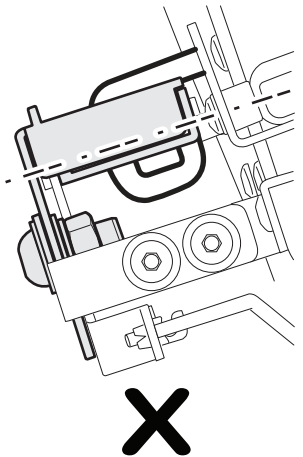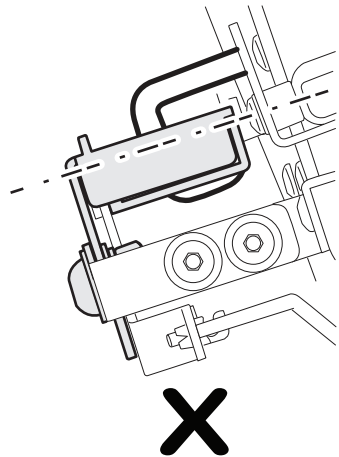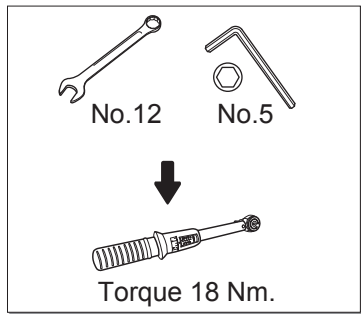




1.2

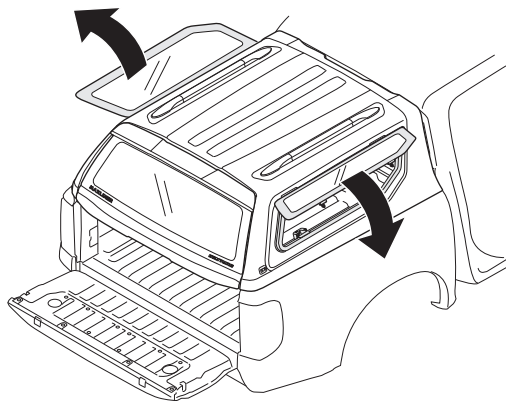


1.3

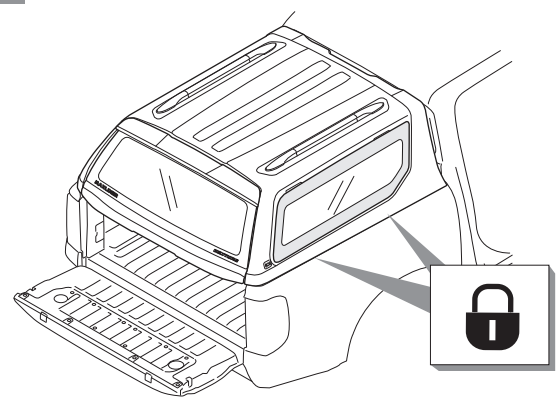


※ Sling rear

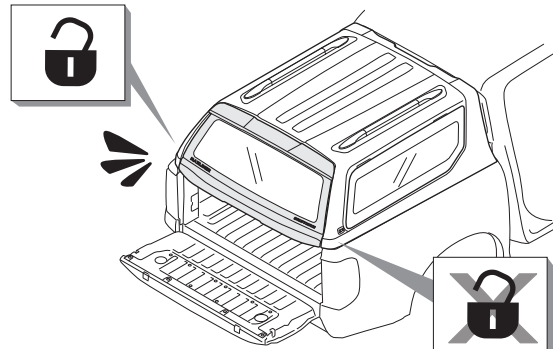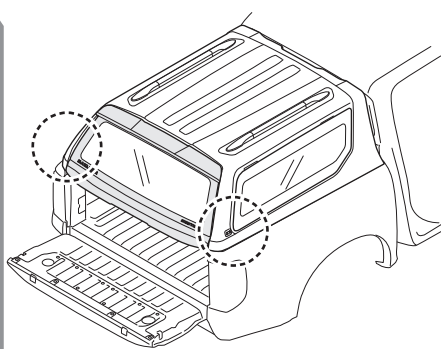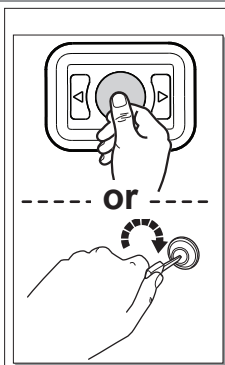

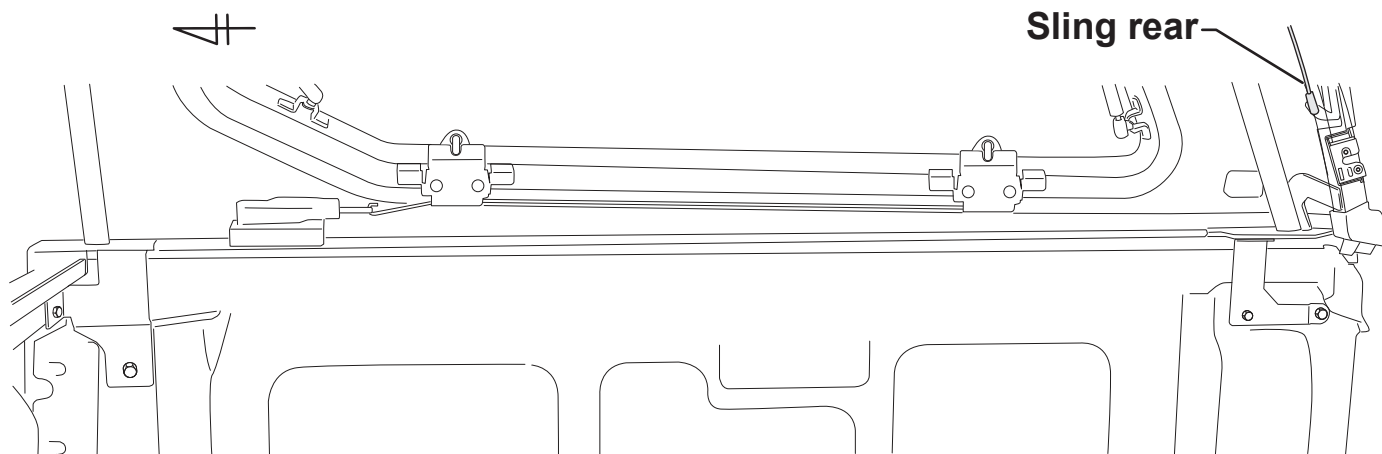


※ Sling rear



1.1

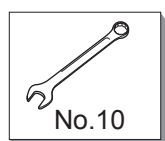


1x-3x

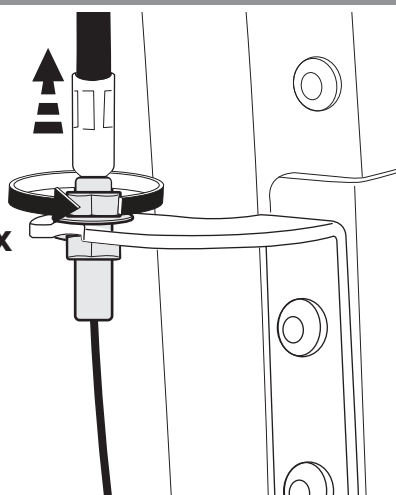


1.2

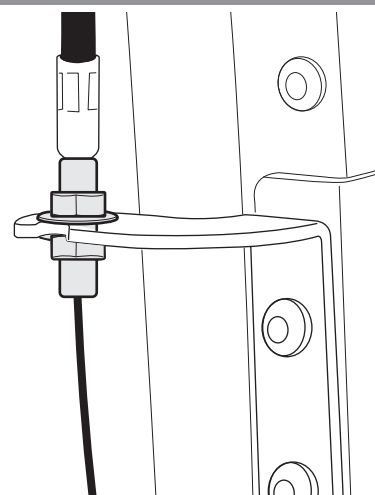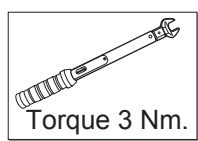



1.3

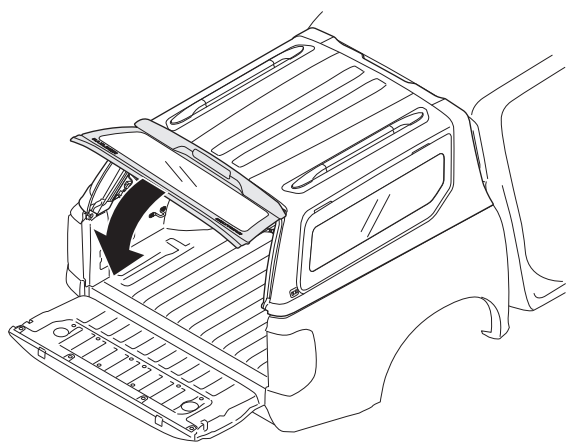




1.4

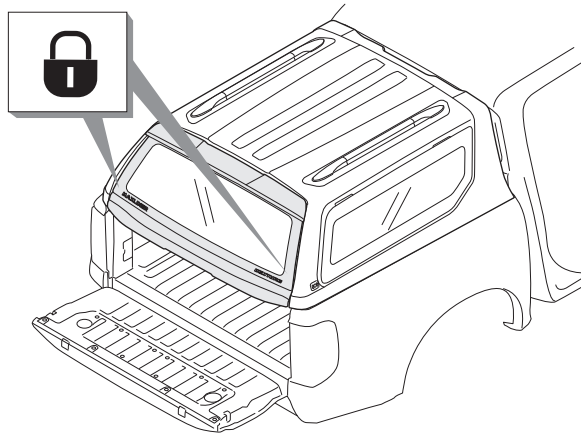



1.5

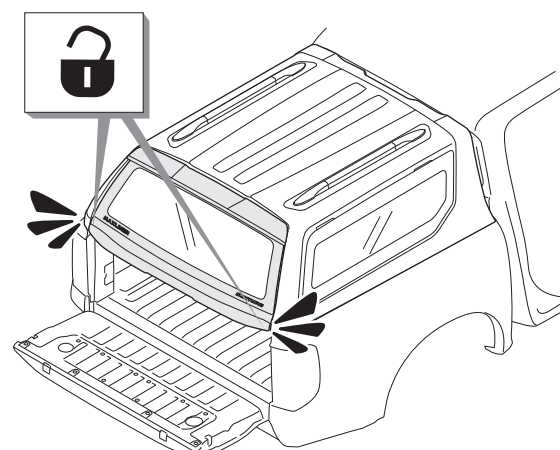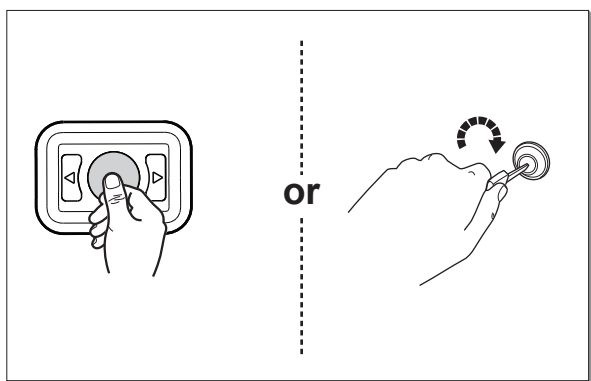


※ Side rod

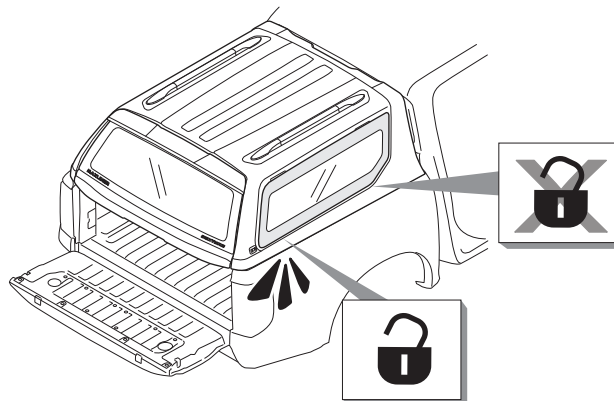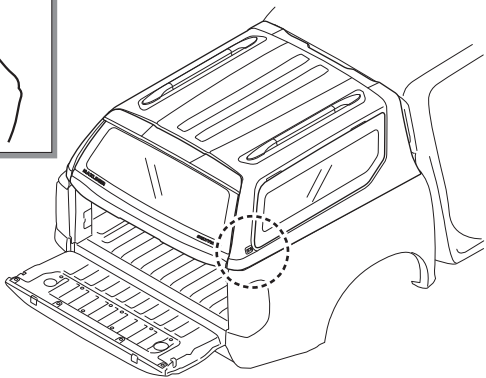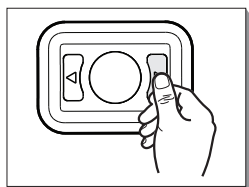


1.1

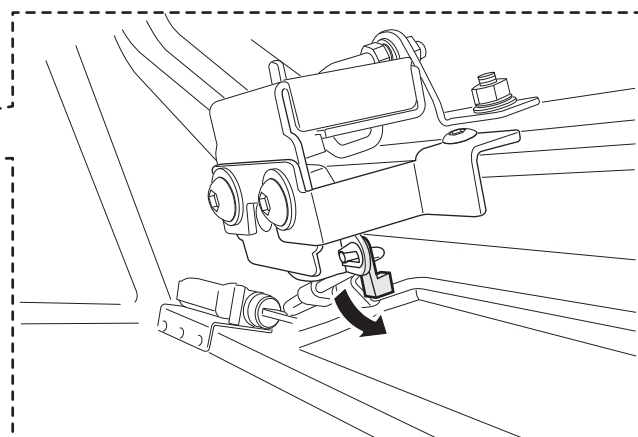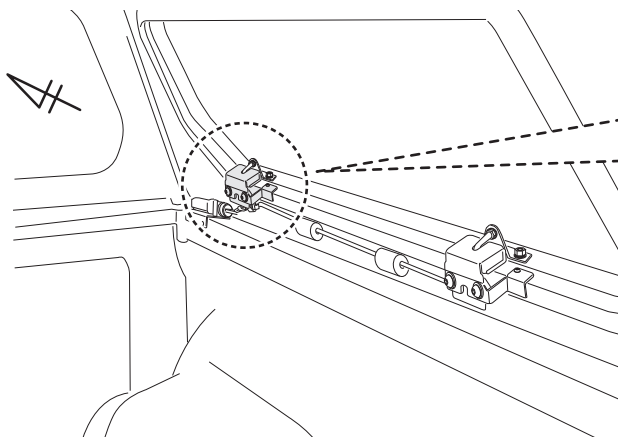


1.2

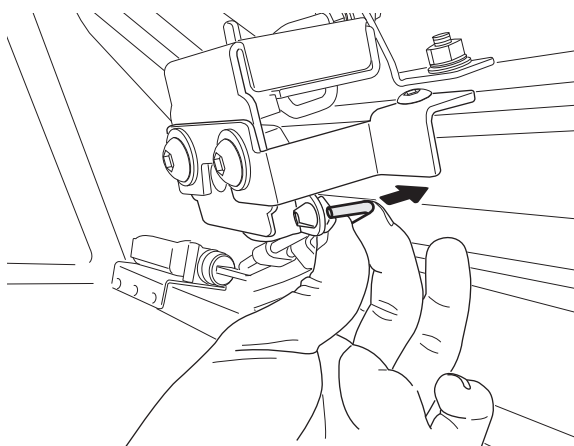


1.3

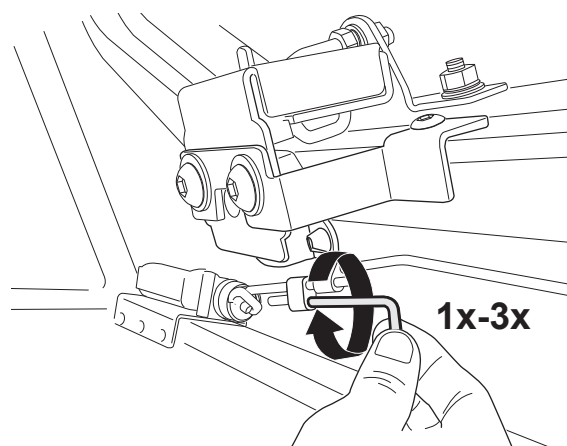

1.4


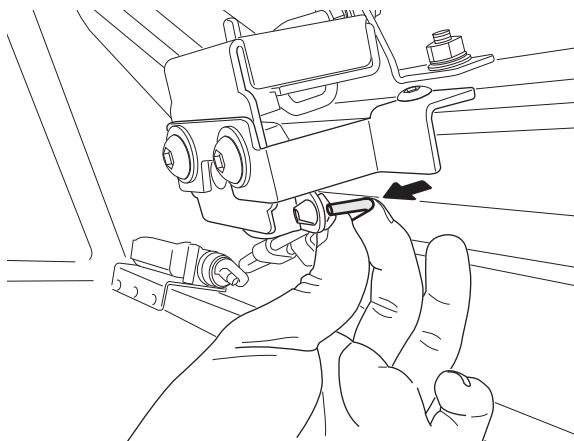


1.5

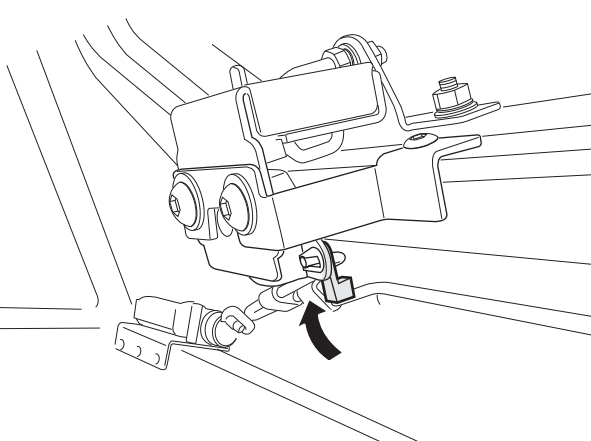


※ Side rod


1.6

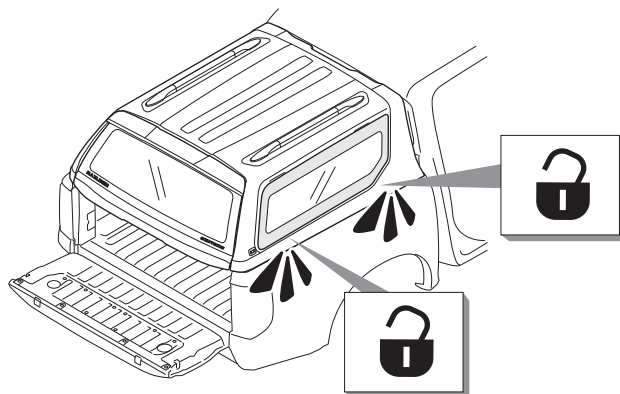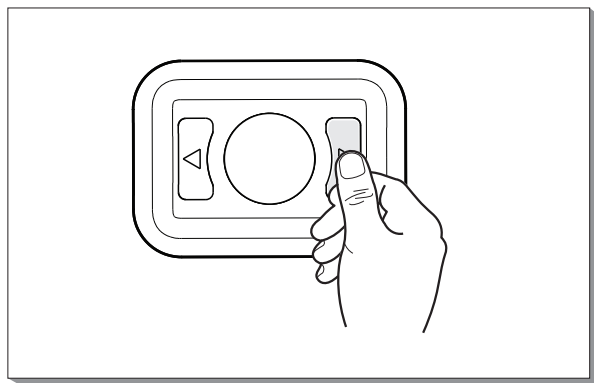



3 LH/RH

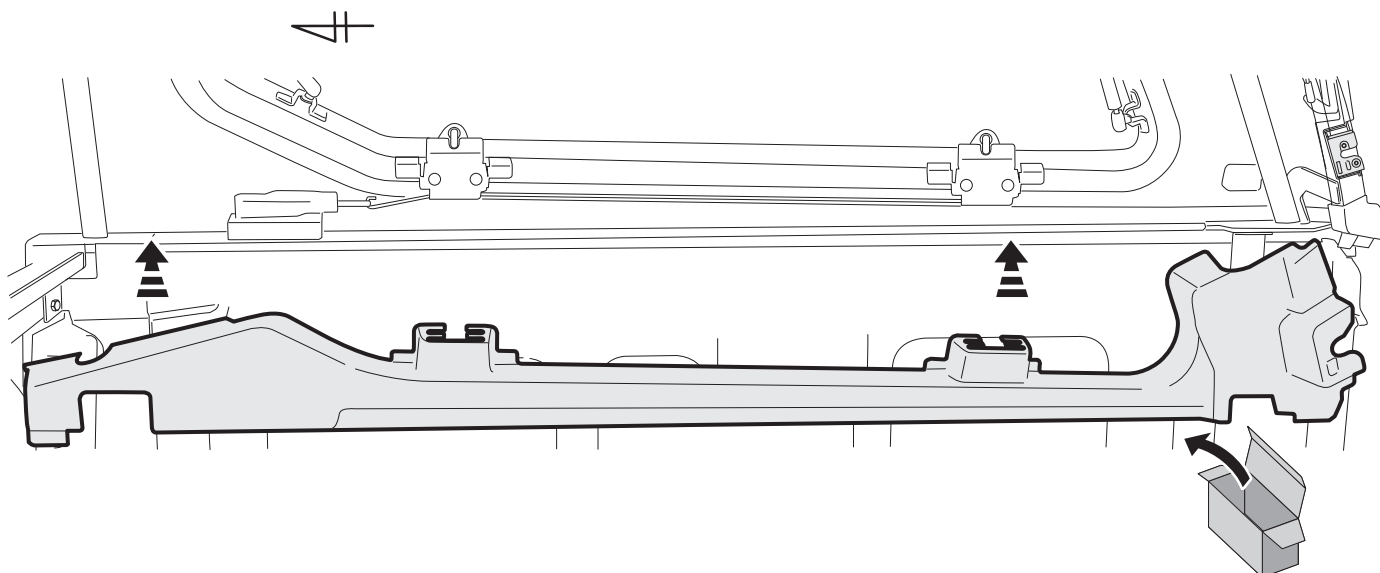



4 LH/RH

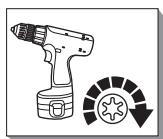




(20x)

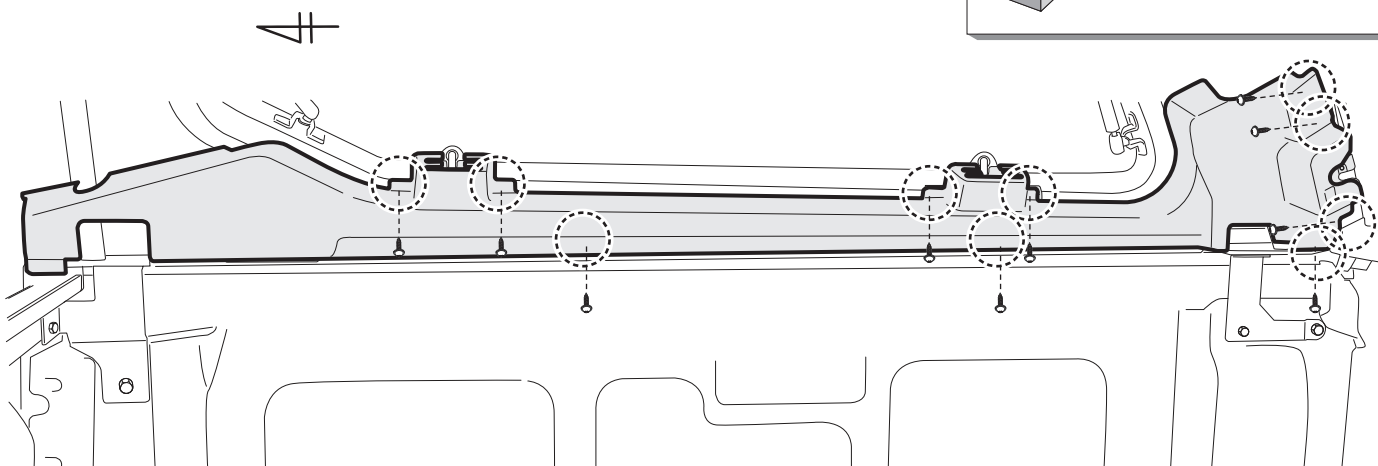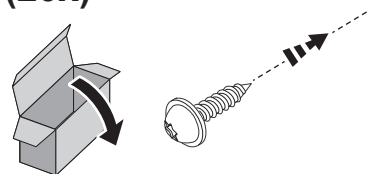



※ Release inside

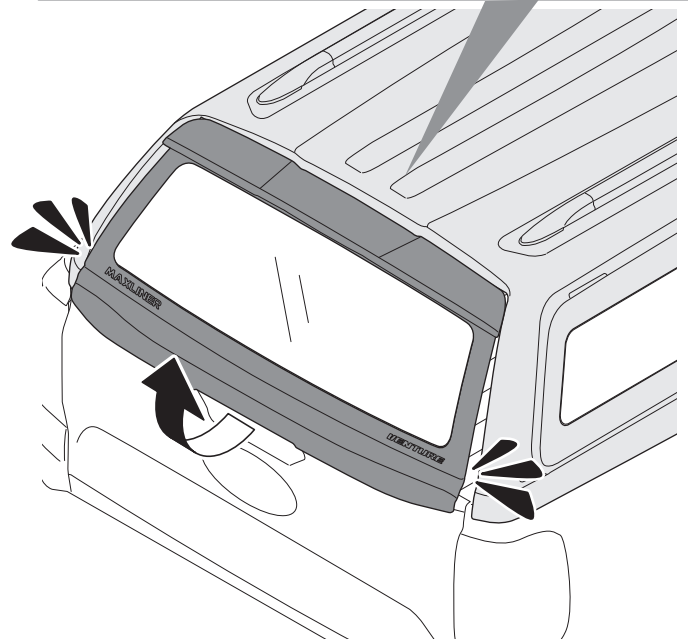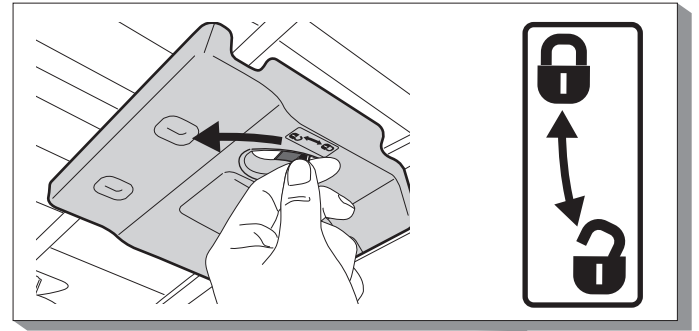



※ Front window guidelines

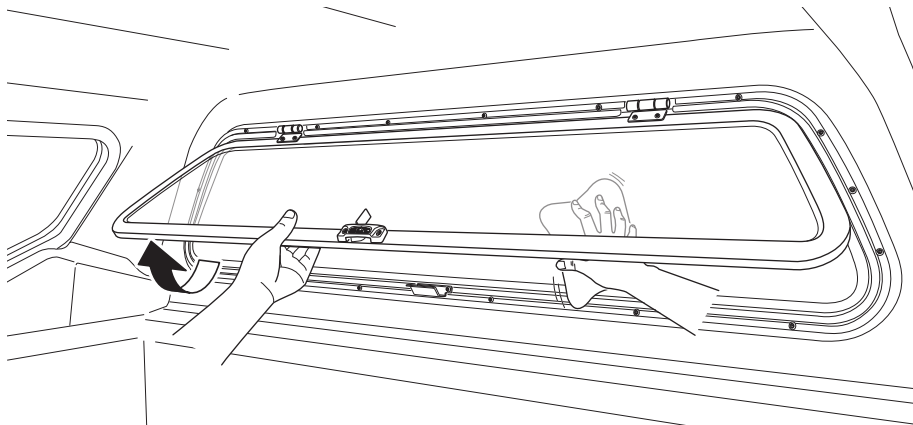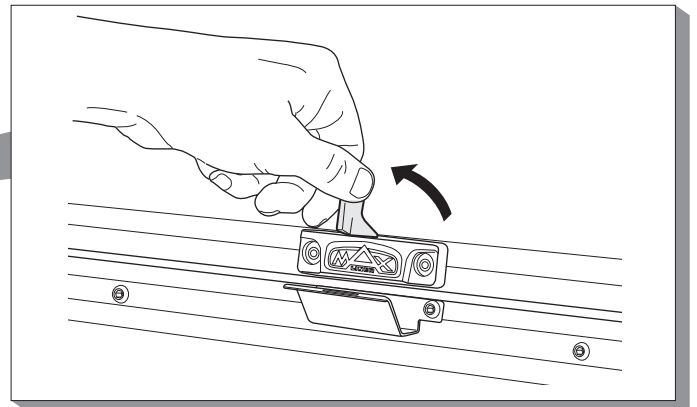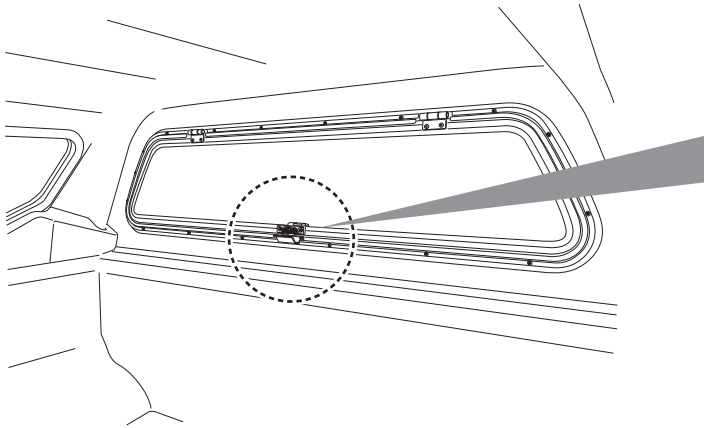



※ Front window guidelines

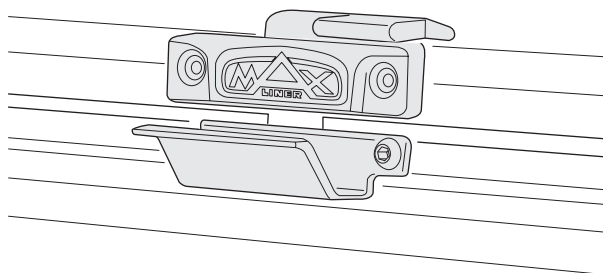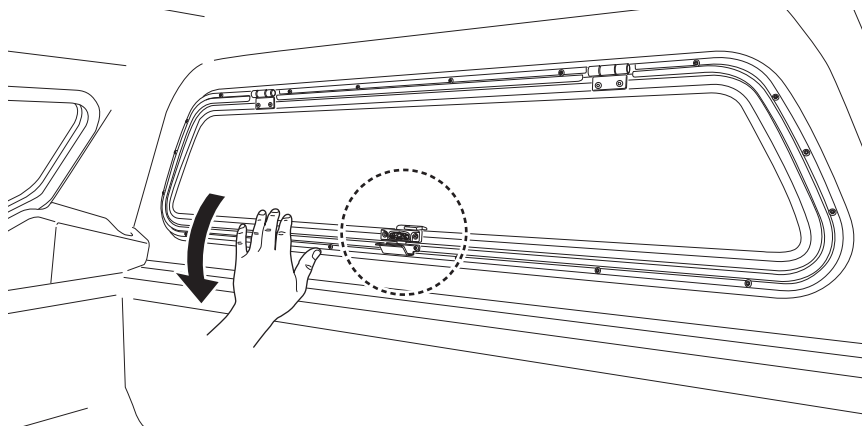


or

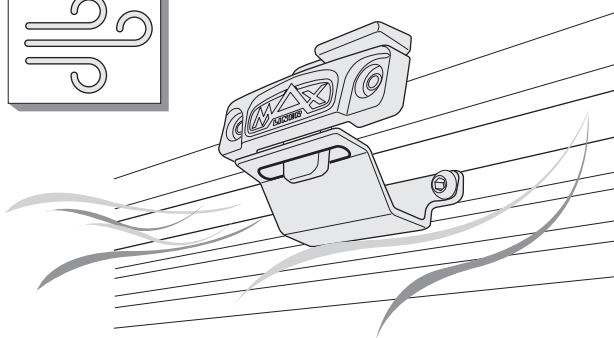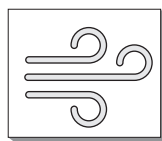

LOW

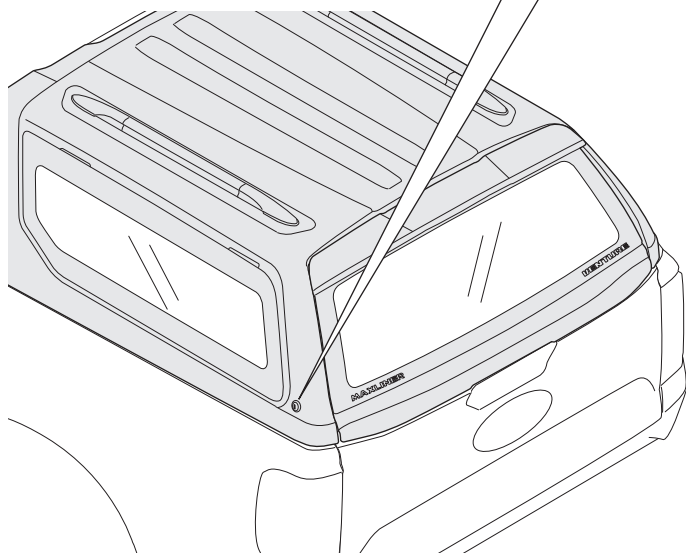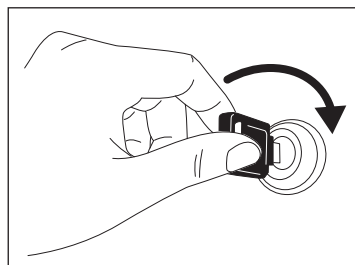

1st

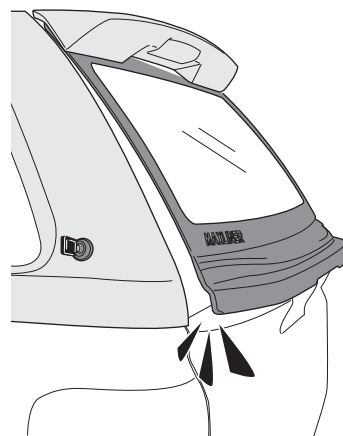

2nd

